

**TDC Patch Panel to Caen C207 Discriminator/Level Translator Map**

Example: PP6-01/LT1-01 is read as "Patch Panel 6 (PP6), channel 01 maps to Level translator module 1, channel 01"

PP6-01 LT1-01	PP6-17 LT2-01	PP6-33 LT3-01	PP6-49 LT4-01	PP7-01 LT5-01	PP7-17 LT6-01	PP7-33 LT7-01	PP7-49 LT8-01	PP8-01 LT9-01
PP6-02 LT1-02	PP6-18 LT2-02	PP6-34 LT3-02	PP6-50 LT4-02	PP7-02 LT5-02	PP7-18 LT6-02	PP7-34 LT7-02	PP7-50 LT8-02	PP8-02 LT9-02
PP6-03 LT1-03	PP6-19 LT2-03	PP6-35 LT3-03	PP6-51 LT4-03	PP7-03 LT5-03	PP7-19 LT6-03	PP7-35 LT7-03	PP7-51 LT8-03	PP8-03 LT9-03
PP6-04 LT1-04	PP6-20 LT2-04	PP6-36 LT3-04	PP6-52 LT4-04	PP7-04 LT5-04	PP7-20 LT6-04	PP7-36 LT7-04	PP7-52 LT8-04	PP8-04 LT9-04
PP6-05 LT1-05	PP6-21 LT2-05	PP6-37 LT3-05	PP6-53 LT4-05	PP7-05 LT5-05	PP7-21 LT6-05	PP7-37 LT7-05	PP7-53 LT8-05	PP8-05 LT9-05
PP6-06 LT1-06	PP6-22 LT2-06	PP6-38 LT3-06	PP6-54 LT4-06	PP7-06 LT5-06	PP7-22 LT6-06	PP7-38 LT7-06	PP7-54 LT8-06	PP8-06 LT9-06
PP6-07 LT1-07	PP6-23 LT2-07	PP6-39 LT3-07	PP6-55 LT4-07	PP7-07 LT5-07	PP7-23 LT6-07	PP7-39 LT7-07	PP7-55 LT8-07	PP8-07 LT9-07
PP6-08 LT1-08	PP6-24 LT2-08	PP6-40 LT3-08	PP6-56 LT4-08	PP7-08 LT5-08	PP7-24 LT6-08	PP7-40 LT7-08	PP7-56 LT8-08	PP8-08 LT9-08
PP6-09 LT1-09	PP6-25 LT2-09	PP6-41 LT3-09	PP6-57 LT4-09	PP7-09 LT5-09	PP7-25 LT6-09	PP7-41 LT7-09	PP7-57 LT8-09	PP8-09 LT9-09
PP6-10 LT1-10	PP6-26 LT2-10	PP6-42 LT3-10	PP6-58 LT4-10	PP7-10 LT5-10	PP7-26 LT6-10	PP7-42 LT7-10	PP7-58 LT8-10	PP8-10 LT9-10
PP6-11 LT1-11	PP6-27 LT2-11	PP6-43 LT3-11	PP6-59 LT4-11	PP7-11 LT5-11	PP7-27 LT6-11	PP7-43 LT7-11	PP7-59 LT8-11	PP8-11 LT9-11
PP6-12 LT1-12	PP6-28 LT2-12	PP6-44 LT3-12	PP6-60 LT4-12	PP7-12 LT5-12	PP7-28 LT6-12	PP7-44 LT7-12	PP7-60 LT8-12	PP8-12 LT9-12
PP6-13 LT1-13	PP6-29 LT2-13	PP6-45 LT3-13	PP6-61 LT4-13	PP7-13 LT5-13	PP7-29 LT6-13	PP7-45 LT7-13	PP7-61 LT8-13	PP8-13 LT9-13
PP6-14 LT1-14	PP6-30 LT2-14	PP6-46 LT3-14	PP6-62 LT4-14	PP7-14 LT5-14	PP7-30 LT6-14	PP7-46 LT7-14	PP7-62 LT8-14	PP8-14 LT9-14
PP6-15 LT1-15	PP6-31 LT2-15	PP6-47 LT3-15	PP6-63 LT4-15	PP7-15 LT5-15	PP7-31 LT6-15	PP7-47 LT7-15	PP7-63 LT8-15	PP8-15 LT9-15
PP6-16 LT1-16	PP6-32 LT2-16	PP6-48 LT3-16	PP6-64 LT4-16	PP7-16 LT5-16	PP7-32 LT6-16	PP7-48 LT7-16	PP7-64 LT8-16	PP8-16 LT9-16

**Example: PP8-17/LT10-01 is read as "Patch Panel 8 (PP8), channel 17 maps to Level translator module 10, channel 01"**

PP8-17 LT10-01	PP8-33 LT11-01	PP8-49 LT12-01	PP9-01 LT13-01	PP9-17 LT14-01	PP9-33 LT15-01	PP9-49 LT16-01	PP10-01 LT17-01	PP10-17 LT18-01
PP8-18 LT10-02	PP8-34 LT11-02	PP8-50 LT12-02	PP9-02 LT13-02	PP9-18 LT14-02	PP9-34 LT15-02	PP9-50 LT16-02	PP10-02 LT17-02	PP10-18 LT18-02
PP8-19 LT10-03	PP8-35 LT11-03	PP8-51 LT12-03	PP9-03 LT13-03	PP9-19 LT14-03	PP9-35 LT15-03	PP9-51 LT16-03	PP10-03 LT17-03	PP10-19 LT18-03
PP8-20 LT10-04	PP8-36 LT11-04	PP8-52 LT12-04	PP9-04 LT13-04	PP9-20 LT14-04	PP9-36 LT15-04	PP9-52 LT16-04	PP10-04 LT17-04	PP10-20 LT18-04
PP8-21 LT10-05	PP8-37 LT11-05	PP8-53 LT12-05	PP9-05 LT13-05	PP9-21 LT14-05	PP9-37 LT15-05	PP9-53 LT16-05	PP10-05 LT17-05	PP10-21 LT18-05
PP8-22 LT10-06	PP8-38 LT11-06	PP8-54 LT12-06	PP9-06 LT13-06	PP9-22 LT14-06	PP9-38 LT15-06	PP9-54 LT16-06	PP10-06 LT17-06	PP10-22 LT18-06
PP8-23 LT10-07	PP8-39 LT11-07	PP8-55 LT12-07	PP9-07 LT13-07	PP9-23 LT14-07	PP9-39 LT15-07	PP9-55 LT16-07	PP10-07 LT17-07	PP10-23 LT18-07
PP8-24 LT10-08	PP8-40 LT11-08	PP8-56 LT12-08	PP9-08 LT13-08	PP9-24 LT14-08	PP9-40 LT15-08	PP9-56 LT16-08	PP10-08 LT17-08	PP10-24 LT18-08
PP8-25 LT10-09	PP8-41 LT11-09	PP8-57 LT12-09	PP9-09 LT13-09	PP9-25 LT14-09	PP9-41 LT15-09	PP9-57 LT16-09	PP10-09 LT17-09	PP10-25 LT18-09
PP8-26 LT10-10	PP8-42 LT11-10	PP8-58 LT12-10	PP9-10 LT13-10	PP9-26 LT14-10	PP9-42 LT15-10	PP9-58 LT16-10	PP10-10 LT17-10	PP10-26 LT18-10
PP8-27 LT10-11	PP8-43 LT11-11	PP8-59 LT12-11	PP9-11 LT13-11	PP9-27 LT14-11	PP9-43 LT15-11	PP9-59 LT16-11	PP10-11 LT17-11	PP10-27 LT18-11
PP8-28 LT10-12	PP8-44 LT11-12	PP8-60 LT12-12	PP9-12 LT13-12	PP9-28 LT14-12	PP9-44 LT15-12	PP9-60 LT16-12	PP10-12 LT17-12	PP10-28 LT18-12
PP8-29 LT10-13	PP8-45 LT11-13	PP8-61 LT12-13	PP9-13 LT13-13	PP9-29 LT14-13	PP9-45 LT15-13	PP9-61 LT16-13	PP10-13 LT17-13	PP10-29 LT18-13
PP8-30 LT10-14	PP8-46 LT11-14	PP8-62 LT12-14	PP9-14 LT13-14	PP9-30 LT14-14	PP9-46 LT15-14	PP9-62 LT16-14	PP10-14 LT17-14	PP10-30 LT18-14
PP8-31 LT10-15	PP8-47 LT11-15	PP8-63 LT12-15	PP9-15 LT13-15	PP9-31 LT14-15	PP9-47 LT15-15	PP9-63 LT16-15	PP10-15 LT17-15	PP10-31 LT18-15
PP8-32 LT10-16	PP8-48 LT11-16	PP8-64 LT12-16	PP9-16 LT13-16	PP9-32 LT14-16	PP9-48 LT15-16	PP9-64 LT16-16	PP10-16 LT17-16	PP10-32 LT18-16