

MLT118ECT

MULTI-1 Portable light

Safety Precautions

Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.

It is recommended that a qualified electrician perform all wiring. This fixture must be wired and mounted in accordance with all national and local electrical codes.

Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.

Make sure that the power source conforms to the requirements of the fixture. (See labels on fixture housing).

Injury to persons and damage to the mounting surface may result if the fixture or mounting hardware is pulled from the mounting location. To reduce the possibility of such injury, be sure to mount the fixture only on a surface that is structurally sound; that can support 15lbs. (See Mounting Instructions).

This portable lamp has a grounded 3-prong plug. As a safety feature, this plug will fit into a grounded 110-120v electrical outlet only one way. If the plug does not fit fully and securely into the outlet, or if your outlet is not grounded, contact a qualified electrician to install

the correct outlet. Do not attempt to remove or bend the third prong. Never use a 3-prong adapter or extension cord unless the fixture plug can be properly inserted into the adapter or extension cord, and the adapter or extension cord can be properly inserted and grounded into the electrical outlet. Do not attempt to modify or defeat this safety feature.

Protect power cord from coming into contact with sharp objects, oil, grease, hot surfaces, or chemicals.

Cautions:

- NOT FOR USE WITH DIMMER SWITCH OF ANY KIND
- FOR INDOOR DRY LOCATION ONLY
- DO NOT INSTALL OVER A HEAT SOURCE
- DO NOT INSTALL DIRECTLY OVER WATER
Such as: fish tanks, sinks, laundry tubs etc.
- DO NOT use in potentially dangerous locations, such as in flammable or explosive atmospheres.

Minimum starting temperature is 0 degrees F. Maximum room temperature should not be above 100 degrees F.

This fixture is intended to be used for general indoor lighting in dry locations only.

Installation Instructions


The fixture base is equipped with magnets, for wall mount only, to a clean vertical steel surface. Position fixture with gooseneck up.

The fixture is also equipped with four (4) mounting holes and may be mounted on other surfaces using mounting screws. Please use screws with following specification. Type A #5 x 3/4" long (provided)

1. Mount the fixture.
2. Bend the flexible gooseneck to position the light.
Note: The gooseneck swivels in the base 355° to allow positioning to any direction.
3. Position the light head.
Note: The light head rotates 45° in either direction.
4. Plug the power cord into the outlet.

TO REPLACE LAMPS

1. Unplug the fixture.
2. Remove the Philips head screws (1) holding the lens (2) to the head.
3. Lift the cover up slightly and slide it forward to disengage the tabs (4).
4. Slide the lamp support (7) off the light bulbs.
5. Gently rock the light bulb (6) from side to side while pulling the bulb away from the base.
6. Insert the new bulb (CFQ18W/G24q-2) and gently push into base until it locks.
7. Install the spacer about 2" from the tip of the light bulb.
8. Slide the cover tabs into the slots on the base and replace the screws.
9. The light head rotates 45° in either direction.

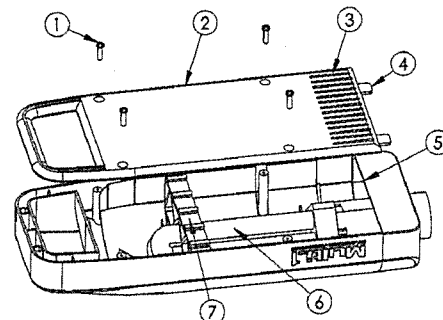

WARNING: DO NOT OVERLOAD
Check the amperages of the tools or appliances to be used before proceeding with the use of the fixture. Listed below is the maximum amperage rating for this unit.

Cord Type / Gauge: SJT 16/3
Length: 5 feet (1.52m)
Maximum Rating: 12AMPS, 120 Volts

DO NOT OPEN BASE OF UNIT. THERE ARE NO REPAIRABLE PARTS

Limited Factory Warranty

American Fluorescent Corporation hereby warrants that this fixture is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 1 year from date of purchase. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit.

