 
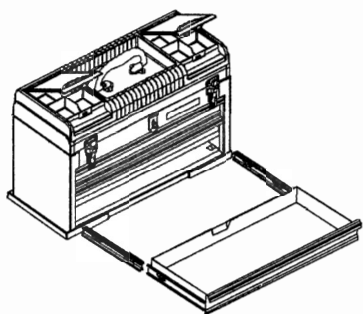 


CRAFTSMAN®

Portable Chest

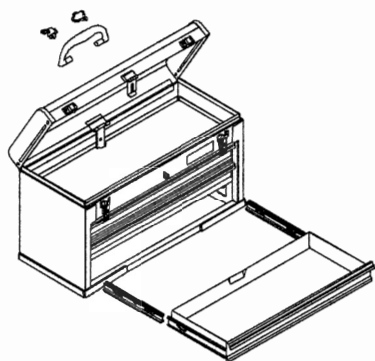

Please indicate the following information from the service part drawing provided.

Model Number: _____

Model Description: _____

CAUTION: Read and follow all Safety Rules and Operating Instructions before first use of this product. Retain this document for future reference.

Sears, Roebuck and Co.
Hoffman Estates, IL 60179 U.S.A.

Made in the U.S.A.
F1013A3

SAFETY RULES AND WARNINGS:

- **DO NOT** stand on this product. You may fall which may cause personal injury.
- Stacked products should be bolted together. The products could become unstable and tip, which may cause personal injury or product damage.
- **WEAR SAFETY GLASSES** when removing or repositioning the slides. The tool could slip which may cause personal injury.
- When the cover is opened, be sure the cover stop is in the locked position. This will prevent accidental closure and personal injury.
- **BE CAREFUL** when closing the cover. Remove hands before the cover closes completely to prevent personal injury.
- **BE CAREFUL** when opening more than one drawer. The product may become unstable and tip, which may cause personal injury or product damage.
- **DO NOT** mount this product on a truck bed or any other moving object. This may cause personal injury or product damage.
- **DO NOT** step in the drawers. You may fall which may cause personal injury.
- Appropriately secure this product before moving it with a forklift.
- Close the cover and lock the drawers and doors before moving this product. The drawers or doors could come open and make the product unstable and tip, which may cause personal injury or product damage.
- **DO NOT** alter this product in any manner. For example, do not weld external lockbars or attach electrical equipment. This may cause product damage or personal injury.
- When locking this product, close the drawers before closing the cover for lockbars to work properly.
- The maximum weight for each drawer should be no more than 25 pounds.


Call 1-800-366-7278 for Service Parts

Refer to Service Parts Drawing for full listing of Service Parts



DRAWER REMOVAL (if required):

 - Fully extend the drawer. Push it back a quarter of an inch.
- Insert a screwdriver into the slot in the slide and push in on the stop until it clears the lance. Repeat the procedure on the other slide and remove the drawer.
- To reinstall the drawer, pry the stop far enough out to engage the lance and push the drawer onto the slides until the stops pass over the lances.

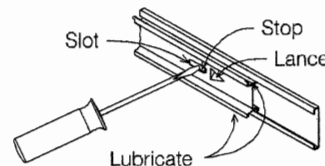

LUBRICATION: Lubricate the top and bottom channels of the drawer slides at least twice a year.

Call 1-800-366-7278 for Service Parts

GIVE THE FOLLOWING INFORMATION:

MODEL NUMBER	MODEL DESCRIPTION
PART NUMBER	PART DESCRIPTION
QUANTITY	PART COLOR

#	PART NO.	DESCRIPTION
1	M3049	DRAWBOLT TOP
2	M1023A4	DRAWBOLT BOTTOM
3	M15506	NAMEPLATE
4	A9038-EG	DRAWER CHARCOAL GRAY
5	T18914A1	DRAWER TRIM
6	T14153	INSIDE SLIDE
7	M15671	FOOT
8	M15670	COVER
9	M15672	COVER, PARTS
10	T13915A1	HANDLE LOOP
11	M15686	HANDLE
--	T14498-ERSL	LOCK BAR RED
--	M1495	PIN LOCK HINGE
--	F1013	INSTRUCTION SHEET

NOTE:

 
1. ALL UNNUMBERED PARTS ARE INTERCHANGEABLE WITH THE OPPOSITE SIDE.
2. REPLACEMENT KEYS MAY BE ORDERED USING THE CODE WHICH APPEARS ON THE FACE OF THE LOCK.



SERVICE PARTS

Model No. **706. 655080**
3 Drawer Portable Chest W/Top

Modelo No. **706. 655080**
C moda Port til con 3 Gavetas
Cubierta

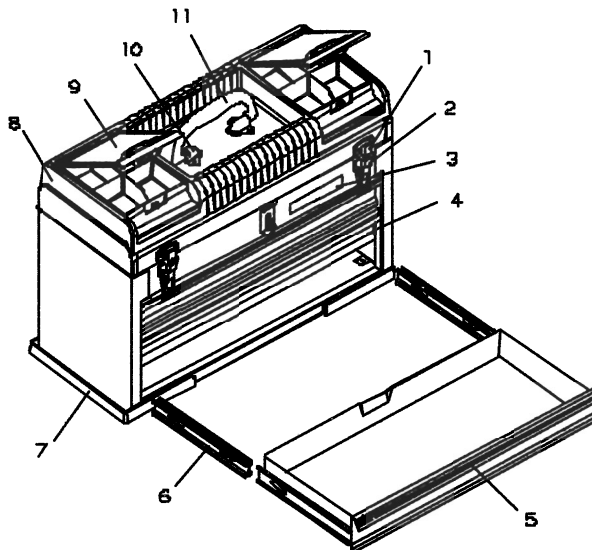

**Para ordenar pieza con entrega a domicilio
1-800-659-7084**

INDICAR LA SIGUIENTE INFORMACION:

NUMERO DE MODELO	DESCRIPCION DEL MODELO
NUMERO DE PIEZA	DESCRIPCION DE LA PIEZA
CANTIDAD	COLOR DE LA PIEZA

#	No. DE PIEZA	DESCRIPCION
1	M3049	PERNO DE APRIETE - SUPERIOR
2	M1023A4	PERNO DE APRIETE - INFERIOR
3	M15506	PLACA DE NOMBRE
4	A9038-EG	GAVETA GRIS
5	T18914A1	MOLDURA DE GAVETA
6	T14153	DESGLIZAMIENTO INTERIOR
7	M15671	PIE
8	M15670	CUBIERTA
9	M15672	CUBIERTA, PARTES
10	T13915A1	BUCLE DE MANIJA
11	M15686	MANIJA
--	T14498-ERSL	BARRA ENCERRADA ROJO
--	M1495	BISAGRA ENCERRADA
--	F1013	HOJA DE INSTRUCCIONES

NOTA:

1. TODAS LAS PIEZAS SIN NUMERO SE PUEDEN INTERCAMBIAR CON LAS DEL LADOS OPUESTO.
2. SE PUEDEN PEDIR LLAVES DE RECAMBIO USANDO LA COMBINACION DE LETRAS Y NUMEROSO QUE APARECE COMO EL NUMERO DE PIEZA EN LA CARA DE LA CERRADURA.