

INSTRUCTION MANUAL

ATE 15-3M

POWER SUPPLY

AUTOMATIC TEST EQUIPMENT

KEPCO INC.
An ISO 9001 Company.


**MODEL
ATE 15-3M
POWER SUPPLY**

| | |
|--------------------------|--------------------|
| ORDER NO. M635800 | REV. NO. 17 |
|--------------------------|--------------------|

IMPORTANT NOTES:

- 1) This manual is valid for the following Model and associated serial numbers:

| MODEL | SERIAL NO. | REV. NO. |
|-------|------------|----------|
|-------|------------|----------|
- 2) A Change Page may be included at the end of the manual. All applicable changes and revision number changes are documented with reference to the equipment serial numbers. Before using this Instruction Manual, check your equipment serial number to identify your model. If in doubt, contact your nearest Kepco Representative, or the Kepco Documentation Office in New York, (718) 461-7000, requesting the correct revision for your particular model and serial number.
- 3) The contents of this manual are protected by copyright. Reproduction of any part can be made only with the specific written permission of Kepco, Inc.

Data subject to change without notice.

©2005, KEPSCO, INC.
P/N 243-1158-R17



KEPCO, INC. • 131-38 SANFORD AVENUE • FLUSHING, NY. 11352 U.S.A. • TEL (718) 461-7000 • FAX (718) 767-1102
email: hq@kepcopower.com • World Wide Web: <http://www.kepcopower.com>



Please note the following corrections to the standard instruction manual for ATE models plus all the other manuals for specials or "-MG" models derived from it as indicated:

PAR. 3.8 PARALLEL OPERATION OF ATE (-MG MODELS) POWER SUPPLIES

Add following note:

NOTE THE FOLLOWING

CAUTION: When connecting units in parallel, use an external master ON/OFF circuit breaker or a switch to simultaneously turn on/off all units connected in parallel. The individual circuit breakers should be left in the ON position working as a overcurrent and over-voltage protection circuit and should not be used as a power ON/OFF switch.

If the above recommendation are not met, the internal turn-off overshoot eliminator circuit could be damaged to the point where it is no longer operational.

Declaration of Conformity

Application of Council directives:

**73/23/EEC (LVD)
93/68/EEC (CE mark)**

Standard to which Conformity is declared:

EN61010-1:1993 (Safety requirements for electrical equipment for measurement, control and laboratory use)

Manufacturer's Name and Address:

**KEPCO INC.
131-38 SANFORD AVENUE
FLUSHING, N.Y. 11352 USA**

Importer's Name and Address:

REPRESENTATIVE COPY

Type of Equipment:

Component Power Supply

Model No.:

[PRODUCT MODEL NUMBER]

Year of Manufacture:

I, the undersigned, declare that the product specified above, when used in conjunction with the conditions of conformance set forth in the product instruction manual, complies with the requirements of the Low Voltage Directive 73/23/EEC, which forms the basis for application of the CE Mark to this product.

Place: **KEPCO Inc.
131-38 Sanford Ave.
Flushing, N.Y. 11352 USA**

**Saul Kupferberg
(Full Name)**

Date: _____

**VP OF SALES
(position)**

Conditions of Conformance

When this product is used in applications governed by the requirements of the EEC, the following restrictions and conditions apply:

1. For European applications, requiring compliance to the Low Voltage Directive, 73/23/EEC, this power supply is considered a component product, designed for "built in" applications. Because it is incomplete in construction, the end product enclosure must provide for compliance to any remaining electrical safety requirements and act as a fire enclosure. (EN61010-1 Cl. 6, Cl. 7, Cl. 8, Cl. 9 and EN61010-1 annex F)
2. This power supply is designed for stationary installation, with mains power applied via a detachable power supply cord or via direct wiring to the source power terminal block.
3. This power supply is considered a Class 1 (earthed) product, and as such depends upon proper connection to protective earth for safety from electric shock. (EN61010-1 Cl. 6.5.4)
4. This power supply is intended for use as part of equipment meant for test, measurement and laboratory use, and is designed to operate from single phase, three wire power systems. This equipment must be installed within a suitably wired equipment rack, utilizing a three wire (grounded) mains connection. See wiring section of this manual for complete electrical wiring instructions. (EN61010-1 Cl. 6.5.4 and Cl. 6.10.1)
5. This power supply has secondary output circuits that are considered hazardous, and which exceed 240 VA at a potential of 2V or more.
6. The output wiring terminals of this power supply has not been evaluated for field wiring and, therefore, must be properly configured by the end product manufacturer prior to use.
7. This power supply employs a supplementary circuit protector in the form of a circuit breaker mounted on the front panel. This circuit breaker protects the power supply itself from damage in the event of a fault condition. For complete circuit protection of the end product, as well as the building wiring, it is required that a primary circuit protection device be fitted to the branch circuit wiring. (EN61010-1 Cl. 9.6.2)
8. Hazardous voltages are present within this power supply during normal operation. All operator adjustments to the product are made via externally accessible switches, controls and signal lines as specified within the product operating instructions. There are no user or operator serviceable parts within the product enclosure. Refer all servicing to qualified and trained Kepco service technicians.

SAFETY INSTRUCTIONS

1. Installation, Operation and Service Precautions

This product is designed for use in accordance with EN 61010-1 and UL 3101 for Installation Category 2, Pollution Degree 2. Hazardous voltages are present within this product during normal operation. The product should never be operated with the cover removed unless equivalent protection of the operator from accidental contact with hazardous internal voltages is provided:



There are no operator serviceable parts or adjustments within the product enclosure. Refer all servicing to trained service technician.



Source power must be removed from the product prior to performing any servicing.



This product is factory-wired for the nominal a-c mains voltage indicated on the rating nameplate located adjacent to the source power connection on the product's rear panel. To reconfigure the product input for other nominal mains voltages as listed herein, the product must be modified by a trained service technician.

2. Grounding

This product is a Class 1 device which utilizes protective earthing to ensure operator safety.




The PROTECTIVE EARTHING CONDUCTOR TERMINAL must be properly connected prior to application of source power to the product (see instructions on installation herein) in order to ensure safety from electric shock.



PROTECTIVE EARTHING CONDUCTOR TERMINAL - This symbol indicates the point on the product to which the protective earthing conductor must be attached.



EARTH (GROUND) TERMINAL - This symbol is used to indicate a point which is connected to the PROTECTIVE EARTHING TERMINAL. The component installer/ assembler must ensure that this point is connected to the PROTECTIVE EARTHING TERMINAL.

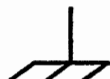

CHASSIS TERMINAL - This symbol indicates frame (chassis) connection, which is supplied as a point of convenience for performance purposes (see instructions on grounding herein). This is not to be confused with the protective earthing point, and may not be used in place of it.

3. Electric Shock Hazards

This product outputs hazardous voltage and energy levels as a function of normal operation. Operators must be trained in its use and exercise caution as well as common sense during use to prevent accidental shock.



This symbol appears adjacent to any external terminals at which hazardous voltage levels as high as 500V d-c may exist in the course of normal or single fault conditions.



This symbol appears adjacent to any external terminals at which hazardous voltage levels in excess of 500V d-c may exist in the course of normal or single fault conditions.

TABLE OF CONTENTS

PARAGRAPH

PAGE

SECTION I – INSTRUCTION

| | | |
|------|--------------------------------------|---------|
| 1-1 | Scope of Manual | 1-1 |
| 1-3 | General Description | 1-1 |
| 1-9 | Specifications, Electrical | 1-2 |
| 1-10 | Miscellaneous Features | 1-5/1-6 |
| 1-11 | Mechanical Specifications | 1-5/1-6 |
| 1-12 | Accessories | 1-5/1-6 |

SECTION II – INSTALLATION

| | | |
|------|--|-----|
| 2-1 | Unpacking and Inspection | 2-1 |
| 2-3 | Terminations | 2-1 |
| 2-4 | A-C Input Requirements | 2-4 |
| 2-6 | Cooling | 2-4 |
| 2-8 | Preliminary Check-Out | 2-4 |
| 2-10 | Installation | 2-5 |
| 2-13 | Grounding | 2-5 |
| 2-14 | Fast Mode Conversion of the ATE Power Supply | 2-6 |

SECTION III – OPERATION

| | | |
|-------|--|------|
| 3-1 | General | 3-1 |
| 3-3 | Safety Grounding | 3-1 |
| 3-6 | D-C Output Grounding | 3-1 |
| 3-12 | Power Supply/Load Interface | 3-2 |
| 3-16 | Load Connection, General | 3-3 |
| 3-19 | Load Connection, Method I (Local Error Sensing) | 3-4 |
| 3-21 | Load Connection, Method II (Remote Error Sensing) | 3-4 |
| 3-24 | Load Connections, Method III | 3-5 |
| 3-27 | Standard Voltage Mode Operation (Front Panel Control) | 3-5 |
| 3-29 | Standard Current Mode Operation (Front Panel Control) | 3-6 |
| 3-31 | Overvoltage Crowbar, Setup and Check | 3-6 |
| 3-34 | Introduction to Remote Control of the ATE Output | 3-7 |
| 3-37 | Programming the Voltage Control Channel | 3-7 |
| 3-41 | Output Control with an External 0–10 Volt D-C Control Signal | 3-7 |
| 3-45 | Voltage Control with a Two-Terminal Resistance | 3-8 |
| 3-51 | Voltage Control with a High Impedance Control Source | 3-10 |
| 3-57 | Programming the Current Control Channel | 3-12 |
| 3-60 | Output Current Control with an External Control Signal | 3-12 |
| 3-64 | Output Current Control with a Two-Terminal Resistance | 3-13 |
| 3-70 | Programming the Overvoltage Protector | 3-15 |
| 3-72 | Remote Crowbar Level Control with an External 0–10 Volt D-C 1 mA Signal | 3-15 |
| 3-75 | Automatic (Tracking) Control of the Crowbar Level | 3-16 |
| 3-78 | Programming Output Voltage and Output Current Simultaneously | 3-17 |
| 3-84 | The Use of the "EXT. CURRENT COMPARISON AMPLIFIER" for General Feedback Control | 3-19 |
| 3-91 | Multiple Power Supply and Systems Operation | 3-20 |
| 3-94 | Series Operation of ATE Power Supplies | 3-21 |
| 3-103 | Parallel Operation of ATE Power Supplies | 3-25 |
| 3-115 | Programming With Reference to the NEGATIVE Power Supply Output | 3-32 |
| 3-121 | Application of Isolated Flag Signals | 3-34 |

SECTION IV – THEORY OF OPERATION

| | | |
|------|---|-----|
| 4-1 | Simplified Diagram Discussion (General Circuitry) | 4-1 |
| 4-12 | Simplified Diagram Discussion (Overvoltage Protector Circuit) | 4-3 |
| 4-19 | Circuit Description, Based on Main Schematic Diagram. | 4-4 |

SECTION V – MAINTENANCE

| | | |
|------|--|-----|
| 5-1 | General | 5-1 |
| 5-3 | Disassembly | 5-1 |
| 5-4 | Internal Adjustment Procedures | 5-2 |
| 5-9 | Trouble Shooting | 5-2 |
| 5-13 | Power Supply Measurements | 5-3 |

SECTION VI – PARTS LIST AND DIAGRAMS

| | | |
|-----|--------------------------------|---------|
| 6-1 | General | 6-1/6-2 |
| 6-3 | Ordering Information | 6-1/6-2 |

LIST OF ILLUSTRATIONS

| FIGURE | | PAGE |
|--------|--|---------|
| 1-1 | Kepeco ATE Power Supplies | v/vi |
| 1-2 | Mechanical Outline Drawing | 1-7/1-8 |
| 2-1 | Location of Internal Controls | 2-1 |
| 2-2 | Controls and Terminations (Front) | 2-2 |
| 2-3 | Terminations (Rear) | 2-3 |
| 2-4 | A-C Input Source Selection | 2-4 |
| 2-5 | Location of the Internal Signal Ground | 2-5 |
| 2-6 | Required Steps for "Slow Mode/Fast Mode" Conversion | 2-6 |
| 3-1 | Typical Output Impedance Curve | 3-2 |
| 3-2 | Standard Jumper Link Connections | 3-3 |
| 3-3 | Load Connection, Method I | 3-4 |
| 3-4 | Load Connection, Method II | 3-4 |
| 3-5 | Load Connection, Method III | 3-5 |
| 3-6 | Output Voltage Control With an External (0–10 Volt, 1 mA) D-C Control Signal | 3-8 |
| 3-7 | Two-Terminal Resistance Programming of the Voltage Channel Using PREAMP "A" and the Internal Reference Source | 3-8 |
| 3-8 | Connections for Voltage Control With a Two-Terminals Resistance | 3-9 |
| 3-9 | Using PREAMP "A" to Generate the 0–10 Volt @ 1 mA Control Potential from a High Impedance Source | 3-10 |
| 3-10 | Connections for Voltage Control With a High Impedance Input Source | 3-11 |
| 3-11 | Connections for Output Current Control With a 0–1 Volt Control Signal (Kepeco SN Programmer) | 3-12 |
| 3-12 | Two-Terminal Resistance Programming of the Current Channel Using PREAMP "B" and the Internal Reference Source | 3-13 |
| 3-13 | Connections for Output Current Control With a Two-Terminal Resistance | 3-14 |
| 3-14 | Remote Crowbar Level Control With an External Signal Source | 3-15 |
| 3-15 | Connections for Simultaneously Programming the Output Voltage and the Crowbar Level (Automatic Tracking) | 3-16 |
| 3-16 | Connections for Simultaneous Control of the Output Voltage/Output Current | 3-17 |
| 3-17 | Illumination Control Circuit With the ATE Power Supply | 3-19 |

LIST OF ILLUSTRATIONS (cont'd.)

| FIGURE | | PAGE |
|--------|--|-----------|
| 3-18 | Connections for Illumination Control, Using the EXT. CURRENT COMPARISON AMPLIFIER | 3-20 |
| 3-19 | Multiple Power Supply Fault Detection Loop | 3-21 |
| 3-20 | Automatic Series Connections | 3-22 |
| 3-21 | Developing the Drive for Master/Slave Series Connection, ATE Power Supplies With More Than 6 Volt Output Voltage. | 3-23 |
| 3-22 | Master Slave Series Connection, ATE Power Supplies With > 6 Volt Output Voltage | 3-24 |
| 3-23 | Developing the Driver for Master/Slave Series Connection, for 6 Volt ATE Supplies | 3-25 |
| 3-24 | "Automatic" Parallel Operation, Output Graph. | 3-26 |
| 3-25 | Connections for Automatic Parallel Operation | 3-27 |
| 3-27 | Location of the Overvoltage Sensing Lead Disconnect | 3-30 |
| 3-28 | Redundant Parallel Connection | 3-31 |
| 3-29 | Programming With Reference to the NEGATIVE Output of the ATE | 3-32 |
| 3-30 | Connections for Programming With Reference to the NEGATIVE Output of the ATE. | 3-33 |
| 3-31 | Isolated Flag Signal Outputs | 3-34 |
| 4-1 | Crossover Characteristics, ATE Power Supply | 4-1 |
| 4-2 | Voltage Comparison Equivalent Circuit | 4-1 |
| 4-3 | Current Comparison Equivalent Circuit | 4-2 |
| 4-4 | Generation of the Internal Control Signal for the ATE Voltage and Current Channels. | 4-2 |
| 4-5 | Generation of the Internal Crowbar Level Signal | 4-3 |
| 4-6 | ATE Simplified Schematic Diagram, General Circuitry | 4-7/4-8 |
| 4-7 | Programmable Overvoltage Protector and Crowbar Circuit, Simplified Schematic Diagram | 4-9/4-10 |
| 5-1 | Disassembly of the ATE Power Supply | 5-1 |
| 5-2 | Test Set-up Diagrams for Output Effect Measurements. | 5-5/5-6 |
| 6-1 | Component Location, Main Chassis Assembly With Front Panel and Heat Sink Assembly | 6-17/6-18 |
| 6-2 | Component Location, Control Assembly | 6-19/6-20 |
| 6-3 | Main Schematic Diagram. | 6-21/6-22 |

LIST OF TABLES

| TABLE | | PAGE |
|-------|---|------|
| 1-1 | D-C Output Ratings, ATE Power Supplies | 1-2 |
| 1-2 | Output Effects, Offset Variations and Ripple Specifications | 1-3 |
| 2-1 | Internal Controls and Their Functions. | 2-1 |
| 2-2 | Controls and Terminations, Front Panel. | 2-2 |
| 2-3 | Rear Terminations. | 2-3 |

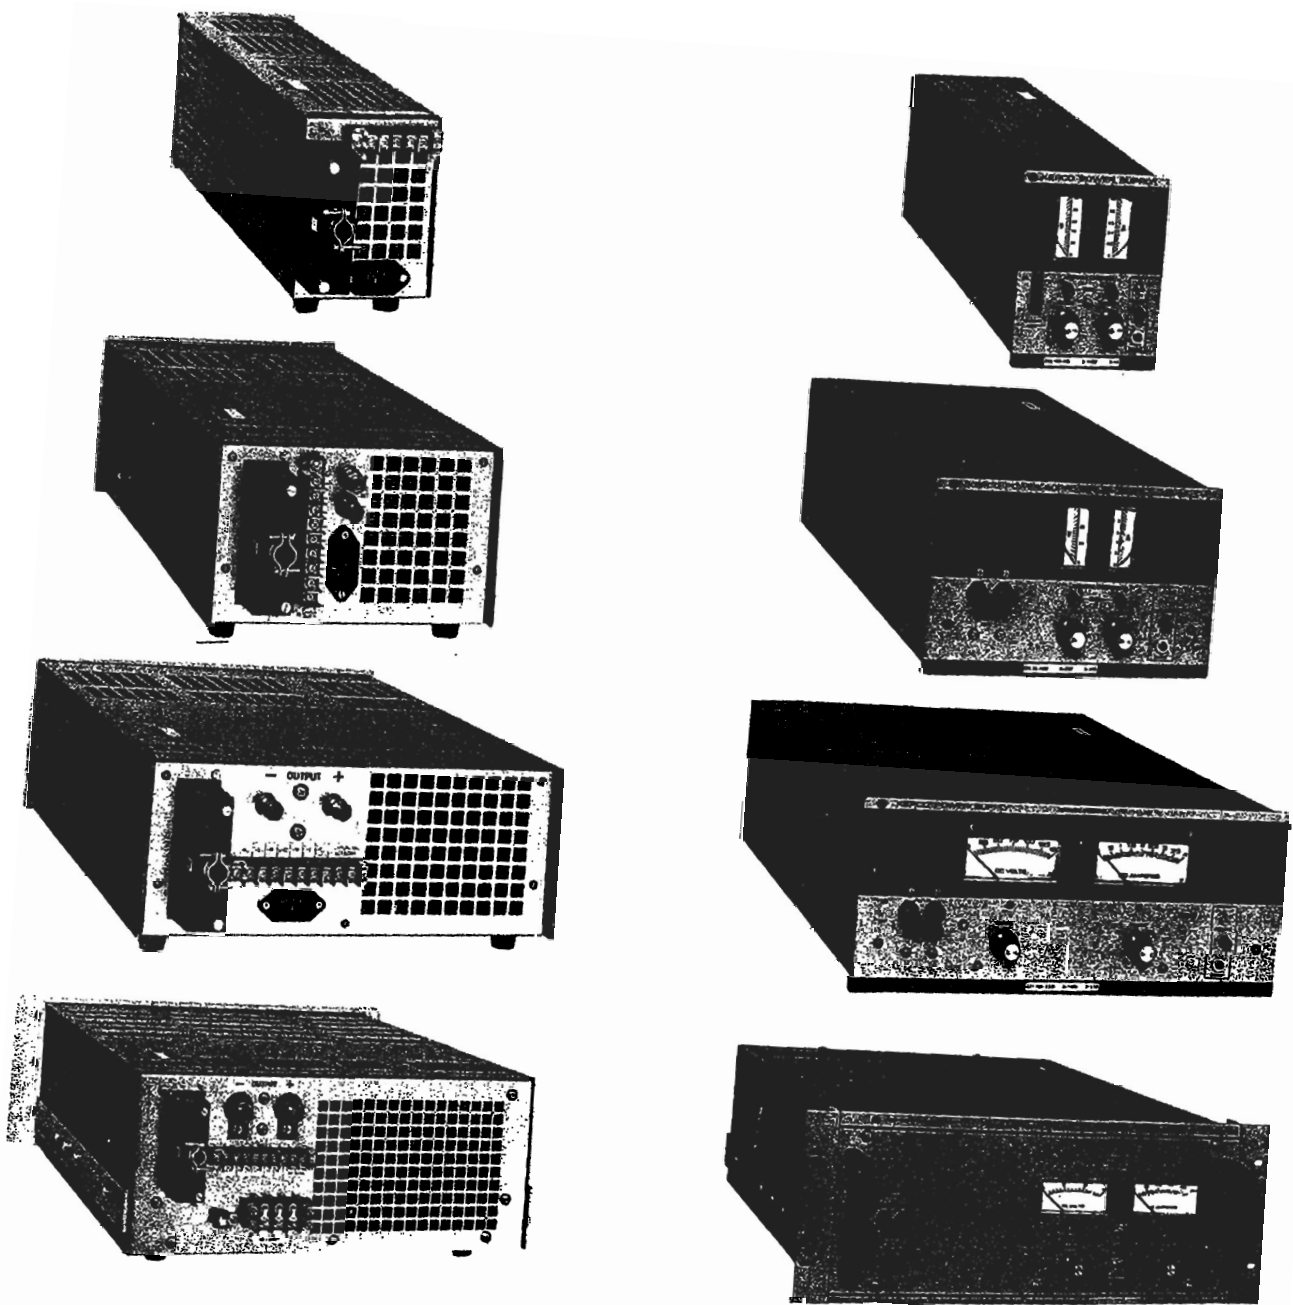


FIG. 1-1 KEPCO ATE POWER SUPPLIES.
(From Top: Size A, B; Size C; Size D; Size E).

SECTION I – INTRODUCTION

1-1 SCOPE OF MANUAL

- 1-2 This manual contains instructions for the installation, operation and maintenance of the "ATE" series of voltage and current stabilized d-c power supplies, manufactured by Kepco, Inc., Flushing, New York, U.S.A.

1-3 GENERAL DESCRIPTION

- 1-4 The Kepco ATE with programmable overvoltage protector is a precision stabilized power supply which can deliver either stabilized output voltage or current. The prevailing operating mode is indicated by LED mode indicators at the front panel. Operating mode crossover is automatic and may be monitored remotely by means of a flag signal, available at the rear programming connector. The power supply features "full range" output control by means of 10-turn, high resolution front panel potentiometers. A pair of front panel meters constantly monitor the output voltage and output current. This power supply has a linear and fully dissipative NPN pass transistor section driven by high-gain, integrated circuit amplifiers. The output of the power supply is fully programmable. All necessary input terminals are provided on a programming connector at the rear of the chassis. Terminals are also provided for remote error sensing, as well as for the connection of the output capacitor directly at the load.
- 1-5 The ATE power supply features user-selectable "slow" or "fast" operating modes. Slow mode operation is recommended for applications demanding a constant voltage source. Fast mode operation is best if the output voltage must change rapidly, either in response to an external programming signal or, if the ATE is used as a current stabilizer, as a reaction to changing load resistance.
- 1-6 The ATE power supply is delivered for "slow mode" operation. See Section II, par. 2-4 for converting the ATE power supply to "fast mode" operation.
- 1-7 An overvoltage protection circuit, continuously adjustable as well as remotely programmable, is a built-in feature. The trigger point of the overvoltage protector may be set (or checked) under actual operating conditions by the front panel accessible setup controls (refer to Section II of this manual).
- 1-8 ATE power supplies are built in several mechanical sizes according to their approximate output power ratings:

| SIZE | PACKAGE | APPROX. OUTPUT POWER |
|------|---------------------------|----------------------|
| "A" | QUARTER-RACK MODELS | 50 WATT |
| "B" | QUARTER-RACK MODELS | 100 WATT |
| "C" | HALF-RACK MODELS | 250 WATT |
| "D" | THREE-QUARTER RACK MODELS | 500 WATT |
| "E" | FULL-RACK MODELS | 1000 WATT |

Power transistors and drivers on all ATE designs are mounted onto highly efficient, patented heat sink assemblies which are cooled by low-noise fans. The ATE main chassis assemblies, as well as the wrap-around covers, are constructed from cold-rolled steel. The front panels are made from aluminum (refer to the "Mechanical Outline Drawing", FIG. 1-2).

1-9 SPECIFICATION, ELECTRICAL

a) AC INPUT SOURCE VOLTAGE:

95 to 113V a-c or
105 to 125V a-c or
190 to 226V a-c or
210 to 250V a-c

Selectable,
See Section II
of this Manual

AC INPUT SOURCE CURRENT:

(Worst Case, @ 113V a-c, 95–113V a-c tap, Full Load)

| SIZE A | SIZE B | SIZE C | SIZE D | SIZE E |
|--------|--------|--------|--------|--------|
| 1.4 A | 2.4 A | 6.0 A | 11.0 A | 20.0 A |

b) DC OUTPUT RATINGS: See Table 1-1.

Size "A" Quarter – Rack Models

| MODEL | d-c OUTPUT RANGE | | OUTPUT IMPEDANCE VOLTAGE MODE | | | OUTPUT IMPEDANCE CURRENT MODE | | |
|--------------|------------------|-------|-------------------------------|------------------------|------------------|-------------------------------|------------------------|--------------------|
| | VOLTS | AMPS | SERIES RESISTANCE | SERIES INDUCTANCE SLOW | FAST | SHUNT* RESISTANCE | SHUNT CAPACITANCE SLOW | FAST |
| ATE 6-5M | 0-6 | 0-5 | 24 $\mu\Omega$ | 0.5 μH | 5 μH | 12 k Ω | 1,000 μF | 1 μF |
| ATE 15-3M | 0-15 | 0-3 | 100 $\mu\Omega$ | 0.5 μH | 5 μH | 30 k Ω | 450 μF | 0.4 μF |
| ATE 25-2M | 0-25 | 0-2 | 250 $\mu\Omega$ | 1 μH | 10 μH | 50 k Ω | 250 μF | 0.25 μF |
| ATE 36-1.5M | 0-36 | 0-1.5 | 480 $\mu\Omega$ | 1 μH | 10 μH | 72 k Ω | 200 μF | 0.2 μF |
| ATE 55-1M | 0-55 | 0-1 | 1.1 m Ω | 2 μH | 20 μH | 110 k Ω | 150 μF | 0.15 μF |
| ATE 75-0.7M | 0-75 | 0-0.7 | 2.15 m Ω | 2 μH | 20 μH | 150 k Ω | 110 μF | 0.1 μF |
| ATE 100-0.5M | 0-100 | 0-0.5 | 4 m Ω | 4 μH | 40 μH | 200 k Ω | 50 μF | 0.05 μF |
| ATE 150-0.3M | 0-150 | 0-0.3 | 10 m Ω | 4 μH | 40 μH | 300 k Ω | 55 μF | 0.02 μF |

Size "B" Quarter – Rack Models

| MODEL | d-c OUTPUT RANGE | | OUTPUT IMPEDANCE VOLTAGE MODE | | | OUTPUT IMPEDANCE CURRENT MODE | | |
|--------------|------------------|-------|-------------------------------|------------------------|------------------|-------------------------------|------------------------|--------------------|
| | VOLTS | AMPS | SERIES RESISTANCE | SERIES INDUCTANCE SLOW | FAST | SHUNT* RESISTANCE | SHUNT CAPACITANCE SLOW | FAST |
| ATE 6-10M | 0-6 | 0-10 | 12 $\mu\Omega$ | 0.5 μH | 5 μH | 12 k Ω | 1,800 μF | 2 μF |
| ATE 15-6M | 0-15 | 0-6 | 50 $\mu\Omega$ | 0.5 μH | 5 μH | 30 k Ω | 1000 μF | 0.8 μF |
| ATE 25-4M | 0-25 | 0-4 | 125 $\mu\Omega$ | 1 μH | 10 μH | 50 k Ω | 500 μF | 0.5 μF |
| ATE 36-3M | 0-36 | 0-3 | 240 $\mu\Omega$ | 1 μH | 10 μH | 72 k Ω | 350 μF | 0.4 μF |
| ATE 55-2M | 0-55 | 0-2 | 0.55 m Ω | 2 μH | 20 μH | 110 k Ω | 200 μF | 0.3 μF |
| ATE 75-1.5M | 0-75 | 0-1.5 | 1 m Ω | 2 μH | 20 μH | 150 k Ω | 110 μF | 0.2 μF |
| ATE 100-1M | 0-100 | 0-1 | 2 m Ω | 4 μH | 40 μH | 200 k Ω | 80 μF | 0.1 μF |
| ATE 150-0.7M | 0-150 | 0-0.7 | 4 m Ω | 4 μH | 40 μH | 300 k Ω | 55 μF | 0.04 μF |

Size "C" Half – Rack Models

| MODEL | d-c OUTPUT RANGE | | OUTPUT IMPEDANCE VOLTAGE MODE | | | OUTPUT IMPEDANCE CURRENT MODE | | |
|--------------|------------------|-------|-------------------------------|------------------------|------------------|-------------------------------|------------------------|--------------------|
| | VOLTS | AMPS | SERIES RESISTANCE | SERIES INDUCTANCE SLOW | FAST | SHUNT* RESISTANCE | SHUNT CAPACITANCE SLOW | FAST |
| ATE 6-25M | 0-6 | 0-25 | 4.8 $\mu\Omega$ | 0.5 μH | 5 μH | 12 k Ω | 11,000 μF | 5 μF |
| ATE 15-15M | 0-15 | 0-15 | 20 $\mu\Omega$ | 0.5 μH | 5 μH | 30 k Ω | 5,800 μF | 2 μF |
| ATE 25-10M | 0-25 | 0-10 | 50 $\mu\Omega$ | 1 μH | 10 μH | 50 k Ω | 2,900 μF | 1.25 μF |
| ATE 36-8M | 0-36 | 0-8 | 90 $\mu\Omega$ | 1 μH | 10 μH | 72 k Ω | 2,400 μF | 1 μF |
| ATE 55-5M | 0-55 | 0-5 | 0.22 m Ω | 2 μH | 20 μH | 110 k Ω | 1,400 μF | 0.75 μF |
| ATE 75-3M | 0-75 | 0-3 | 0.5 m Ω | 2 μH | 20 μH | 150 k Ω | 850 μF | 0.5 μF |
| ATE 100-2.5M | 0-100 | 0-2.5 | 0.8 m Ω | 4 μH | 40 μH | 200 k Ω | 375 μF | 0.25 μF |
| ATE 150-1.5M | 0-150 | 0-1.5 | 2 m Ω | 4 μH | 40 μH | 300 k Ω | 275 μF | 0.1 μF |
| ATE 325-0.8M | 0-325 | 0-0.8 | 8.1 m Ω | 100 μH | 1 mH | 650 k Ω | 180 μF | 0.01 μF |

Size "D" Three – Quarter – Rack Models

| MODEL | d-c OUTPUT RANGE | | OUTPUT IMPEDANCE VOLTAGE MODE | | | OUTPUT IMPEDANCE CURRENT MODE | | |
|--------------|------------------|-------|-------------------------------|------------------------|------------------|-------------------------------|------------------------|-------------------|
| | VOLTS | AMPS | SERIES RESISTANCE | SERIES INDUCTANCE SLOW | FAST | SHUNT* RESISTANCE | SHUNT CAPACITANCE SLOW | FAST |
| ATE 6-50M | 0-6 | 0-50 | 2.4 $\mu\Omega$ | 0.5 μH | 5 μH | 12 k Ω | 12,000 μF | 10 μF |
| ATE 15-25M | 0-15 | 0-25 | 12 $\mu\Omega$ | 0.5 μH | 5 μH | 30 k Ω | 8,000 μF | 4 μF |
| ATE 25-20M | 0-25 | 0-20 | 25 $\mu\Omega$ | 1 μH | 10 μH | 50 k Ω | 5,800 μF | 2.5 μF |
| ATE 36-15M | 0-36 | 0-15 | 48 $\mu\Omega$ | 1 μH | 10 μH | 72 k Ω | 4,900 μF | 2 μF |
| ATE 55-10M | 0-55 | 0-10 | 0.11 m Ω | 2 μH | 20 μH | 110 k Ω | 2,900 μF | 1.5 μF |
| ATE 75-8M | 0-75 | 0-8 | 0.19 m Ω | 2 μH | 20 μH | 150 k Ω | 1,200 μF | 1 μF |
| ATE 100-5M | 0-100 | 0-5 | 0.4 m Ω | 4 μH | 40 μH | 200 k Ω | 600 μF | 0.5 μF |
| ATE 150-3.5M | 0-150 | 0-3.5 | 0.86 m Ω | 4 μH | 40 μH | 300 k Ω | 440 μF | 0.2 μF |




Size "E" Full – Rack Models

| MODEL | d-c OUTPUT RANGE | | OUTPUT IMPEDANCE VOLTAGE MODE | | | OUTPUT IMPEDANCE CURRENT MODE | | |
|-------------|------------------|-------|-------------------------------|------------------------|------------------|-------------------------------|------------------------|--------------------|
| | VOLTS | AMPS | SERIES RESISTANCE | SERIES INDUCTANCE SLOW | FAST | SHUNT* RESISTANCE | SHUNT CAPACITANCE SLOW | FAST |
| ATE 6-100M | 0-6 | 0-100 | 1.2 $\mu\Omega$ | 0.5 μH | 5 μH | 12 k Ω | 22,000 μF | 15 μF |
| ATE 15-50M | 0-15 | 0-50 | 6 $\mu\Omega$ | 0.5 μH | 5 μH | 30 k Ω | 12,000 μF | 6 μF |
| ATE 25-40M | 0-25 | 0-40 | 12.5 $\mu\Omega$ | 1 μH | 10 μH | 50 k Ω | 11,000 μF | 4 μF |
| ATE 36-30M | 0-36 | 0-30 | 24 $\mu\Omega$ | 1 μH | 10 μH | 72 k Ω | 9,500 μF | 3 μF |
| ATE 55-20M | 0-55 | 0-20 | 55 $\mu\Omega$ | 2 μH | 20 μH | 110 k Ω | 5,200 μF | 2.25 μF |
| ATE 75-15M | 0-75 | 0-15 | 0.1 m Ω | 2 μH | 20 μH | 150 k Ω | 3,400 μF | 1.5 μF |
| ATE 100-10M | 0-100 | 0-10 | 0.2 m Ω | 4 μH | 40 μH | 200 k Ω | 1,200 μF | 0.75 μF |
| ATE 150-7M | 0-150 | 0-7 | 0.42 m Ω | 4 μH | 40 μH | 300 k Ω | 1,050 μF | 0.3 μF |

*Based on 0.5 mA load effect in FAST mode.

TABLE 1-1 DC OUTPUT RATINGS, ATE POWER SUPPLIES

ATE A-E-07-0780A

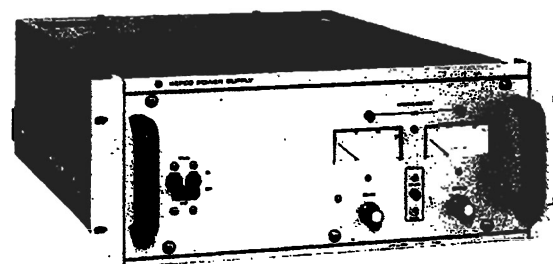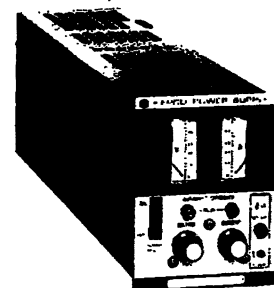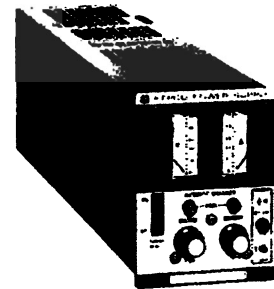

c) OUTPUT EFFECTS, OFFSETS AND RIPPLE SPECIFICATIONS: See Table 1-2.

| INFLUENCE QUANTITY | OUTPUT EFFECTS VOLTAGE MODE | | OUTPUT EFFECTS CURRENT MODE | | OFFSETS ⁽⁴⁾ | |
|--------------------------------------|-----------------------------|----------------------|-----------------------------|---------------------|------------------------|-----------------|
| | Typical | Maximum | Typical | Maximum | ΔE_{IO} | ΔI_{IO} |
| SOURCE VOLTAGE (min.-max.): | <0.0005% E_O max. | 0.001% E_O max. | <0.002% I_O max. | 0.005% I_O max. | <1 μ V | <1 nA |
| LOAD (no load-full load): | <0.001% E_O max. | 0.002% E_O max. | <0.5 mA ⁽¹⁾ | 1 mA ⁽¹⁾ | <1 μ V | <1 nA |
| TIME (8-hour drift): | <0.005% E_O max. | 0.01% E_O max. | <0.01% I_O max. | 0.02% I_O max. | <20 μ V | <1 nA |
| TEMPERATURE, per °C: | <0.005% E_O max. | 0.01% E_O max. | <0.01% I_O max. | 0.02% I_O max. | <20 μ V | <2 nA |
| RIPPLE AND NOISE ⁽²⁾ rms: | | | | | | |
| (Slow Mode) p-p: ⁽³⁾ | <0.1 mV | 0.3 mV | <0.01% I_O max. | 0.03% I_O max. | — | — |
| | <1 mV | 3 mV | <0.1% I_O max. | 0.3% I_O max. | — | — |
| RIPPLE AND NOISE ⁽²⁾ rms: | | | | | | |
| (Fast Mode) p-p: ⁽³⁾ | <1 mV | 3 mV ⁽⁵⁾ | <0.01% I_O max. | 0.03% I_O max. | — | — |
| | <10 mV | 30 mV ⁽⁵⁾ | <0.1% I_O max. | 0.3% I_O max. | — | — |

- (1) For models with output current rating of 50A and higher, the load effect is 2 mA typical and 5 mA maximum. In slow mode, the leakage current through the output capacitor adds approximately 0-6 mA to the current mode load effect.
- (2) One terminal must be grounded for this measurement, or connected so that common mode current does not flow through the load or, in current mode, through the current sensing resistor.
- (3) Peak-to-peak ripple is measured over a 20 Hz to 10 MHz bandwidth.
- (4) Preamplifier offsets. The preamplifier offsets are given for the calculation of the output effects of preamplifiers (A, B) if either of these amplifiers is used for operational programming. In this case, the value of the external feedback and input resistors, the amplifier offsets and the reference voltage variations are combined in the "Error Equation", which represents the "worst case" output effects for the application at hand:

$$\Delta E_O (\text{preamp}) = \Delta E_{ref} (R_f/R_i) + \Delta E_{IO} (1 + R_f/R_i) + \Delta I_{IO} R_f$$

where: ΔE_O (preamp) = Total Preamp Output Voltage Change.
 ΔE_{ref} = Change in the Voltage Reference.
 ΔE_{IO} = Change in Offset Voltage.
 ΔI_{IO} = Change in Offset Current.
 R_f = External Feedback Resistor.
 R_i = External Input Resistor.

NOTE 1: Variations in the value of the feedback and input resistors are considered secondary effects in the error equation.

NOTE 2: In the Voltage Mode of operation, the calculated preamp output effect, ΔE_O (preamp), must be multiplied by the (fixed) gain of the ATE voltage channel to find the total output effect on the output voltage of the ATE power supply. The (fixed) gain of the ATE voltage channel is given by: $GAIN = E_O \text{ max}/10$, where " $E_O \text{ max.}$ " is the maximum rated output voltage of each ATE model. In the Current Mode of operation, the effect of the preamplifier offsets on the total output current may be expressed as a percentage of $I_O \text{ max.}$ by the equation:

$$\Delta I_O (\%) = \frac{\Delta E_O (\text{preamp})}{1 \text{ Volt}} \times 100\%$$

(5) For Kepco Model ATE 325-0.8M, the maximum output ripple and noise is 10mV rms and 50mV p-p.

TABLE 1-2 OUTPUT EFFECTS, OFFSET VARIATIONS AND RIPPLE SPECIFICATIONS.

- d) OUTPUT RANGES: (See Table 1-1 for specific ratings of each model)
- 1) VOLTAGE MODE: 0-100% of rated voltage.
 - 2) CURRENT MODE: 0-100% of rated current. Useable range limited to approximately 1% to 100%. The maximum current is factory set to 105% of the rated output current.
- e) OPERATING TEMPERATURE RANGE: 0°C to 65°C. No derating to 55°C, derate 10% of listed maximum output current values in Table 1-1 for operation to 65°C ambient temperature.
- f) STORAGE TEMPERATURE RANGE: (-)40°C to 85°C.
- g) COOLING: High efficiency, single bearing fans, permanently lubricated, with special low-noise non-metallic blades.

- h) **ISOLATION:** A maximum of 500 volts (d-c or p-p) can be connected between chassis and either output terminal. The common-mode current from either output terminal to ground is less than $5\mu\text{A}$ (rms) or less than $50\mu\text{A}$ (p-p) at 115V a-c 60 Hz.

i) **DYNAMIC SPECIFICATIONS**

1) **VOLTAGE RECOVERY FOR A STEP-LOAD CURRENT:**

The time required for the stabilized output voltage to recover to within 10 mV of the output voltage setting, for a 10 to 100% step in rated load current is typically less than $50\mu\text{sec.}$, $100\mu\text{sec.}$ maximum.

2) **CURRENT RECOVERY FOR STEP-LOAD VOLTAGE:**

The stabilized output current recovers from a step in load (compliance) voltage with an exponential response, the time constant of which is determined by the load resistance and the tabulated output capacitance (See Table 1-1).

3) **PROGRAMMING SPEED:**

The speed with which the power supply output responds to external programming signals is determined by:

- 1) The **PROGRAMMING TIME CONSTANT** (τ), given in the "slow" mode by either the load resistance (R_L) and the value of the output capacitor (C_o , see Table 1-1): $\tau = R_L C_o$, or by the **FEEDBACK TIME CONSTANT**, given by the product of the feedback capacitor and the feedback resistor: $\tau = R_f C_f$, whichever is greater. In the "fast" mode, the **PROGRAMMING TIME CONSTANT** and bandwidth (-3dB) for the Voltage Control Channel is shown in the table:

| Output Voltage Ratings | Bandwidth (-3dB) KHz | | Programming Time Constant (μsec) | |
|------------------------|---------------------------------|------|---|-------|
| | Typ. | Min. | Typ. | Max. |
| 6V | 23.0 | 16.0 | 7.0 | 10.0 |
| 15V | 20.0 | 10.6 | 8.0 | 15.0 |
| 25V | 11.5 | 8.0 | 14.0 | 20.0 |
| 36V | 8.0 | 6.4 | 20.0 | 25.0 |
| 55V | 4.8 | 4.0 | 33.0 | 40.0 |
| 75V | 4.3 | 3.5 | 37.0 | 45.0 |
| 100V | 2.7 | 2.5 | 60.0 | 65.0 |
| 150V | 1.8 | 1.7 | 88.0 | 95.0 |
| 325V | 1.5 | 0.94 | 110.0 | 170.0 |

For the Current Control Channel, the **PROGRAMMING TIME CONSTANT** is $25\mu\text{sec.}$ typical, $50\mu\text{sec.}$ maximum. ($80\mu\text{sec.}$ for the ATE 325-0.8M).

- 2) The **MAXIMUM RATE OF CHANGE** that the power supply output can respond to is given by the setting of the power supply's current control setting (I_{LIM}), divided by the ATE output capacitor (C_o , see Table 1-1):

$$\text{MAXIMUM RATE OF CHANGE} = I_{LIM}/C_o.$$

k) **OVERVOLTAGE CROWBAR SPECIFICATIONS:**

- 1) **TRIGGERING TIME:** $<50\mu\text{sec.}$ slow mode, $<500\mu\text{sec.}$ fast mode.
- 2) **SETTING RANGE:** 1.6% or 3V (whichever is greater) minimum, to 110% of the maximum rated output voltage for each model.
- 3) **THRESHOLD:** Minimum 0.5 volts, or 2% $E_o \text{ max.}$, whichever is greater.
- 4) **TEMPERATURE COEFFICIENT:** $<0.02\%$ of $E_o \text{ max.}$ per $^{\circ}\text{C}$.

1-10 MISCELLANEOUS FEATURES

a) CONTROL/PROGRAMMING

- 1) **VOLTAGE CHANNEL:** Output voltage is controlled continuously throughout the range by a panel-mounted, 10-turn rheostat. External control can be exercised by resistance or by a control voltage (See Section III).
- 2) **CURRENT CHANNEL (INTERNAL):** Output current is controlled continuously throughout the range by a panel-mounted, 10-turn potentiometer. External control can be exercised by resistance or by a control voltage (See Section III). When controlling the external current channel, the power supply's panel-mounted current control serves as an adjustable maximum current limit.
- 3) **CURRENT CHANNEL (EXTERNAL):** Output current may be controlled by means of a separate current channel, applying a 0 to 1V d-c control signal at the REAR PROGRAMMING CONNECTOR, for control over the rated current range. This same channel, properly programmed, may control the output of the power supply responding to control and feedback voltages from temperature or pressure sensors, chemical reactions and the like (See Section III).
- 4) **OVERVOLTAGE PROTECTOR.** The crowbar level may be controlled locally by the provided CROWBAR LEVEL control at the front panel. Remote control of the crowbar level can be exercised by connecting a 0-10 volt control source to the REAR PROGRAMMING CONNECTOR. Automatic tracking of the crowbar level with the output voltage level may be achieved by means of the simultaneous connection of the voltage channel programming source to the tracking input.

b) **MODE FLAG:** A pair of panel LED indicators operate to indicate whether the voltage channel or the internally-sensed current channels have control of the output. In addition, an isolated flag signal is provided through an opto-isolator at the rear programming connector.

c) **REMOTE ERROR SENSING:** Separate voltage-sensing terminals permit 4-wire connections to a load. Will compensate for static load effects up to 0.5V per lead. An additional 1 Volt output voltage, beyond the nominal voltage rating of each ATE model, is provided for this purpose.

d) **REFERENCE SUPPLIES:** Two dual reference sources are available at the REAR PROGRAMMING CONNECTOR: $\pm 6.2V$ d-c @ 1 mA and $\pm 15V$ d-c @ 10 mA.

e) **CURRENT SENSING AMPLIFIER:** The output of the current sensing amplifier is available on the rear programming connector. It provides a voltage analog of the output current. The range of the analog output is 0 to +1V, corresponding to output currents of 0 to 100% (respectively).

1-11 MECHANICAL SPECIFICATIONS

a) Refer to the "Mechanical Outline Drawing", FIG. 1-2 .

1-12 ACCESSORIES

1-13 ATE power supplies are supplied with one Model PC-12 Programming Connector, mounted and wired for front panel output control. Additional connectors are optional and may be ordered as MODEL PC-12 (unwired). ATE models smaller than full-rack size can be rack mounted, using one of several Kepco Rack Adapters:

NOTE: ALL KEPCO RACK ADAPTERS FIT STANDARD EIA RACK DIMENSIONS. THEY ARE DRILLED FOR STANDARD CHASSIS SLIDES AND ARE PROVIDED WITH SLIDE SUPPORT BRACKETS.

a) **RACK ADAPTER, KEPCO MODEL RA-24.** For all Kepco quarter-rack, half-rack and three quarter-rack models, or a mixture of them. Filler panels to cover empty slots, if the adapter is not used to its full capacity, are available.

b) **RACK ADAPTER, KEPCO MODEL RA-32.** For (two) Kepco quarter-rack models or (one) half-rack model. Has additional space for (three) one-sixth rack modular Kepco units. Filler panels to cover empty slots, if the adapter is not used to its full capacity, are available.

c) **RACK ADAPTER, KEPCO MODEL RA-37.** For Kepco ATE models only. Accepts quarter-rack, half-rack or three quarter-rack ATE models or a mixture of them. The model RA-37 can be used without filler support brackets when fully loaded.



SECTION II – INSTALLATION

2-1 UNPACKING AND INSPECTION

2-2 This instrument has been thoroughly inspected and tested prior to packing and is ready for operation. After careful unpacking, inspect for shipping damage before attempting to operate. Perform the preliminary operational check as outlined in paragraph 2-8 below. If any indication of damage is found, file an immediate claim with the responsible transport service.

2-3 TERMINATIONS

- a) FRONT PANEL: Refer to FIG. 2-2 and Table 2-2.
- b) REAR: Refer to FIG. 2-3 and Table 2-3.
- c) INTERNAL CONTROLS: Refer to FIG. 2-1 and Table 2-1.

| REFERENCE DESIGNATION | CONTROL | PURPOSE |
|-----------------------|-----------------|------------------------------------|
| R17 | I_o MAX | Maximum Output Current |
| R24 | E_o LAG | Voltage Channel Stability Control |
| R32 | E_o ZERO | Voltage Channel Zero Control |
| R39 | I_o ZERO | Current Channel Zero Control |
| R62 | PREAMP "B" ZERO | Offset Zero Control for PREAMP "B" |
| R63 | PREAMP "A" ZERO | Offset Zero Control for PREAMP "A" |

TABLE 2-1 INTERNAL CONTROLS AND THEIR FUNCTIONS.

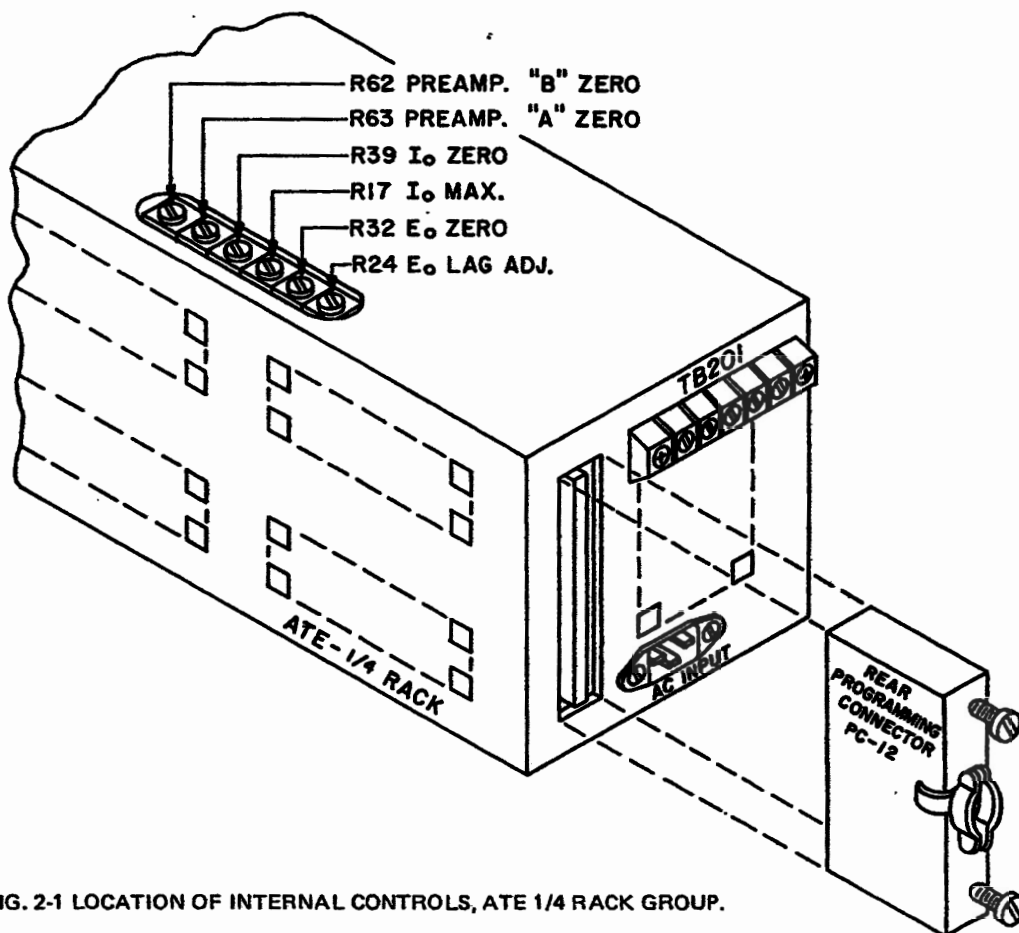


FIG. 2-1 LOCATION OF INTERNAL CONTROLS, ATE 1/4 RACK GROUP.

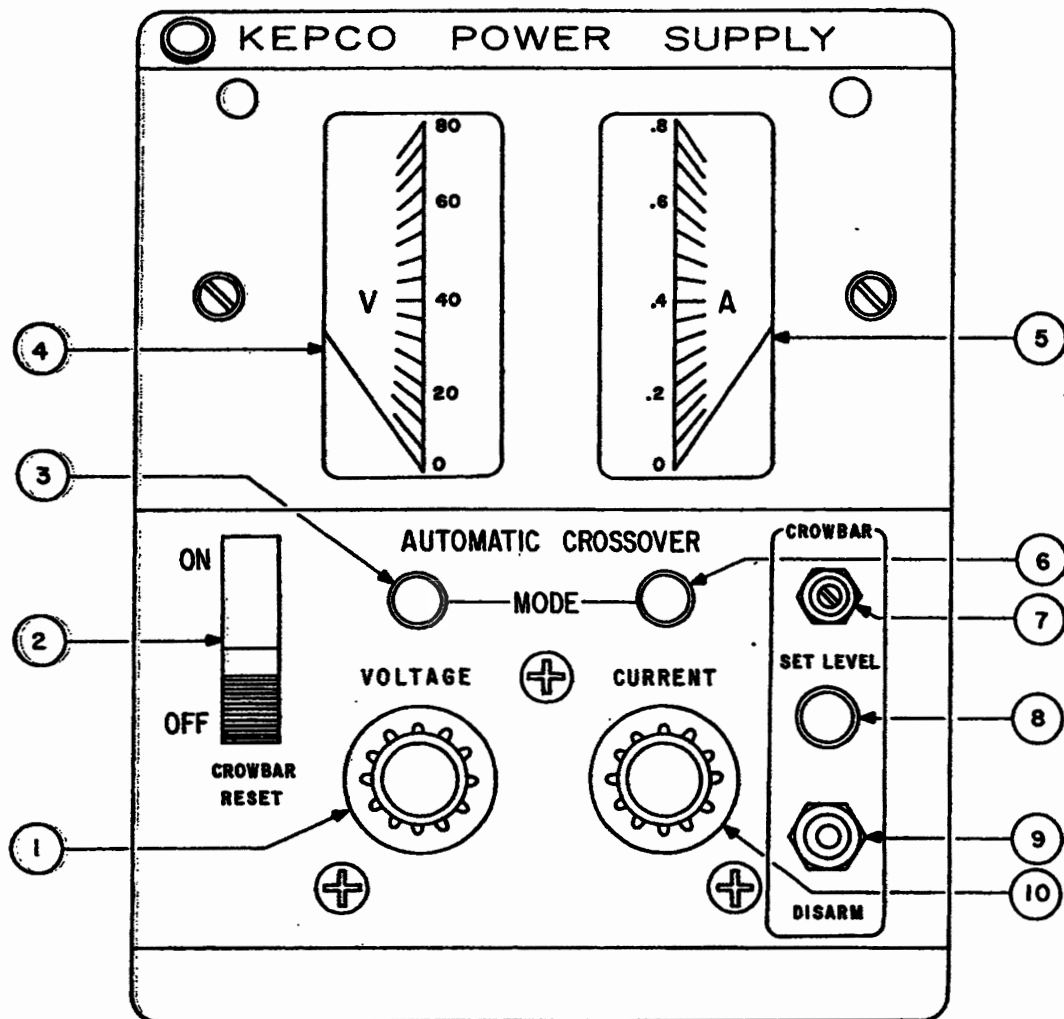


FIG. 2-2 CONTROLS AND TERMINATIONS, ATE 1/4 RACK GROUP, FRONT.

| NO. | CONTROL OR TERMINATION | FUNCTION |
|-----|--------------------------------------|--|
| 1. | VOLTAGE CONTROL | ADJUSTS OUTPUT VOLTAGE FROM ZERO TO E_0 max. |
| 2. | A-C POWER SWITCH/ CIRCUIT BREAKER | SERVES AS A-C POWER SWITCH AND TURNS A-C POWER LINE "OFF" ON OVERLOAD |
| 3. | "V" MODE INDICATOR | ENERGIZES IN VOLTAGE MODE |
| 4. | VOLTMETER | MONITORS OUTPUT VOLTAGE 0- E_0 max. |
| 5. | AMMETER | MONITORS OUTPUT CURRENT 0- I_0 max. |
| 6. | "I" MODE INDICATOR | ENERGIZES IN CURRENT MODE |
| 7. | "LEVEL" CONTROL | ADJUSTS TRIGGER LEVEL OF CROWBAR CIRCUIT |
| 8. | CROWBAR INDICATOR | LIGHTS WHEN CROWBAR IS TRIGGERED "ON" |
| 9. | "DISARM" PUSH-BUTTON | PUSH TO SET CROWBAR TRIGGER LEVEL |
| 10. | CURRENT CONTROL | ADJUSTS CURRENT FROM 0-100% I_0 max. |

TABLE 2-2 CONTROLS AND TERMINATIONS, ATE 1/4 RACK GROUP, FRONT.

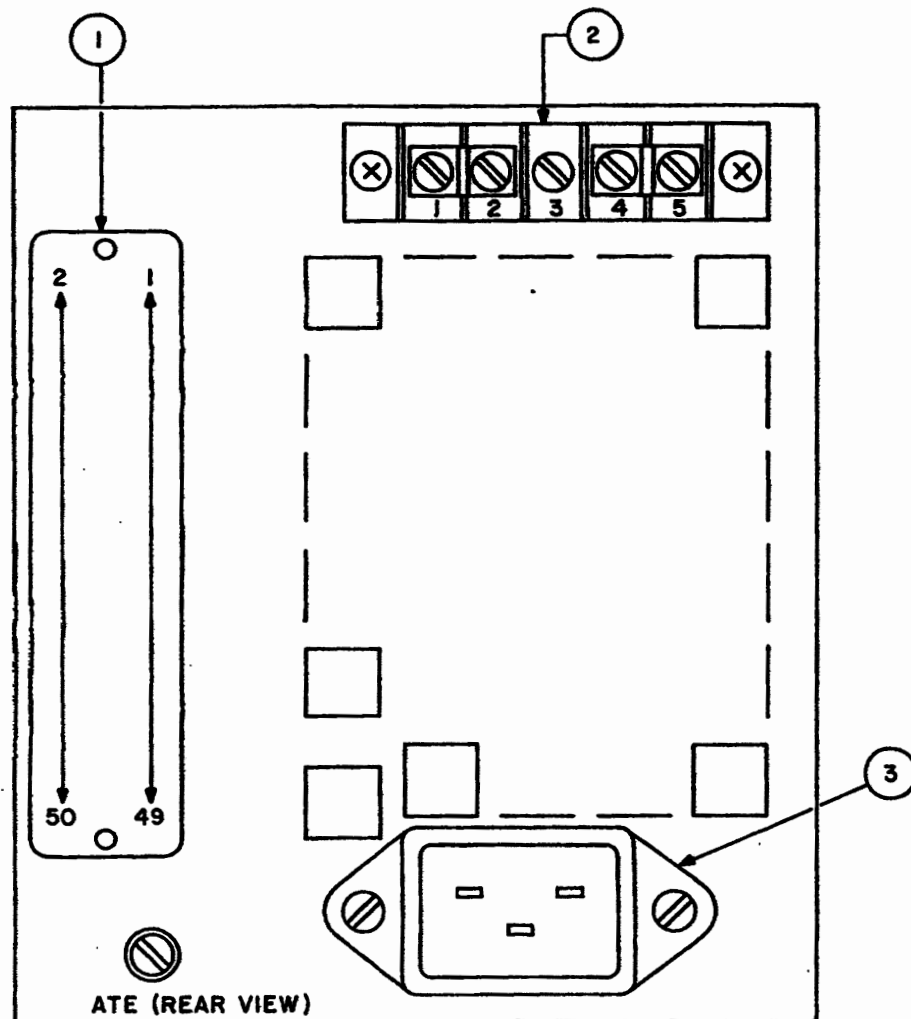


FIG. 2-3 TERMINATIONS, ATE 1/4 RACK GROUP, REAR.

| NO. | TERMINATION | FUNCTION |
|-----|-------------------------------|--|
| 1. | REAR MATING CONNECTOR (PC-12) | FOR EXTERNAL PROGRAMMING SOURCE INPUT AND ALL OTHER PROGRAMMING FUNCTIONS. |
| 2. | OUTPUT TERMINALS, TB201 | 1) (-) SENSING 2) (-) D-C OUTPUT 3) GROUND (CHASSIS CONNECTION) 4) (+) D-C OUTPUT 5) (+) SENSING |
| 3. | A-C POWER INPUT | ACCEPTS 3-WIRE A-C INPUT CORD (SUPPLIED) |

TABLE 2-3 REAR TERMINATIONS, ATE 1/4 RACK GROUP, WITH PROGRAMMABLE VP, REAR.

2-4 A-C INPUT REQUIREMENTS

- 2-5 This power supply is normally supplied for operation on a single phase, nominal 115V a-c line. For conversion to other a-c source voltages, refer to FIG. 2-4. Select your nominal source voltage and change the links on the barrier strip of T201 according to the table provided in FIG. 2-4. The circuit breaker (CB101) remains equally effective at all input voltages.

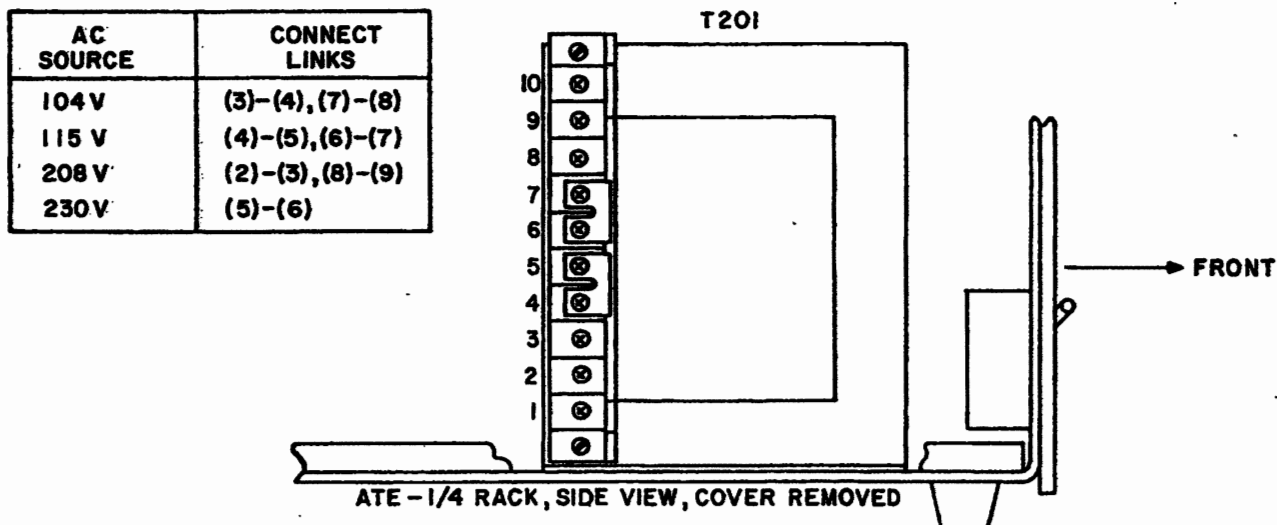


FIG. 2-4 A-C INPUT SOURCE VOLTAGE SELECTION, ATE 1/4 RACK GROUP.

2-6 COOLING

- 2-7 The power transistors and rectifiers in the ATE power supplies are maintained within their operating temperature range by means of special heat sink assemblies, cooled by internal fans. SIDE PANEL OPENINGS AND THE TOP OF THE CASE MUST BE KEPT CLEAR FROM OBSTRUCTIONS TO INSURE PROPER AIR CIRCULATION. Periodic cleaning of the interior of the power supply is recommended. If the power supply is rack mounted, or installed into confined spaces, care must be taken that the ambient temperature (the temperature immediately surrounding the power supply) does not rise above the limit specified (refer to Section I).

2-8 PRELIMINARY CHECK-OUT

- 2-9 A simple operating check after unpacking and before permanent installation is advisable to ascertain whether the power supply has suffered damage resulting from shipment. Refer to FIG. 2-2 and to FIG. 2-3 for the location of the operating controls and output terminals.
- Connect power supply to 115V a-c source or refer to par. 2-4 for other input voltages, if required.
 - Turn CURRENT CONTROL fully clockwise. Turn VOLTAGE CONTROL fully counterclockwise.
 - Turn A-C POWER SWITCH/CIRCUIT BREAKER "on". The VOLTAGE VIX indicator should be energized. Slowly turn VOLTAGE CONTROL clockwise and observe the gradual increase of the output voltage. The VOLTMETER should now read full scale.
 - Check the overvoltage "crowbar" circuit as follows:
 - Turn the VOLTAGE CONTROL to about one-half of its range.
 - Depress the DISARM push button and turn the (recessed) LEVEL control *slowly* counterclockwise until the CROWBAR INDICATOR lamp lights up.
 - Turn VOLTAGE CONTROL slightly counterclockwise and release DISARM button.
 - To reset the adjusted crowbar point, press DISARM button again and advance VOLTAGE CONTROL clockwise. Note voltage at which the CROWBAR INDICATOR lights up. Readjust LEVEL control if necessary, by repeating step (2) and check again by repeating steps (3) and (4).
 - Turn A-C POWER SWITCH/CIRCUIT BREAKER "off".
 - Place a short circuit across the ATE output terminals. Turn CURRENT CONTROL counterclockwise. Turn the ATE "on". THE CURRENT MODE indicator should now be energized. Slowly turn CURRENT CONTROL clockwise and observe the gradual increase in output current. The AMMETER should now read full scale.

2-10 INSTALLATION (Refer to FIG. 1-3 'Mechanical Outline Drawing')

- 2-11 The Power Supply may be rack-mounted or operated as a "bench-type" instrument. If the ATE is to rack-mounted, the (4) bottom feet must be removed.
- 2-12 For all installations into confined spaces, care must be taken that the temperature immediately surrounding the unit does not exceed the maximum specified ambient temperature (65°C).

2-13 GROUNDING

- a) **A-C (SAFETY) GROUND.** The power supply is equipped with a 3-wire safety line cord and polarized plug. The third (green) wire in the line cord is connected to the chassis and the case of the unit. If a 2-terminal receptacle in combination with an adapter is used, it is imperative that the chassis of the power supply be returned to a-c ground with a separate lead. A grounding terminal is provided (at the rear barrier strip) for this purpose.
- b) **ISOLATION FROM GROUND.** The d-c output is isolated from the a-c source and from any *direct* connection to chassis or ground. The maximum output voltage that can be supported between either output terminals and ground or chassis is 500V (d-c or peak), plus the maximum output voltage of the power supply. Either side of the output may be grounded.

A resistor/capacitor network (R59, C27), is connected from the negative output terminal to the metal chassis of the power supply (via QD-1). If the internal signal ground is *not* desired, the connection to the chassis can be opened by changing the wire lug position from QD-1 to QD-2 (See FIG. 2-5).

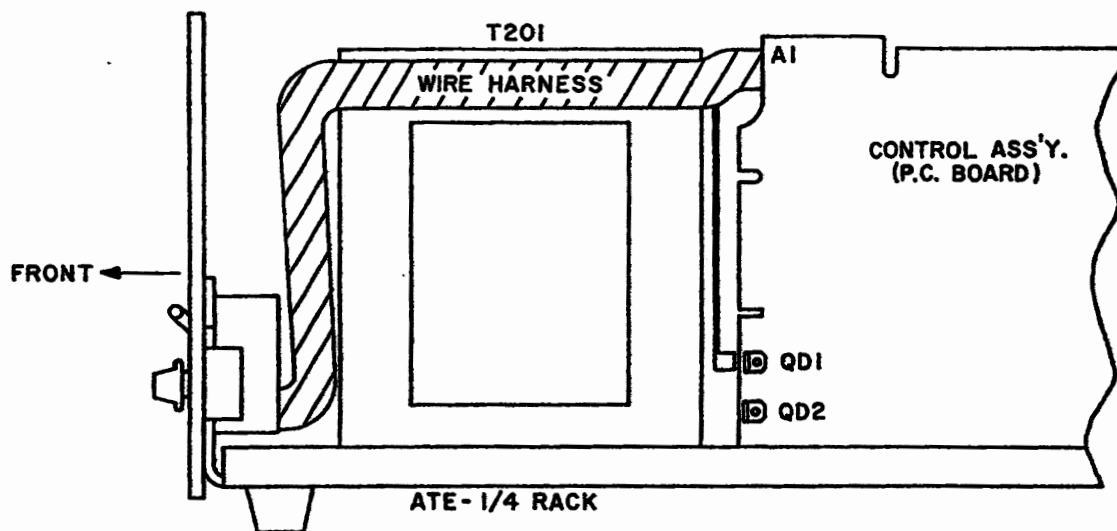


FIG. 2-5 LOCATION OF INTERNAL SIGNAL GROUND. SIGNAL GROUND NETWORK SHOWN CONNECTED VIA QD-1. TO REMOVE SIGNAL GROUND, PLACE WIRE LUG ONTO QD-2.

2-14 FAST MODE CONVERSION OF THE ATE POWER SUPPLY

- 2-15 Power supplies designed to operate in a voltage, as well as in a current stabilizing mode, often represent a compromise between the conflicting requirements of a good voltage and a good current source. A good voltage source must have **low** output impedance, good output voltage stability and good dynamic stability in the presence of loads with capacitive and/or inductive content. The power supply achieves these design goals by relying to a great extent upon a large output capacitor having a very low terminal impedance, large energy storing ability and great resistance to rapid voltage changes. Unfortunately, the requirements for a good current source are quite opposite to that of the voltage source described above. A current source should have **high** output impedance and its terminal voltage must be able to assume rapidly any value as may be needed to keep the output current at the predetermined level, while the load is changing.
- 2-16 To satisfy these conflicting requirements, the ATE power supply was designed for quick manual change-over from the "slow" mode to the "fast" mode of operation. In the "slow" mode, the ATE power supply approaches an ideal voltage source. Heavy output and feedback capacitors provide for low output noise, excellent voltage stability and good transient response. In the "fast" mode, the output and main feedback capacitors are completely removed, thereby providing the characteristics of a wide-band amplifier, ideal for applications requiring a current stabilizer or for high speed voltage or current programming.
- 2-17 **MANUAL CHANGE-OVER, SLOW/FAST MODE.** The ATE power supply is normally delivered for operation in the "slow" mode. By changing jumper connections at the rear of the power supply, the user can quickly convert from the "slow" mode to the "fast" mode or vice versa (See FIG. 2-6).

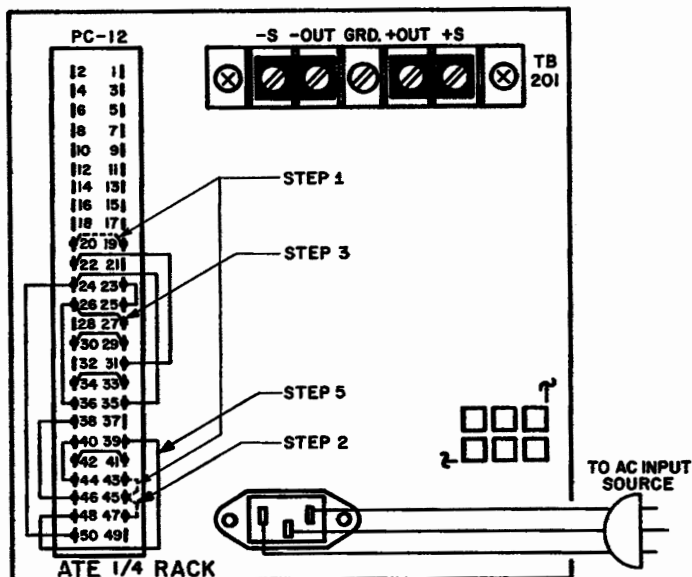


FIG. 2-6 REQUIRED STEPS FOR ATE
"FAST MODE" CONVERSION.

- STEP 1: Remove Links (19)-(20) and (43)-(45) on PC-12. This removes the output capacitor (C_o).
- STEP 2: Remove jumper (45)-(47) on PC-12. This removes the main feedback capacitor (C_f).
- STEP 3: Connect wire jumper on PC-12 from (26) to (27). This connects a lag network.
- STEP 4: Refer to Section II, FIG 2-5 and remove the internal grounding network.
- STEP 5: Connect wire jumper from (39) to (48) on PC-12. This introduces a required delay in the crowbar circuit.

NOTE: For fast mode operation into a load interrupted by contactors or relays ("Arcing Load"), a small, high-frequency-type capacitor may be required across the contacts of the interrupting device, or the power supply output terminals, or directly across the load terminals. A ceramic disc capacitor (0.01 μ F) has been found to be adequate to prevent spurious triggering of the overvoltage circuit.

- 2-18 **PRECAUTIONS.** The output capacitor, and to a lesser extent, the feedback capacitor of a power supply, control the programming speed and the current mode recovery time. The removal of these capacitors in the fast mode results in greatly improved power supply performance in these areas. The power supply's dynamic stability, however, is reduced, making the output sensitive to the load phase angle. For this reason, the load presented to the power supply in the fast mode must not contain excessive capacitance (limit: 1000pF). Also, with the output and main feedback capacitors removed, there will be an increase in the output noise, mainly high frequency noise and pick-up, so that external shielding of programming leads and good grounding practices assume added importance in the fast mode operation. See also note in FIG. 2-6.
- 2-19 **LAG NETWORK ADJUSTMENT.** The ATE power supply operating in the "fast" mode, is dynamically stabilized by means of an internal lag network (E_o LAG, R24, see FIG. 2-1 for location). This control should be adjusted, for each application, by monitoring the load with an oscilloscope and turning the LAG control for best output response and maximum dynamic stability under all operating conditions.
- 2-20 **CROWBAR OPERATION, FAST MODE.** The crowbar circuit in the ATE power supply is not completely removed in the "fast" operating mode, but continues to offer protection against d-c voltage surges which may harm the load.

SECTION III — OPERATION

3-1 GENERAL

- 3-2 Interconnections between an a-c power source and a stabilized power supply, and between the power supply and its load are as critical as the interface between other types of electronic equipment. If optimum performance is expected, certain rules for the interconnection of source, power supply and load must be observed by the user. These rules are described in detail in the following paragraphs.

3-3 SAFETY GROUNDING

- 3-4 National and international safety rules dictate the grounding of the metal cover and case of any instrument connected to the a-c power source.

WARNING

KEEP INSTRUMENT GROUNDED WHILE IT IS CONNECTED TO THE A-C POWER SOURCE.

- 3-5 Kepco power supplies with flexible a-c power cord are equipped with a 3-prong safety plug, which must be connected to a *grounded* a-c power outlet.

3-6 D-C (OUTPUT) GROUNDING

- 3-7 Connections between the power supply and the load (load and sensing connections), as well as connections to the power supply amplifiers (programming connections) may, despite all precautions such as shielding, twisting of wire-pairs, etc., "pick-up" radiated noise of a wide frequency spectrum. To minimize these undesired effects, one side of the power supply output/load circuit should be grounded.
- 3-8 Successful d-c grounding depends on careful analysis of the individual situation and only general guide lines can be provided here. One of the major points, however, is to avoid GROUND LOOPS. Ground loops are created when two (or more) points are grounded along the output circuit. Due to the wire impedance between the separated grounded points, a noise voltage is developed which subsequently is superimposed on the load. The only way to avoid ground loops is to investigate the output circuit (including the connected load) carefully by means of an ohmmeter for any resistance to ground. A single d-c ground point can be selected only if the output circuit is completely isolated, a single point is selected along the power supply output/load circuit and this point is returned to ground with a single wire. The exact location of this "best" d-c ground-point is entirely dependent on the application at hand. For single, isolated loads, the d-c ground-point may be located directly at one of the output terminals of the power supply which may be connected to ground. If error sensing is employed, d-c ground can be established at the remote load. In case of an internally grounded load, the d-c ground is automatically established directly at the load.
- 3-9 ATE Power Supplies have *one* side of the output returned to the case over a resistor/capacitor combination (refer to Section II, Par. 2-13). In those cases, therefore, where the *load* is internally grounded, or where the signal ground must be established elsewhere, the resistor/capacitor combination must be removed from the power supply case in order to avoid ground loop problems. If there is a choice in selecting either the positive or the negative output of the power supply for the d-c ground point, both sides should be tried, and preference given to the ground point producing the least noise. Output ripple specifications (as measured at the output) are, however, equally valid for either output side grounded. Care should be taken in measuring the ripple and noise at the power supply output or at the load. Measuring devices which are a-c line operated often introduce ripple and noise into the circuit.
- 3-10 In the case where the load must be kept completely off ground (d-c isolated) or it must be operated above ground potential, grounding can be accomplished by means of a suitable capacitor connected from either side of the power supply output to the signal ground. The size of the capacitor should be carefully selected. A value between 0.1 and 1 microfarad has been found to be successful in many cases.

3-11 Even simple remote control tasks, such as error sensing or resistance programming, require *careful shielding* with 2-wire shielding cable, with the shield (single-ended) returned to the single d-c ground point. In cases where external programming sources are used, additional precautions are required. If all other grounding problems have been solved and a single ground point has been assigned to the system, the programming source must be evaluated for system compatibility. Some of the older signal generators, for example, cannot be successfully used for programming, since their cases are connected permanently to one of the output leads. Aside from these initial problems, the power supply/load system must have the correct "polarity" for voltage programming; e.g., the programming source "common" must be connected to the previously grounded output side. If this is not possible, because of polarity considerations, three choices are open: either the programming source must be "floated," i.e., it must operate above ground by an amount given by the output voltage of the power supply, or the selected d-c ground point must be changed to the polarity coinciding with that of the programming source, or the polarity of the programming source must be reversed by using the uncommitted preamplifiers of the ATE, as described in this section.

3-12 POWER SUPPLY/LOAD INTERFACE

3-13 The general function of a voltage or current stabilized power supply is to deliver the rated output quantities to the connected load. The load may have any conceivable characteristic: It may be fixed or variable; it may have predominantly resistive, capacitive, or inductive parameters; it may be located very close to the power supply or it may be a considerable distance away. The power supply designer cannot anticipate every conceivable application, location or nature of the load. He must design his product for the widest possible application range and specify the performance at the output terminals of the power supply. The aim of the following paragraphs is to aid the user in the final use of the product: The interface of the power supply and the load.

3-14 The perfect interface between a power source and its load would mean that the specified performance at the output terminals would be transferred without impairment to any load, regardless of its characteristics, distance from the power supply or environment. To approach this ideal, the power supply must satisfy certain requirements, interconnecting rules must be closely followed and Ohm's Law, as well as basic a-c theory must be considered in selecting the interface wiring.

3-15 **LOAD WIRE SELECTION.** The stabilized d-c power supply is definitely not an ideal voltage or current source with zero output impedance (VOLTAGE MODE) or infinite output impedance (CURRENT MODE) at all frequencies: All *voltage* sources have some amount of impedance which *increases* with frequency and all *current* sources have an output impedance which *decreases* with frequency (refer to FIG. 3-1).

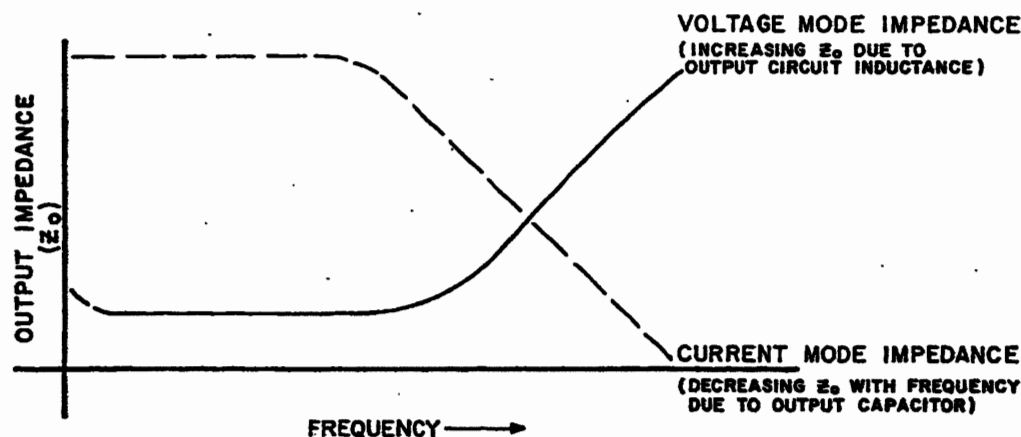


FIG. 3-1 TYPICAL OUTPUT IMPEDANCE VS. FREQUENCY PLOT FOR STABILIZED D-C SOURCES.

NOTE: Load connections for application requiring solely stabilized *output current* are not as critical as those requiring stabilized *output voltage*:

a) D-C wire drops do not influence the current stabilizing action, but must be subtracted from the available compliance voltage.

b) Wire inductance is "swamped-out" by the action of the output capacity.

Emphasis in the following paragraphs is therefore placed on the power supply as a *voltage source*, rather than a current source.

A more realistic model for a voltage stabilized power supply must, for example, include a series resistance, representing the small d-c and low frequency source impedance, in series with an inductance, representing the source impedance at higher frequencies. Load wire selection should therefore proceed with those facts in mind. The load-wire size should not only be selected for minimum voltage drop (Error Sensing, as discusses below, will take care of that), but also the series inductance of the load wire must be kept as small as possible compared to the source inductance of the power supply (Error Sensing *cannot* compensate for this). These dynamic considerations are especially important if:

- 1) The load is constantly changing in value.
- 2) The load is switched "on" and "off."
- 3) The output of the power supply is step programmed.
- 4) The load has a primarily reactive characteristic.
- 5) All other cases where the dynamic output response of the power supply is considered important.

3-16 LOAD CONNECTION, GENERAL

3-17 Kepco has provided a group of terminals on the programming connector PC-12 and on the barrier strip (TB210) at the rear of the power supply, which permit maximum flexibility in power supply/load interface techniques. Although all applications tend to exhibit their own problems, the basic interconnections described may be used as a general guide in the interconnection between power supply and load.

3-18 (Refer to FIG. 3-2). The Kepco power supply is shipped from the factory with several jumper links, connected to the programming connector (PC-12) and to the barrier strip (TB201). These links may be removed and replaced at will, depending on the operating mode and application of the power supply. Positioned as shown in FIG. 3-2, the links are connected for front panel (local) control of the output voltage, output current and VP crowbar level with the power supply operating in the "slow" mode. *Links remaining on the mating jack must be soldered, links on the barrier strip must be tightened.* LOOSE WIRES OR LINKS AT THE BARRIER STRIP OR THE MATING JACK WILL CAUSE MALFUNCTION OF THE POWER SUPPLY.


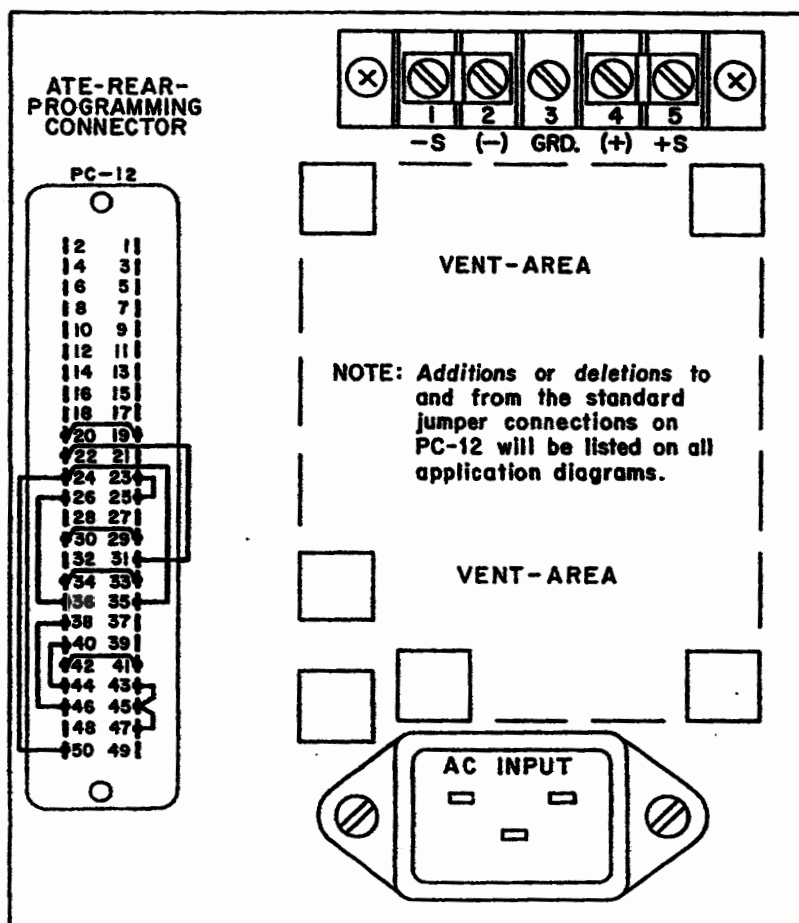


FIG. 3-2 STANDARD JUMPER LINK CONNECTIONS FOR LOCAL (FRONT PANEL) CONTROL OF THE OUTPUT VOLTAGE, OUTPUT CURRENT AND VP CROWBAR LEVEL (SLOW MODE).

3-19 LOAD CONNECTION, METHOD I (LOCAL ERROR SENSING)

3-20 (Refer to FIG. 3-3). The most basic power supply interconnection, to primarily resistive, relatively constant loads, located close to the power supply, or for loads requiring stabilized current exclusively, consists of 2-wire connection from the rear output terminals. Load wire is selected as described previously (refer to par. 3-15). The load leads should be tightly twisted to reduce "pick-up" from stray magnetic fields. After the grounding rules have been applied (refer to par. 3-3 to 3-11), the power supply can be connected to the a-c source and operation may commence.

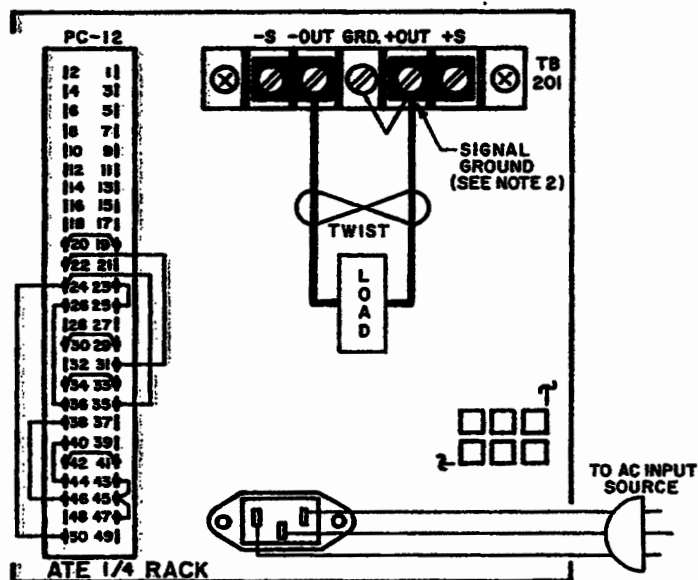

NOTES:

- 1) For Operator Safety all connections to and from the power supply should be made *before* a-c power is applied.
- 2) *Alternate* signal ground points may be chosen: refer to PAR. 3-6.
- 3) *Twist* all wire pairs. Use shielding as indicated.

FIG. 3-3 LOAD CONNECTION METHOD I, LOCAL ERROR SENSING.

3-21 LOAD CONNECTION, METHOD II (REMOTE ERROR SENSING)


3-22 To avoid excessive output effects at remote loads, error sensing must be used. A twisted, shielded pair of wire from the sensing terminals directly to the load will compensate for load wire voltage drops up to 0.5 volt per wire (refer to FIG. 3-4). Observe polarities: The *negative sensing wire* must go to the *negative load wire*, and the *positive sensing wire* goes to the *positive load wire*.

NOTE: For long wire runs, twisting each sensing wire with its associated load wire may give improved results in some cases.

FIG. 3-4 LOAD CONNECTION, METHOD II USING REMOTE ERROR SENSING.

ATTENTION

When using remote error sensing with large capacitive loads and long load and sensing wires, low frequency oscillations may be observed at the load. To eliminate the problem the **FEEDBACK CAPACITOR** should be disconnected from the (-) **OUTPUT SENSING** terminal and reconnected to the (-) **OUTPUT** terminal. Move jumper (45) - (47) on the **REAR PROGRAMMING CONNECTOR**. Connect a short wire from pin 47 to the (-) **OUTPUT** terminal on the rear barrier-strip (TB201).

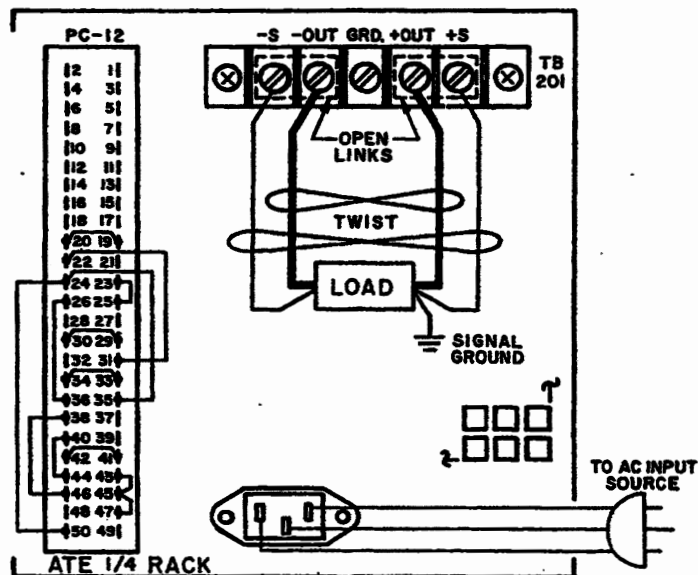

3-23 This method of load interconnection is suitable for loads which do not require rapid changes in voltage or current or for programming with gradually changing waveforms (sine wave, triangular wave shapes, etc.). See par. 3-24 for load connections suitable for rapid (step) changes in the load or in programming.

3-24 LOAD CONNECTION, METHOD III

- 3-25 This method is suitable if step changes in the load are expected if, for example, the load is rapidly changing in value, or if the power supply is programmed with step functions (square wave, pulse, etc.) and maximum dynamic performance is expected directly at the load terminals. In these cases, the output capacitor is disconnected at the power supply and brought with a heavy, twisted-wire pair directly to the remote load (refer to FIG. 3-4).

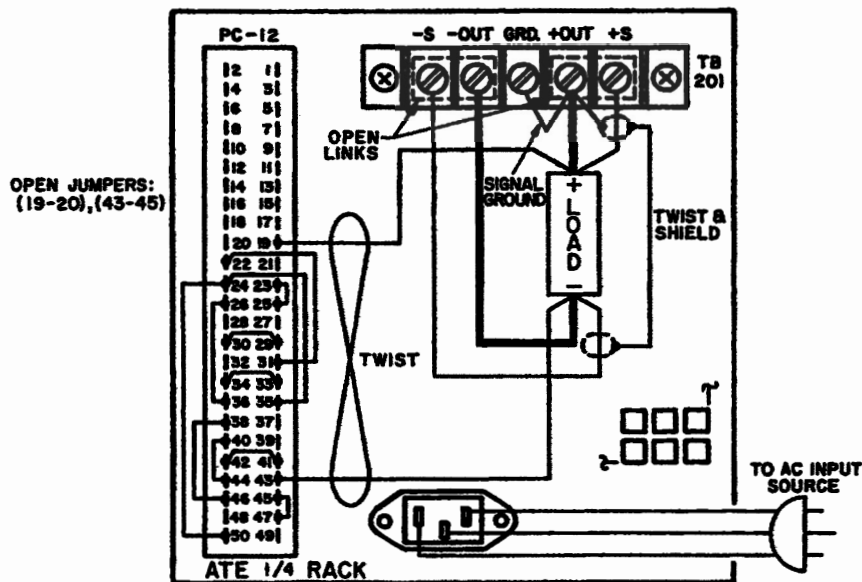


FIG. 3-5 LOAD CONNECTION, METHOD III.

- 3-26 Since the output capacitor is now removed from the output terminals of the power supply and directly connected to the load, it may be possible in some cases that it can no longer perform its bypass function as far as the *power supply* is concerned. If oscillations are observed at the output or at the load, C_O should be left connected in the power supply (by connecting (1)-(3) and (5)-(7) on TB201). The load should be decoupled with another high quality capacitor of a value equal to or greater than C_O . Alternately, good results can sometimes be achieved by disconnecting the internal C_O and operating with an externally bypass capacitor across the load exclusively. For pulsed loads which drop to zero current during the "off" period, any external output capacitor should be paralleled with a "bleeder" resistor. The value of this resistor is determined by the value of the external capacitor, the desired response and the amount of output current which can be sacrificed. As a minimum, the RC time constant of the external output capacitor (C_O ext.) and the bleeder resistor (R_O ext.) should be comparable with the internal output capacitor (C_O) and the bleeder resistor (R_O), so that:

$$R_O \text{ ext. } C_O \text{ ext.} \leq R_O C_O$$

NOTE: $C_O = C208$ and $R_O = R11$ in 1/2, 3/4 and full-rack ATE Power Supplies, $C_O = C6$, $R_O = R203$ in 1/4 rack ATE Power Supplies (SEE "MAIN SCHEMATIC, "SECTION VI, FIG. 6-3 FOR VALUES).

NOTE: There is, unfortunately, no "best" method for interconnecting the load and the power supply. Individual applications, location and nature of the load require careful analysis in each case. Grounding a single point in the output circuit is of great importance. It is hoped that the preceding paragraphs will be of some assistance in most cases. For help in special applications or difficult problems, consult directly with Kepco's Application Engineering Department.

3-27 VOLTAGE MODE OPERATION (FRONT PANEL CONTROL)

- 3-28 Once the load is connected to the output terminals of the ATE Power Supply and safety, as well as grounding rules have been applied as described (refer to par's. 3-1 through 3-26), power supply operation can proceed:

- 1) Turn VOLTAGE CONTROL completely counterclockwise. Turn A-C POWER SWITCH/CIRCUIT BREAKER "on" (The voltage mode VIX indicator should be "on"). Observe front panel VOLTMETER and adjust VOLTAGE CONTROL to the desired output voltage level. Turn a-c power "off".

- 2) Turn the current control completely counterclockwise.
- 3) Apply a short circuit across the output terminals of the ATE Power Supply. Turn A-C POWER SWITCH/CIRCUIT BREAKER "on" (the current mode VIX indicator should be "on").
- 4) Observe front panel CURRENT METER and adjust CURRENT CONTROL to the required load current value, plus 2%. In voltage mode operation, this setting will determine the voltage/current "crossover" point. Turn A-C POWER SWITCH/CIRCUIT BREAKER "off".
- 5) Remove the short circuit from the output terminals. The power supply is now ready for operation.

3-29 CURRENT MODE OPERATION (FRONT PANEL CONTROL)

Note: Refer to Section I, par. 2-14 for fast mode conversion of the ATE.

3-20 Apply all safety and output grounding rules as described in previous paragraphs (refer to par's. 3-1 through 3-16). Proceed as follows:

- 1) **BEFORE** connecting the load to the power supply output terminals: Turn A-C POWER SWITCH/CIRCUIT BREAKER "on" (the voltage mode VIX indicator should be "on"). Observe the front panel VOLTMETER and adjust the VOLTAGE control to the required compliance (output voltage) level. Turn A-C POWER SWITCH/CIRCUIT BREAKER "off" and connect a short circuit to the output terminals of the ATE.
- 2) Turn A-C POWER SWITCH/CIRCUIT BREAKER "on". Observe the front panel CURRENT METER and adjust CURRENT control to the desired value. The current mode VIX indicator should go "on" to indicate that the power supply is truly in the current mode of operation. Turn A-C POWER SWITCH/CIRCUIT BREAKER "OFF".
- 3) Remove the short circuit, connect the load and turn A-C POWER SWITCH/CIRCUIT BREAKER "on". If the ATE does not enter the current mode (as indicated by the front panel "VIX" indicator), the load resistance (R_L) is too high. *Either* R_L must be *decreased*, *or* the VOLTAGE CONTROL setting must be *increased*, *or* the CURRENT CONTROL setting must be *decreased*. The ATE is now ready for operation.

3-31 OVERVOLTAGE CROWBAR, SETUP AND CHECK

3-32 The overvoltage crowbar circuit protects the load from momentary or long-term overvoltages. The crowbar SCR conducts across the power supply output, and the A-C POWER SWITCH/CIRCUIT BREAKER is tripped if such overvoltages occur. The setting of the front panel LEVEL control determines the "threshold" between the actual operating voltage of the power supply and the level at which the crowbar circuit will be activated. The LEVEL control can be set from 3 volts to 110% of the rated output voltage. The LEVEL control may be adjusted very close to the operating voltage (minimum threshold = 2% of rated output voltage or 0.5 volt, whichever is greater). The operation of the crowbar circuit can be checked *without* actually triggering the crowbar. All operating controls are accessible at the front panel (refer to FIG. 2-2, SECTION II).

3-33 SETUP AND CHECK PROCEDURE

- 1) Without connecting the load to the power supply turn LEVEL control *fully clockwise*.
- 2) Turn A-C POWER SWITCH/CIRCUIT BREAKER "on", observe the front panel VOLTMETER, and set VOLTAGE CONTROL to the desired value *at which the crowbar must trigger* (NOT to the actual operating voltage).
- 3) Depress the DISABLE button (and keep it depressed) while turning the LEVEL control *counterclockwise*, until the crowbar INDICATOR energizes (simulated crowbar action).
- 4) Turn VOLTAGE CONTROL slightly *counterclockwise* to *the actual operating voltage*. Release the DISABLE button.

NOTE: This last adjustment established the "threshold" i.e., the difference voltage between the output voltage and the voltage at which the power supply will "crowbar". For minimum "false triggering" use the largest threshold your load can tolerate.

- 5) To check the adjusted crowbar trigger level, depress DISARM push button and turn VOLTAGE CONTROL *clockwise*. Observe front panel VOLTMETER and note the voltage at which the crowbar INDICATOR lamp energizes. Correct LEVEL adjustment as described above if necessary. Reduce power supply output voltage to its operating value.

NOTE:1) Readjustment of the LEVEL control may be required after load and power supply have reached thermal equilibrium.

NOTE:2) If an *exact* crowbar point at a *remote load* must be established, *remote error sensing*, as described in par. 3-21 must be used.

3-34 INTRODUCTION TO REMOTE CONTROL OF THE ATE OUTPUT

3-35 GENERAL (REFER TO THE FOLD-OUT DRAWING AT THE END OF THIS SECTION. For local (front panel) control, the VOLTAGE CONTROL CHANNEL, the CURRENT CONTROL CHANNEL and the OVERVOLTAGE PROTECTOR of the ATE are locally adjusted by means of their respective front panel controls, with the jumper connections on the REAR PROGRAMMING CONNECTOR as shown. The internal control voltages for the VOLTAGE and CURRENT CONTROL CHANNELS are created by their individual control amplifiers, while the OVERVOLTAGE PROTECTOR "crowbar level" is adjusted by a potentiometer, connected across the (+)15 volt supply.

3-36 By disconnecting the internal control sources at the REAR PROGRAMMING CONNECTOR and substituting remote control circuitry, the ATE VOLTAGE and CURRENT CONTROL CHANNELS, as well as the OVERVOLTAGE PROTECTOR crowbar level, can be programmed externally. Control can be exercised individually or simultaneously on all three programming channels, although individual programming will be illustrated and discussed in the following paragraphs.

3-37 PROGRAMMING THE VOLTAGE CONTROL CHANNEL

3-38 GENERAL. The ATE output voltage which is controlled by a front panel VOLTAGE CONTROL in the Local control mode, can be remotely controlled by disconnecting the internal VOLTAGE CONTROL AMPL at the REAR PROGRAMMING CONNECTOR (PC-12) and substituting an external control signal at the input of the VOLTAGE COMPARISON AMPL with reference to the PROGRAMMING COMMON. For this "direct drive" method of voltage control, the control signal must be a positive going 0-10 volt d-c voltage source, able to supply at least 1 mA of control current. An application, demonstrating this control method is described in PAR. 3-41, and illustrated in FIG. 3-6.

3-39 Since all terminals of two independent preamplifiers (PREAMP "A", PREAMP "B") are available at the REAR PROGRAMMING CONNECTOR, output voltage control can be exercised in many other ways. Each preamplifier can be used as an uncommitted operational amplifier using the applicable transfer functions. The *static offsets* of each preamplifier can be zeroed with the built-in ZERO controls. The *offset variations* for each preamplifier, versus the various influence quantities, are specified in Section I of this manual (Refer to Table 1-2).

3-40 Making use of the ATE preamplifiers allows the user to accommodate a variety of programming sources. The basic principle to keep in mind is that a 0 to 10 volts, 1 mA signal, presented at the VOLTAGE COMPARISON AMPL input, will program the ATE output over its rated output voltage range. If the available programming input source does not have the required amplitude, or if the required control current cannot be supplied, the ATE preamplifiers can be used to adapt most input sources and provide the required parameters. The examples presented in the following paragraph should suffice to outline the wide variety of programming circuits which are possible with the ATE power supply.

3-41 OUTPUT VOLTAGE CONTROL WITH AN EXTERNAL 0-10 VOLT D-C CONTROL SIGNAL

3-42 An interesting example of the direct drive method of voltage programming is the control of the ATE output voltage by means of a Kepco Digital Programmer. The IEEE 488 bus compatible Kepco SN-488 system for example, responds to digital input data and can be addressed either by a computer, or manually. The output signal of the SN-488 is a voltage from zero to 10 volts or zero to 1 volt and constitutes the input program for the ATE. Since the SN-488 has two independent outputs (A,B), only one output is needed for voltage control, while the other may be used to control the ATE output current (See par. 3-60).

3-43 PROCEDURE (VOLTAGE CONTROL WITH AN EXTERNAL 0-10 VOLT, 1 mA D-C CONTROL SIGNAL)

- 1) Connect the EXT. CONTROL VOLTAGE, (SN-488 DIGITAL PROGRAMMER), the LOAD and the PRECISION VOLTMETER (M1) to the ATE as shown in FIG. 3-6.
- 2) With the SN-488 at zero, turn the ATE "on".
- 3) Vary the input voltage from the SN-488 from zero to 10 volts. The ATE output voltage, as read-out on M1, should vary from approximately zero volts to its maximum rated output voltage. Return the SN-488 output to zero volts.

3-44 CALIBRATION (Refer to Section II, FIG. 2-1 for the location of all internal controls).

- 1) Check the PRECISION VOLTMETER (M1) for "zero" reading and correct, if necessary, with the ATE E_0 ZERO control.
- 2) Set the MODEL SN-488 input to 10 volts. Observe M1 and calibrate the ATE output voltage to the exact maximum rated output voltage by means of the SN-488 calibration control.
- 3) Set the MODEL SN-488 output to "zero" again and check the previously calibrated zero point on M1. Correct with the ATE E_0 ZERO control if required.
- 4) Set the ATE front panel CURRENT CONTROL according to your load requirements, following the procedure given in PAR. 3-28 (2,3,4,5), or use one of the output current programming circuits for remote control of the output current as described in PAR.'s 3-60 or 3-64.

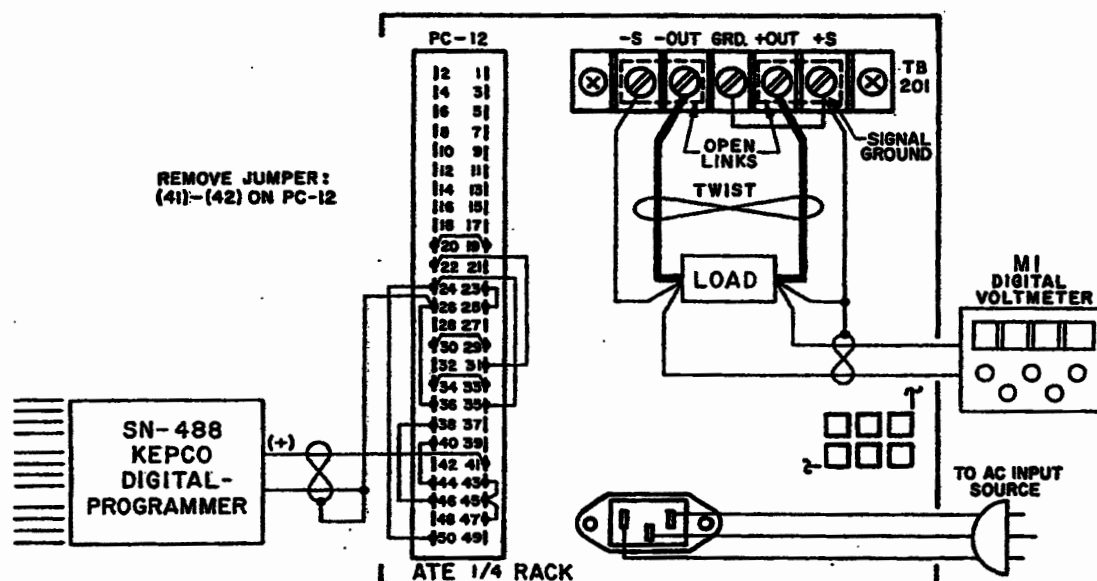


FIG. 3-6 OUTPUT VOLTAGE CONTROL WITH AN EXTERNAL (0-10V, 1 mA) D-C CONTROL SIGNAL.

3-45 VOLTAGE CONTROL WITH A TWO-TERMINAL RESISTANCE

- 3-46 As mentioned previously (refer to PAR.'s 3-39, 3-40) a wide variety of external programming sources can be used to control the ATE voltage channel. By means of one or both of the ATE's uncommitted preamplifiers, the external control potential can be amplified, inverted and/or summed with an internal d-c signal. Alternately, the preamplifier can be used to perform remote, two-terminal resistance programming of the ATE voltage channel. As seen in FIG. 3-7, the INT. REFERENCE SOURCE (6.2V @ 1 mA) is connected to PREAMP "A" and the external input/feedback components are calculated to produce the required 0 to 10 volts control signal from the preamplifier output.

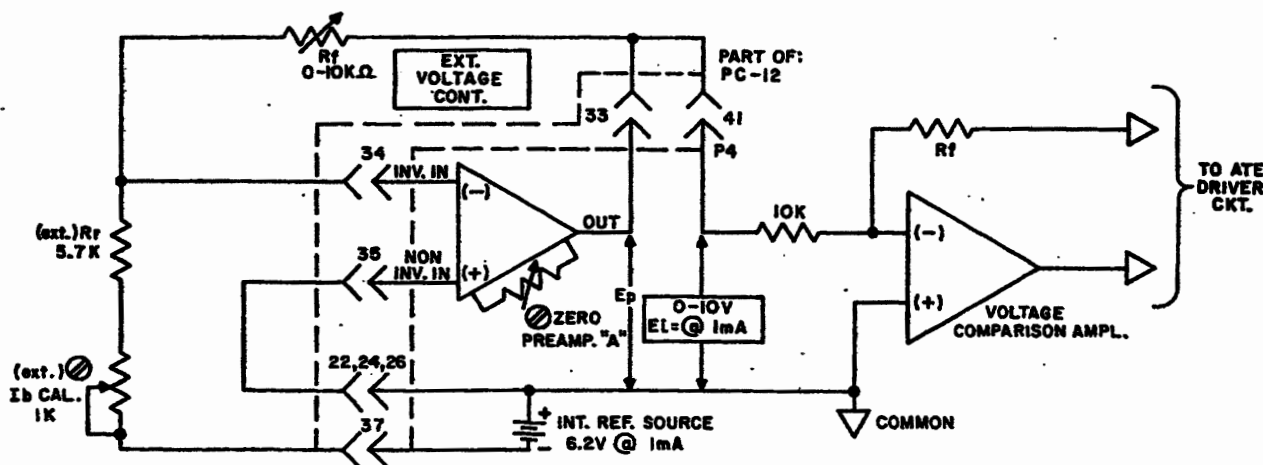


FIG. 3-7 TWO-TERMINAL RESISTANCE PROGRAMMING OF THE VOLTAGE CHANNEL, USING PREAMP "A" AND THE INTERNAL REFERENCE SOURCE.

- 3-47 (Refer to FIG. 3-7). The preamplifier functions here in the inverting configuration, producing its output voltage (E_p , which is made equal to the required control voltage " E_i ") according to the equation:

$$E_p = \frac{E_{ref}}{R_r} \times R_f \quad (\text{Eq. 1})$$

where:

- R_r = Ext. Reference resistor
 E_p = Preamplifier output voltage equal to the required control voltage (E_i)
 E_{ref} = Internal Reference Voltage 6.2V
 R_f = Ext. Feedback Resistor (Voltage Control)

Since the ratio E_{ref}/R_r may be expressed as a control current ($E_{ref}/R_r = I_b$), Eq. 1 can be simplified to read:

$$E_p = E_o (\text{Preamplifier}) = I_b R_f \quad (\text{Eq. 2})$$

- 3-48 If I_b is selected to be 1 mA for example (Control Currents from approximately 0.1 to 1 mA can be selected), a 0 to 10K ohm reostat, decade or other variable resistance will produce the required 0–10 volt control potential and thereby control the ATE output voltage from zero to its maximum rated value. If a 0–10K ohm voltage control resistance is *not* available, the control current (I_b) can be changed to accommodate the available resistance value, making use of the preamplifier output equation (Eq. 2). If, for example, a 15K ohm precision potentiometer is available, the control current (I_b) must be: $10V/15K\Omega = 0.66$ mA. Since the built-in INT. REF. SOURCE is a (nominal) 6.2 volt, the external R_r must be: $6.2V/0.66 \text{ mA} \approx 9.4K\Omega$, which can be made up from a $8K\Omega$ fixed, and a $2K\Omega$ trim resistor (I_b CAL.).

3-49 PROCEDURE, VOLTAGE CONTROL WITH A TWO-TERMINAL RESISTANCE

- 1) Connect the external components, the LOAD and the PRECISION VOLTMETER (M1) to the ATE as shown in FIG. 3-8.
- 2) With the EXT. VOLTAGE CONTROL at zero ohms, turn the ATE "on".
- 3) Vary the EXT. VOLTAGE CONTROL from zero ohms to its maximum resistance. The ATE output voltage, as read out on M1, should vary from approximately zero volts to its rated maximum value. Return the EXT. VOLTAGE CONTROL to its zero ohm position.

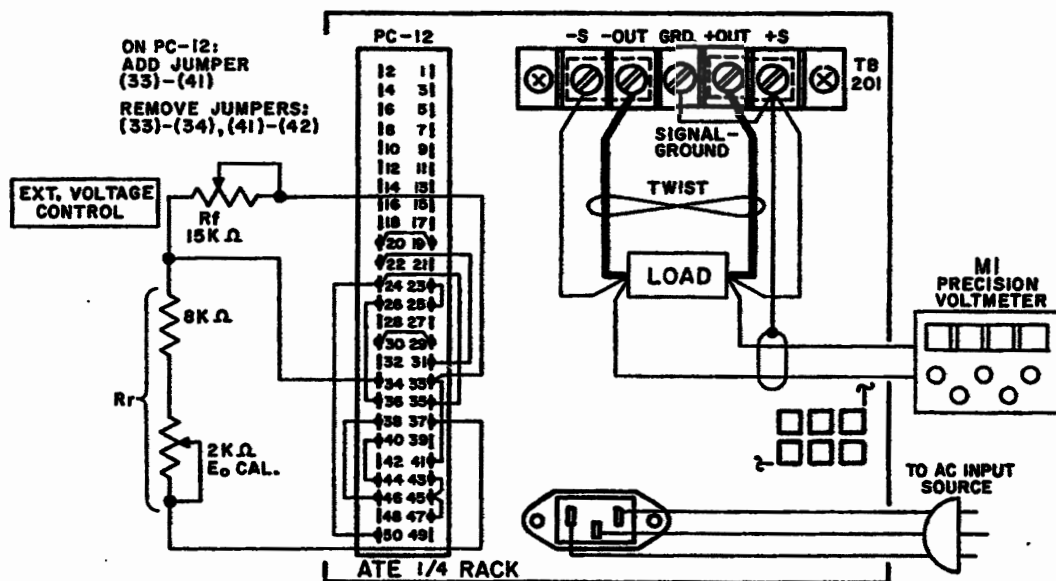


FIG. 3-8 CONNECTIONS FOR VOLTAGE CONTROL WITH A TWO-TERMINAL RESISTANCE.

3-50 CALIBRATION (Refer to Section II, FIG. 2-1 for the location of *all* internal controls).

- 1) Check the PRECISION VOLTMETER (M1) for "zero" reading and correct, if necessary, with the PREAMP "A" ZERO control.
- 2) Set EXT. VOLTAGE CONTROL to its maximum resistance. Observe M1 and calibrate the ATE output voltage to the exact maximum rated value by adjusting the EXT. I_b CAL. control.
- 3) Set EXT. VOLTAGE CONTROL to zero ohms again, re-check the previously calibrated zero point on M1 and correct with the PREAMP "A" ZERO control if required.
- 4) Set the ATE front panel CURRENT CONTROL according to the LOAD requirements, following the procedure given in PAR. 3-28 (2,3,4,5) or use one of the output current programming circuits for remote control of the output current as described in PAR.'s 3-60 or 3-64. Set the overvoltage protector as described in PAR. 3-31.
- 5) Operation can now proceed. Check the ATE power supply output, by means of an oscilloscope, for dynamic stability and output ripple amplitude. Refer to PAR. 3-6 if high ripple is present. If the power supply output is dynamically unstable (oscillations), review the paragraphs on power supply/load interface and grounding (PAR.'s. 3-6 through 3-26). Adjust the E_o LAG control if the ATE is configured for fast mode operation.

3-51 VOLTAGE CONTROL WITH A HIGH IMPEDANCE CONTROL SOURCE

- 3-52** External control sources which cannot supply at least 100 μ A of control current can be best accommodated by using one of the preamplifiers in the non-inverting configuration. The control source is connected to the ATE as shown in FIG. 3-9.

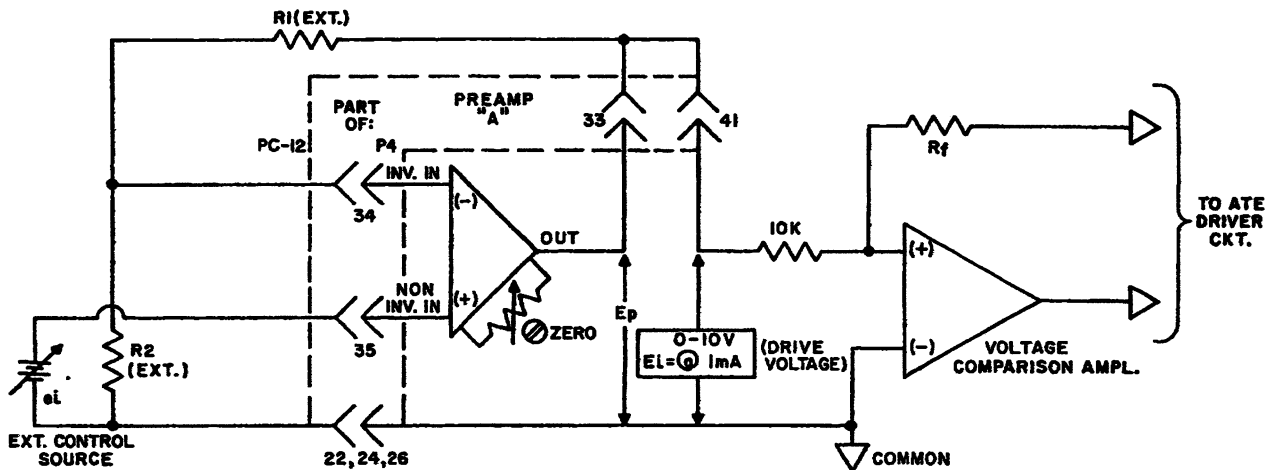


FIG. 3-9 USING PREAMP "A" TO GENERATE THE 0-10V @ 1 mA CONTROL POTENTIAL FROM A HIGH IMPEDANCE SOURCE.

- 3-53** (Refer to FIG. 3-9). The preamplifier output voltage (E_p) is made equal to the required drive voltage " E_i " by calculating the external resistors (R_1 , R_2) for the required gain, using the equation:

$$E_i = E_p = e_i \times \frac{R_1 + R_2}{R_2} \quad (\text{Eq. 3}), \quad \text{where:} \quad \begin{array}{ll} E_p & = \text{Preamplifier Output Voltage,} \\ & \text{equal to the required drive} \\ & \text{voltage } (E_i) \\ e_i & = \text{Available control source.} \\ R_1, R_2 & = \text{External feedback resistors.} \end{array}$$

- 3-54** If, for example, a 0 to 0.5 volt control source is available, the preamplifier gain, and therefore the ratio ($R_1 + R_2$) over R_2 must equal 10/0.5 = 20, so that R_1 , R_2 can be 38K Ω and 2K Ω respectively. If only an impedance match is needed, i.e., if a 0-10 volt source is available, but cannot deliver 1 mA of control current, R_1 can be replaced by a short circuit and the preamplifier operates as a voltage-follower.

3-55 PROCEDURE, VOLTAGE CONTROL WITH A HIGH IMPEDANCE CONTROL SOURCE

- 1) Connect the external components, the LOAD and the PRECISION VOLTMETER (M1) to the ATE as shown in FIG. 3-10.
- 2) With the EXT. CONTROL SOURCE at zero, turn the ATE "on".
- 3) Vary the EXT. CONTROL SOURCE from zero to its maximum output level. The ATE output voltage, as read out on M1, should vary from approximately zero volts to its rated maximum value. Return the EXT. CONTROL SOURCE to its zero position.

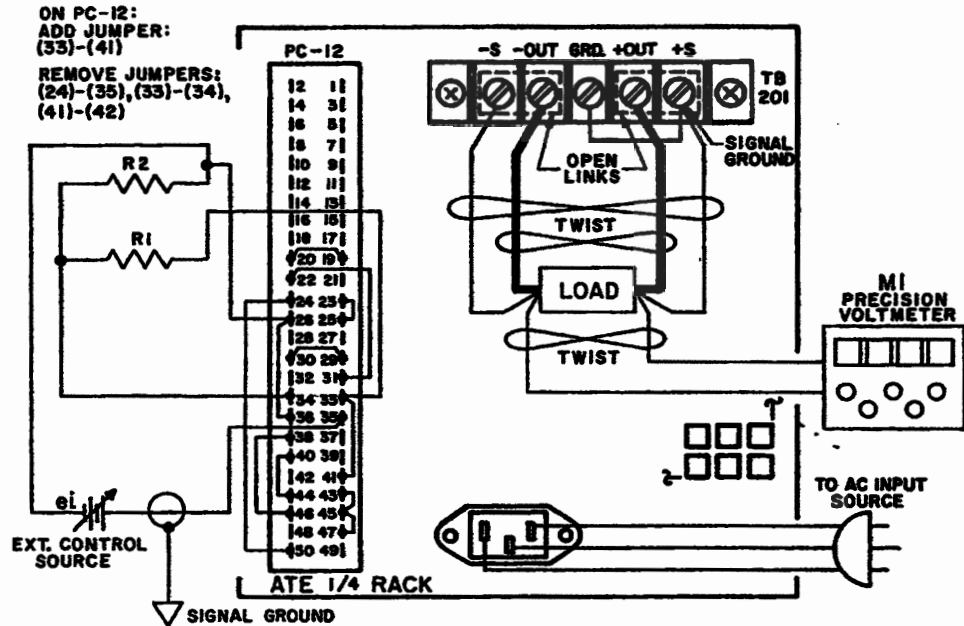


FIG. 3-10 CONNECTIONS FOR VOLTAGE CONTROL WITH A HIGH IMPEDANCE INPUT SOURCE.

3-56 CALIBRATION (Refer to Section II, FIG. 2-1 for the location of *all* internal controls).

- 1) Check the PRECISION VOLTMETER (M1) for "zero" reading and correct, if necessary, with the PREAMP "A" ZERO control.
- 2) Set EXT. CONTROL SOURCE to maximum output. Observe M1 and calibrate the ATE output voltage to the exact maximum rated value by adjusting the Calibrating Control in the EXT. CONTROL SOURCE.
- 3) Set EXT. CONTROL SOURCE to zero again, re-check the previously calibrated zero point on M1 and correct with the PREAMP "A" ZERO control if required.
- 4) Set the ATE front panel CURRENT CONTROL according to the LOAD requirements, following the procedure given in PAR. 3-28 (2,3,4,5), or use one of the output current programming circuits for remote control of the output current as described in PAR.'s 3-60 or 3-64. Set the overvoltage protector as described in PAR. 3-31.
- 5) Operation can now proceed. Check the ATE power supply output, by means of an oscilloscope, for dynamic stability and output ripple amplitude. Refer to PAR. 3-6 if high ripple is present. If the power supply output is dynamically unstable (oscillations) review the paragraphs on power supply/load interface and grounding (PAR.'s 3-6 through 3-26). Adjust the E_0 LAG control, if the ATE is configured for fast mode.

3-57 PROGRAMMING THE CURRENT CONTROL CHANNEL

3-58 GENERAL. The ATE output current, controlled by a front panel CURRENT CONTROL rheostat in the local control mode, can be remotely controlled by disconnecting the 15V bias from the non-inverting input of the EXT. CURRENT COMPARISON AMPL at the REAR PROGRAMMING CONNECTOR, and applying a 0 to 1 volt external control signal with reference to the ATE COMMON terminal. Since the non-inverting input of the EXT. CURRENT COMPARISON AMPL is used, only the small amplifier bias current must be supplied by the external control source. IN ALL CURRENT PROGRAMMING APPLICATIONS, THE FRONT PANEL CURRENT CONTROL SETTING OF THE ATE ACTS AS A "BACK-UP" CURRENT LIMIT AND MUST BE SET SLIGHTLY HIGHER THAN THE REQUIRED MAXIMUM OUTPUT CURRENT. An application, demonstrating this control method is described in PAR. 3-60 and illustrated in FIG. 3-11.

3-59 If the available programming source does not have the required amplitude or polarity, one of the ATE's uncommitted preamplifiers may be used to scale the programming source to the required control potential (0 to 1 volt), or provide the correct polarity. Typical examples of some possible applications are provided in the following paragraphs.

3-60 OUTPUT CURRENT CONTROL WITH AN EXTERNAL 0 TO 1V CONTROL SIGNAL

3-61. An interesting example of direct drive method is the control of the ATE output current by means of a Kepco SN-488 Digital Programmer. The SN-488 responds to digital input signals, is IEEE-488 bus compatible and can be addressed either by a computer or manually by means of a keyboard. The attenuated output signal of the SN-488 is a voltage from zero to 1 volt and constitutes the input program for the ATE current channel. Since the SN-488 has two independent outputs (A, B) and only one is needed for current control, the other output may be used to control the ATE output voltage (See par. 3-41).

3-62 PROCEDURE (OUTPUT CURRENT CONTROL WITH AN EXTERNAL 0-1 VOLT, D-C CONTROL SIGNAL)

- 1) Connect the EXT. CONTROL VOLTAGE, (Model SN-488 Digital Programmer), the LOAD and the PRECISION VOLTMETER (M1) to the ATE as shown in FIG. 3-11.

Note: The output current value can be measured directly by means of a suitable ammeter in series with the load or, as indicated in FIG. 3-11, indirectly by means of the precision voltmeter (M1) across a current measuring resistor (R_M). R_M should be selected such that a convenient range on the precision voltmeter can be used, e.g., for a 10 ampere output current, use a 0.1 ohm resistor to produce a one volt full scale reading. If an electronic voltmeter is used, it should be battery-operated to avoid ground loops.

- 2) With the SN-488 output at zero, turn the ATE "on".
- 3) Vary the input voltage from the SN-488 from zero to 1 volt. The ATE output current, as read-out on M1, should vary from approximately zero volts to its maximum rated value. Return the SN-488 output to zero volts.

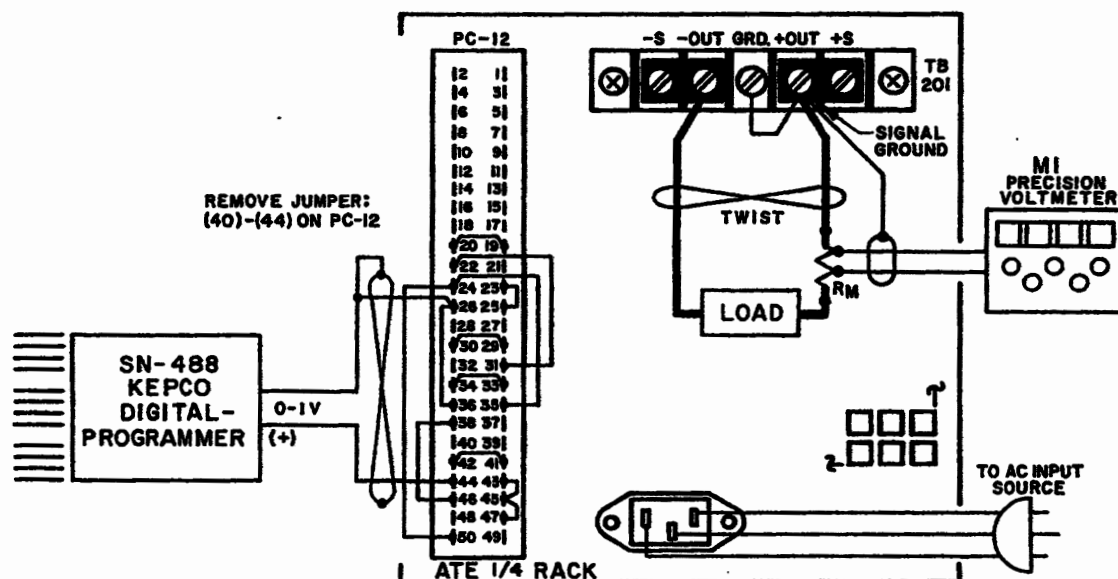


FIG. 3-11 CONNECTIONS FOR OUTPUT CURRENT CONTROL WITH A 0-1 VOLT CONTROL SIGNAL (KEPCO SN-488 DIGITAL PROGRAMMER).

3-63 CALIBRATION (Refer to Section II, FIG. 2-1 for the location of all internal controls).

- 1) Check the PRECISION VOLTMETER (M1) "zero" reading and correct, if necessary, with the ATE I_O ZERO control.
- 2) Set the Model SN-488 output to 1 volt. Observe M1 and calibrate the ATE output current to the exact maximum rated output current by means of the SN-488 calibration control.
- 3) Set the Model SN-488 output to "zero" again and check the previously calibrated zero point on M1. Correct with the ATE I_O ZERO control if required.
- 4) Set the ATE front panel VOLTAGE CONTROL according to your load requirements, or use one of the output VOLTAGE programming circuits for remote control of the output VOLTAGE as described in PAR's 3-37 through 3-56.

3-64 OUTPUT CURRENT CONTROL WITH A TWO-TERMINAL RESISTANCE

3-65 In this control mode, one of the ATE's preamplifiers is used in conjunction with one of the ATE's reference source, to produce the 0 to 1 volt control signal. The external feedback resistor (R_{cc}) serves as the two-terminal external current control.

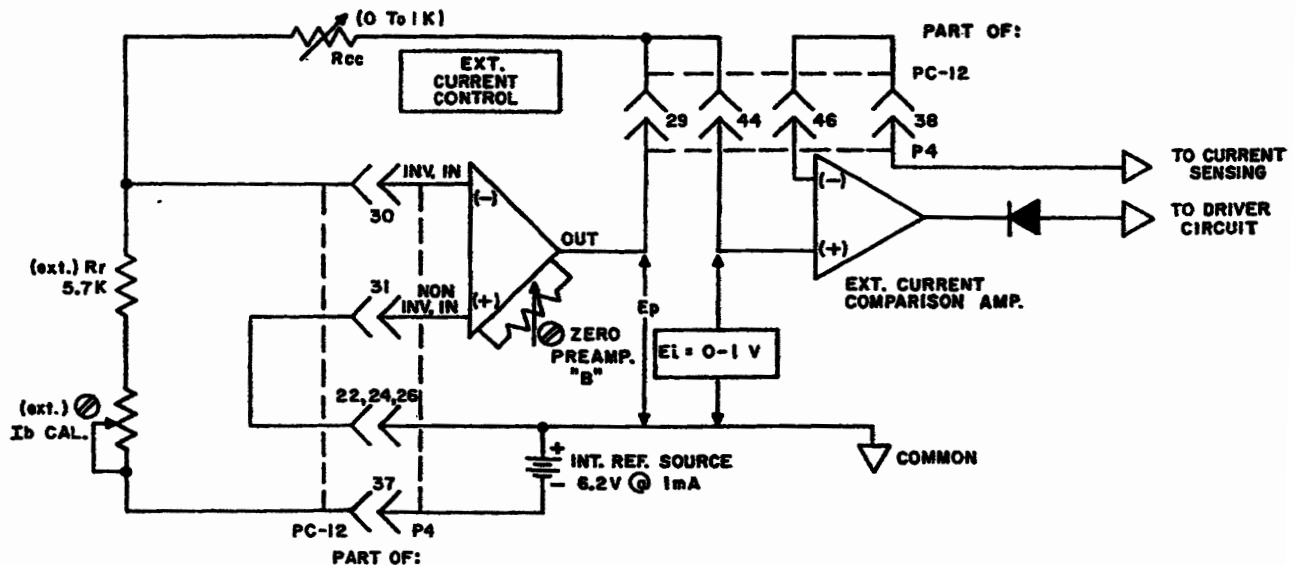


FIG. 3-12 TWO-TERMINAL RESISTANCE PROGRAMMING OF THE CURRENT CHANNEL USING THE PREAMPL AND THE INTERNAL REFERENCE SOURCE.

3-66 (Refer to FIG. 3-12). The preamplifier functions here in the inverting configuration, producing its output voltage (E_p , which is made equal to the required voltage " E_i ") according to the equation:

$$E_i = E_p = \frac{E_{ref}}{R_f} \times R_f \quad (\text{Eq. 1}),$$

where:

- R_f = Ext. Reference resistor
- E_p = Preamplifier output voltage equal to the required drive voltage (E_i)
- E_{ref} = Internal Reference Voltage 6.2V
- R_{cc} = Ext. Feedback Resistor (Current Control)

Since the ratio E_{ref}/R_f may be expressed as a control current: ($E_{ref}/R_f = I_b$), Eq. 1 can be simplified to read:

$$E_i = E_p = I_b R_f \quad (\text{Eq. 2})$$

3-67 If I_b is selected to be 1 mA for example (control current from approximately 0.1 to 1 mA can be selected), a 0 to 1K ohm, rheostat, decade or other variable resistance will produce the required 0-1 volt control potential and thereby control the ATE output current from zero to its maximum rated value. If a 0-1K ohm voltage control resistance is *not* available, the control current (I_b) can be changed to accommodate the available resistance value, making use of the preamplifier output equation (Eq. 2). If, for example, a 1.5K ohm precision potentiometer is available, the control current (I_b) must be: $1V/1.5K\Omega = 0.66$ mA. Since the built-in INT. REF. SOURCE is a (nominal) 6.2 volt, the external R_f must be: $6.2V/0.66$ mA $\approx 9.4K\Omega$ which can be made up from a $8K\Omega$ fixed, and a $2K\Omega$ trim resistor (I_b CAL.).

3-68 PROCEDURE, ATE OUTPUT CURRENT CONTROL WITH A TWO-TERMINAL RESISTANCE.

- 1) Connect the external components, the LOAD and the PRECISION VOLTMETER (M1) to the ATE as shown in FIG. 3-13. NOTE: The output current value can be measured directly by means of a suitable ammeter in series with the load or, as indicated in FIG. 3-13, indirectly by means of the precision voltmeter (M1) across a current measuring resistor (R_M). R_M should be selected such that a convenient range on the precision voltmeter can be used, e.g., for a 10 ampere output current, use a 0.1 ohm resistor to produce one volt full scale. If an electronic voltmeter is used, it should be battery operated to avoid ground loops.
- 2) With the EXT. CURRENT CONTROL at zero ohms, turn the ATE "on".
- 3) Vary the EXT. CURRENT CONTROL from zero ohms to its maximum resistance. The ATE output current, as read out on M1, should vary from approximately zero to its maximum value. Return the EXT. CURRENT CONTROL to its zero ohm position.

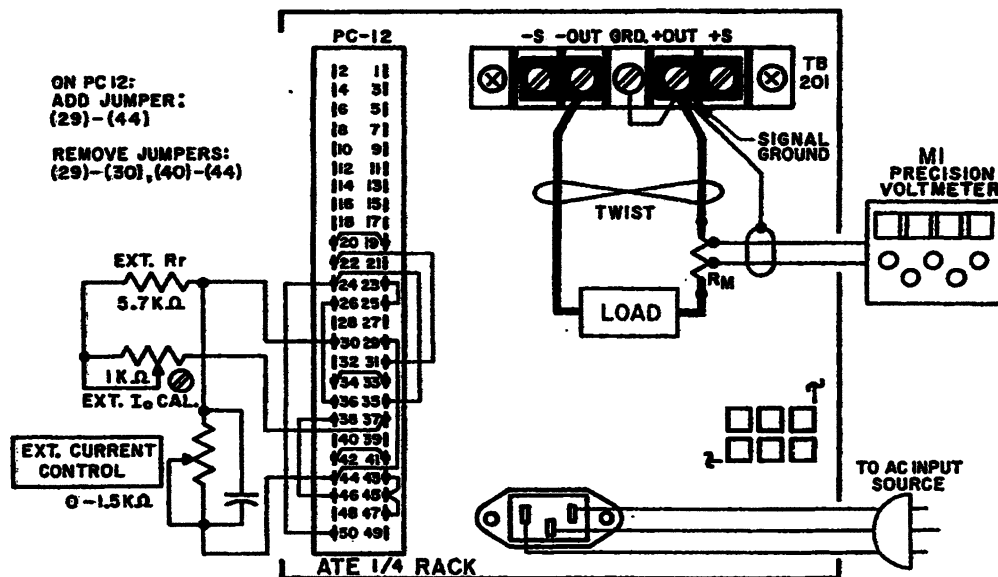


FIG. 3-13 CONNECTIONS FOR ATE OUTPUT CURRENT CONTROL WITH A TWO-TERMINAL RESISTANCE.

3-69 CALIBRATION (Refer to Section II, FIG. 2-1 for the location of all internal controls).

- 1) Check the PRECISION VOLTMETER (M1) for "zero" reading and correct, if necessary, with the PREAMP "B" ZERO CONTROL.
- 2) Set EXT. CURRENT CONTROL to its maximum resistance. Observe M1 and calibrate the ATE output current to the exact maximum rated value by adjusting the EXT. I_b CAL. control.
- 3) Set EXT. CURRENT CONTROL to zero ohms again, re-check the previously calibrated zero point on M1 and correct with the PREAMP "B" ZERO control if required.
- 4) Set the ATE front panel VOLTAGE CONTROL according to the LOAD requirements, or use one of the output Voltage programming circuits for remote control as described in PAR's 3-37 through 3-56.
- 5) Operation can now proceed. Check the output, by means of an oscilloscope across R_M , for dynamic stability and output ripple amplitude. Refer to PAR. 3-6 if high ripple is present. If the power supply output is dynamically unstable (oscillations), review the paragraphs on power supply/load interface and grounding PAR's 3-5 through 3-26).

3-70 PROGRAMMING THE OVERVOLTAGE PROTECTOR

3-71 The ATE overvoltage protector "crowbar level" is normally set by a front panel (screwdriver adjusted) control (SET LEVEL). This local operating mode has been previously described in PAR. 3-31. The crowbar level can be independently remotely controlled by setting the internal crowbar level to zero, turning the front panel SET LEVEL control completely counterclockwise and applying an external control signal (0 to 10V d-c) at the OVERVOLTAGE INPUT. In another programming mode, the crowbar level can be controlled in a "tracking mode", i.e., the 0–10 volt output voltage programming signal can simultaneously be applied to the overvoltage protector, so that the crowbar level automatically "tracks" the output voltage level of the ATE. Typical examples of these programming applications are presented in the following paragraphs.

3-72 REMOTE CROWBAR LEVEL CONTROL WITH AN EXTERNAL (0–10 VOLT D-C, 1 mA) SIGNAL

3-73 The ATE crowbar level can be remotely controlled by an external 0 to 10 volt, 1 mA d-c control source. One example of such a control source is the Kepco SN–488 Digital Programmer, which responds to digital input signals and can be controlled by computer or manually. The output of the SN–488 is from zero to 10 volts or 0 to 1 volt per channel and serves as the input to the ATE overvoltage protector.

3-74 PROCEDURE, CROWBAR LEVEL CONTROL WITH AN EXTERNAL SIGNAL

- 1) Turn front CROWBAR SET LEVEL completely counterclockwise.
- 2) Connect a substitute LOAD and the EXT. CONTROL SOURCE to the ATE as shown in FIG. 3-14. Set the EXT. CONTROL SOURCE to its maximum value.
- 3) Turn the ATE "on" and adjust the front panel VOLTAGE CONTROL to the desired *crowbar level*, i.e., the level at which the ATE is to shut down, *not* to your load voltage level.
NOTE: Monitor the power supply voltage either by means of the front panel meter, or if required, connect a precision voltmeter across the load.
- 4) Slowly reduce the level of the EXT. CONTROL SOURCE and note if the ATE shuts down at the correct crowbar level.
- 5) Turn the ATE front panel VOLTAGE CONTROL one turn counterclockwise and re-activate the ATE circuit breaker.
- 6) Test the previously set crowbar level again by turning the front panel VOLTAGE CONTROL slowly counterclockwise and observing the voltmeter. If the ATE does not shut down at the intended crowbar level, correct the setting of the EXT. CONTROL SOURCE, turn front panel VOLTAGE CONTROL one turn counterclockwise, re-activate the ATE circuit breaker and test again.
- 7) Turn the ATE front panel VOLTAGE CONTROL to the *exact* operating voltage which the LOAD requires.

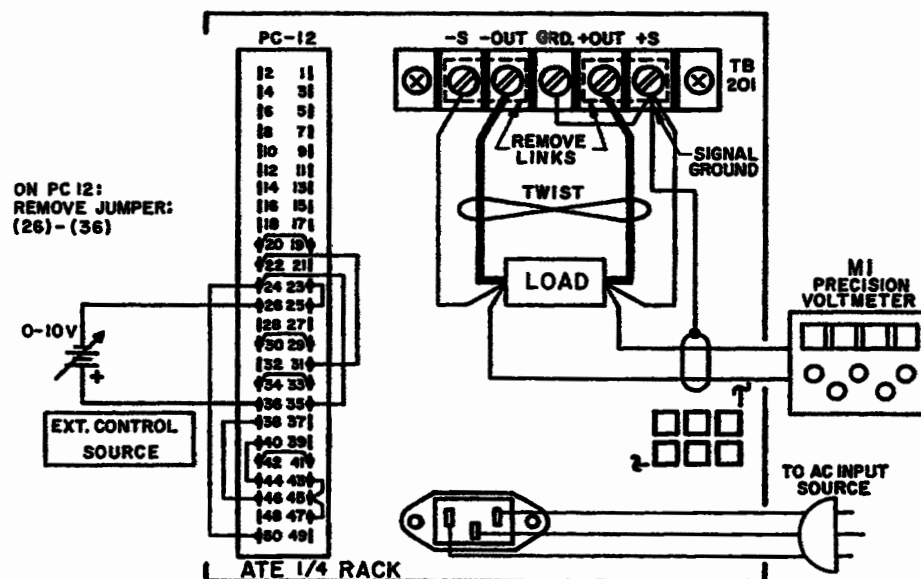


FIG. 3-14 REMOTE CROWBAR LEVEL CONTROL WITH AN EXTERNAL (0–10V D-C @ 1 mA) SIGNAL SOURCE.

3-75 AUTOMATIC (TRACKING) CONTROL OF THE CROWBAR LEVEL

3-76 In this application, an ATE's voltage output is remotely controlled by a 0-10 volt external programming signal which is simultaneously applied as a control signal to the overvoltage protector. As the ATE output voltage is now programmed by the external programming source throughout the specified range of the ATE, the crowbar level is "tracking" the output voltage, i.e., it always remains higher than the instantaneous ATE output voltage, thus providing automatic overvoltage protection throughout the range.

3-77 PROCEDURE, AUTOMATIC (TRACKING) CONTROL OF THE CROWBAR LEVEL, (ATE IN "SLOW" MODE)⁽¹⁾

- 1) Connect jumpers on the REAR PROGRAMMING CONNECTOR as indicated in FIG. 3-15 and connect switch (S1) as shown. Turn front panel CROWBAR LEVEL control fully counterclockwise.
- 2) Connect a substitute LOAD and the EXT. PROGRAMMING SOURCE as shown in FIG. 3-15.
- 3) To test the overvoltage protector action, turn ATE "on" and set output voltage by means of the EXT. PROGRAMMING SOURCE to a nominal value. Switch S1 from position A to B. The overvoltage protector will crowbar the ATE output. The CROWBAR indicator will be "on" momentarily and the ATE circuit breaker will trip.
- 4) Remove S1, and connect a jumper between (41)-(50) of PC-12. Connect the actual LOAD, reactivate the ATE circuit breaker and commence operation. Should erratic triggering occur in actual operation, set front panel CROWBAR LEVEL control slightly clockwise. This will increase the "threshold" voltage; that is, the difference voltage between the crowbar level and the operating voltage.

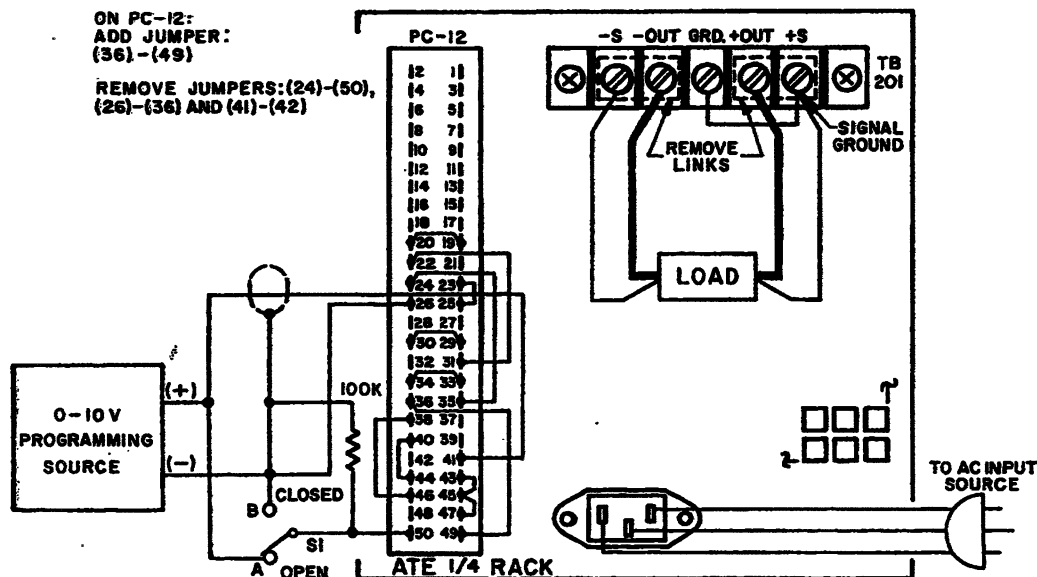


FIG. 3-15 CONNECTIONS FOR SIMULTANEOUSLY PROGRAMMING THE ATE OUTPUT VOLTAGE AND THE CROWBAR LEVEL (AUTOMATIC TRACKING).

⁽¹⁾ If the ATE is operated in the "FAST" mode, the following connections to PC-12 must be changed:

- 1) Do not add jumper (36)-(49)
 - 2) Do not remove jumper (24)-(50)
 - 3) Connect S1-Common and 100K to pin 36
 - 4) In paragraph, 3-77 Step 4, connect pins (36) and (41)
- All other descriptions are applicable for both, "FAST" and "SLOW" operating mode.

3-78 PROGRAMMING THE OUTPUT VOLTAGE AND THE OUTPUT CURRENT SIMULTANEOUSLY BY MEANS OF EXTERNAL, REMOTE CONTROL VOLTAGES

3-79 The output voltage, and the output current of the ATE power supply can be controlled simultaneously by means of remotely located variable voltage sources. The control voltages required to drive the voltage and current channels over the rated output range are 0 to 10 volt at 1 mA for the Voltage Channel and 0 to 1 volt for the Current Channel. An ideal programming source is the Kepco SN-488 Digital Programming System which provides two independent control voltages of the correct magnitude per programming card.

NOTE: FOR CONTROL SOURCES NOT WITHIN THE GIVEN SPECIFICATIONS, THE TWO PREAMPLIFIERS MAY BE USED, AS DESCRIBED IN PAR.'S 3-45 TO 3-56 AND 3-64 TO 3-69, TO SCALE THE AVAILABLE CONTROL VOLTAGE UP OR DOWN AS REQUIRED.

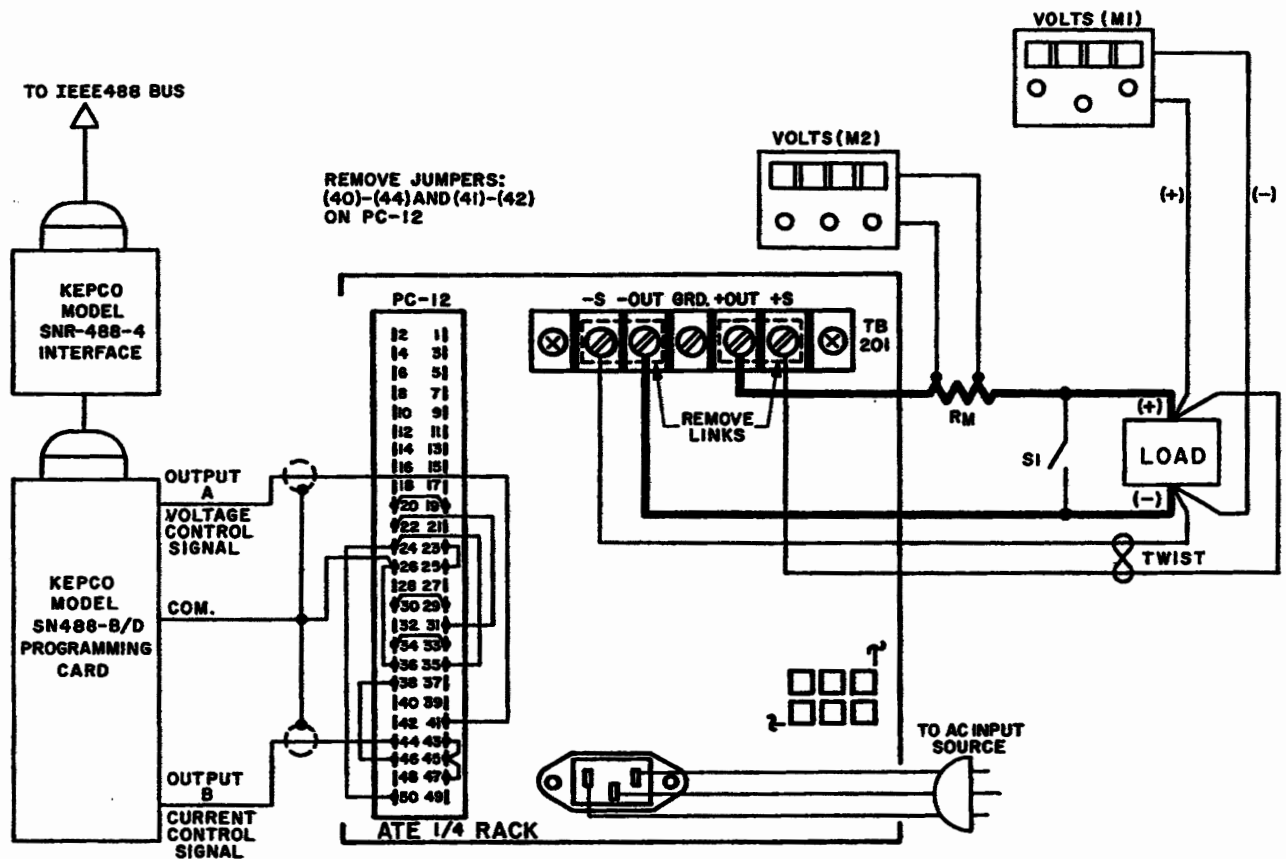


FIG. 3-16 CONNECTIONS FOR CONTROL OF OUTPUT VOLTAGE AND OUTPUT CURRENT BY MEANS OF EXTERNAL, VARIABLE CONTROL VOLTAGES, SUPPLIED BY THE KEPKO SN-488 DIGITAL PROGRAMMING SYSTEM.

3-80 PROCEDURE, OUTPUT CONTROL WITH EXTERNAL CONTROL VOLTAGES, SUPPLIED BY THE KEPCO SN-488

STEP 1: Connect external components, the LOAD, the PRECISION VOLTMETERS and the R_M as shown in FIG. 3-15.

STEP 2: With the VOLTAGE CONTROL SIGNAL (Channel A) at some non-zero value and the CURRENT CONTROL SIGNAL (Channel B) at zero, turn power supply "on".

STEP 3: Close S1. Vary the CURRENT CONTROL SIGNAL from zero to its maximum value. The power supply output current, as read-out on M2, should vary from approximately zero to the rated maximum output current. Leave CURRENT CONTROL SIGNAL at its maximum setting.

STEP 4: Open S1. Vary the VOLTAGE CONTROL SIGNAL from its initial setting to its maximum value. The output voltage, as read-out on M1, should vary from approximately zero to the rated maximum output voltage.

3-81 CALIBRATION, VOLTAGE CHANNEL

(Refer to Section II, FIG. 2-1 for the location of all internal power supply controls).

(Refer to your SN-488 system manual for the location of the system calibration controls).

- 1) Open S1. Set VOLTAGE CONTROL SIGNAL to zero. Check the PRECISION VOLTMETER (M1) for "zero" reading and correct, if necessary, with the " E_O ZERO" control.
- 2) Set VOLTAGE CONTROL SIGNAL to its maximum value. Observe M1 and calibrate the power supply output voltage to the exact maximum rated value by adjusting the external control voltage (Channel A, full-scale cal. control).
- 3) Set VOLTAGE CONTROL SIGNAL to zero again, re-check the previously calibrated zero point on M1 and correct with the power supply " E_O ZERO" control if required.
- 4) This concludes the calibration of the voltage channel. Leave the VOLTAGE CONTROL SIGNAL at approximately 1/3 its maximum setting.

3-82 CALIBRATION, CURRENT CHANNEL

Note: The output current value can be measured directly by means of a suitable ammeter in series with the load or, as indicated in FIG. 3-16, indirectly by means of the precision voltmeter (M1) across a current measuring resistor (R_M). R_M should be selected such that a convenient range on the precision voltmeter can be used, e.g., for one ampere output current, use a 0.1 ohm resistor to produce 100mV full scale. If an electronic voltmeter is used, it should be battery-operated to avoid ground loops.

- 1) Close S1. Set CURRENT CONTROL SIGNAL to zero. Check the PRECISION VOLTMETER (M2) for "zero" reading and correct, if necessary, with the power supply " I_O ZERO" control.
- 2) Set CURRENT CONTROL SIGNAL to its maximum value. Observe M2 and calibrate the power supply output current to the exact maximum rated value by adjusting the external control voltage (Channel B, full-scale cal. control).
- 3) Set CURRENT CONTROL SIGNAL to zero again, re-check the previously calibrated zero point on M2 and correct with the power supply " I_O ZERO" control if required. Open S1.

3-83 Operation can now proceed. Check the output, by means of an oscilloscope, for dynamic stability and output ripple amplitude. Refer to PAR. 3-6 if high ripple is present. If the power supply output is dynamically unstable (oscillations) review the paragraphs on power supply/load interface and grounding (PAR's 3-6 through 3-26).

3-84 THE USE OF THE "EXT. CURRENT COMPARISON AMPLIFIER" FOR GENERAL FEEDBACK CONTROL

3-85 The output of the ATE power supply is normally controlled either by the VOLTAGE COMPARISON, or by the INT. CURRENT COMPARISON AMPLIFIER, depending on the prevailing operating mode. A glance at the SIMPLIFIED SCHEMATIC DIAGRAM (See end of Section III), however, shows that a third control channel is available, via the EXT. CURRENT COMPARISON AMPLIFIER, which is normally "biased off". The use of this amplifier has previously been shown in an application for external current control (See par.'s 3-57 to 3-63. Since both inputs of the EXT. CURRENT COMPARISON AMPLIFIER are available at the REAR PROGRAMMING CONNECTOR (PC-12), it can be used advantageously to control the power supply output in response to feedback from such diverse physical phenomena as light, temperature, pressure, chemical reactions and the like. Since the (open loop) gain of this third control channel is very high, only minute feedback signals in combination with an appropriate external control are required.

3-86 The design of the required external circuitry is shown by means of the following example: A "target" object requires constant illumination, supplied by a lamp, which is connected at the power supply output. The feedback is supplied by a photo cell, the output of which is 0–100mV, depending on the light input. A "Brightness Control" is required to adjust various illumination levels.

Note: Depending upon the characteristics of both, lamp and photo-cell, fast mode operation of the ATE might be advisable.

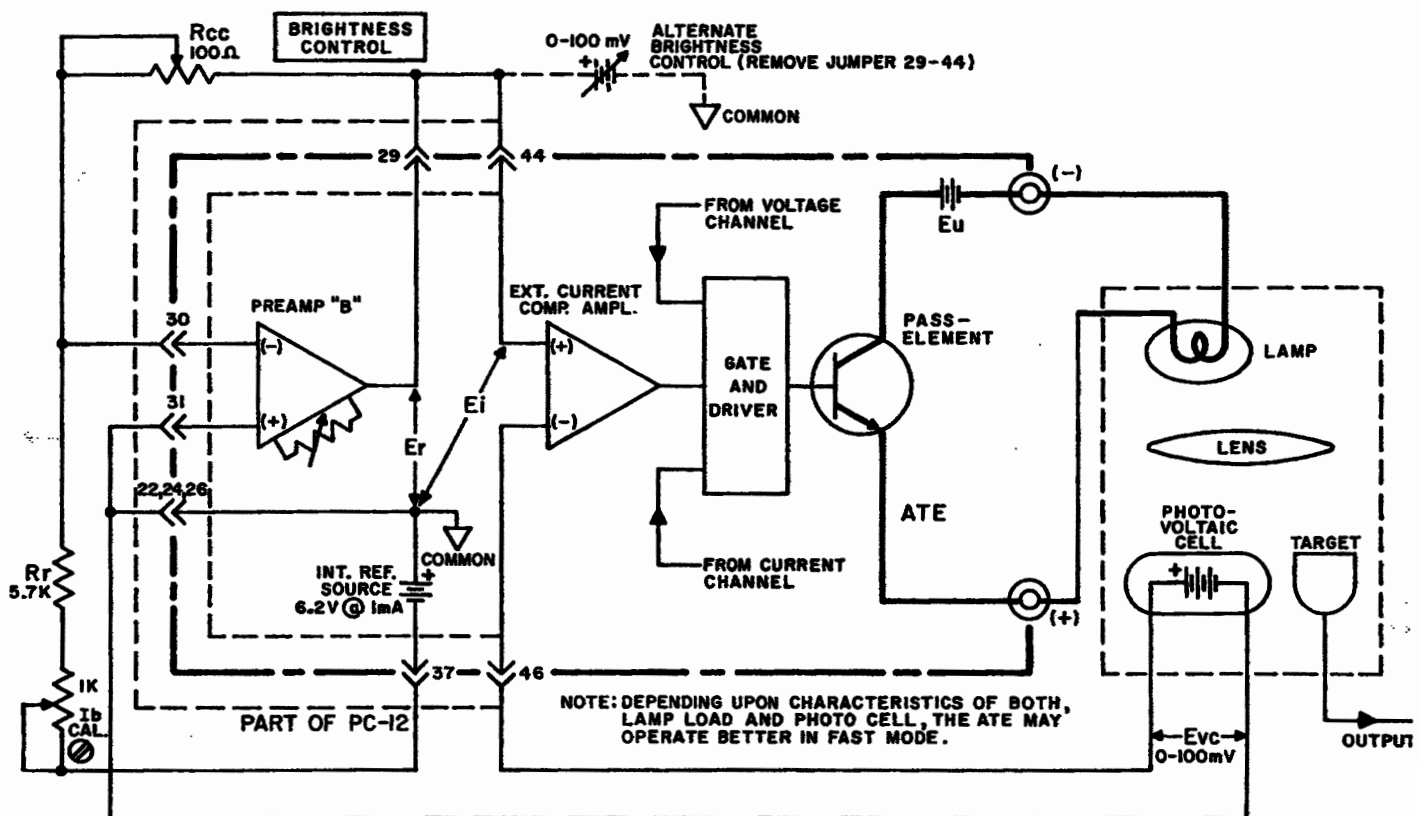


FIG. 3-17 ILLUMINATION CONTROL CIRCUIT WITH THE ATE POWER SUPPLY.

3-87 (Refer to FIG. 3-17). Assuming the ATE power supply is compatible with the requirements of the lamp load, the control circuit may be designed as shown with one of the ATE preamplifiers, or, an external control voltage source can be connected as indicated with the dashed lines in FIG. 3-17. The external source should be adjustable in the range from 0 to 100mV if illumination **control** is desired, or it should have a means of **calibration** if a fixed external source is used for a constant illumination level.

3-88 In the example, the ATE internal preamplifier (PREAMPL "B") is used to develop the control signal ($E_i = 0-100\text{mV}$), which is compared with the photo-cell output at the input to the EXT. CURRENT COMPARISON AMPLIFIER. The external reference resistor (R_r) and the control rheostat (R_{cc}) are selected to produce the control signal, similar to the example described in a previous application (See par. 3-64).

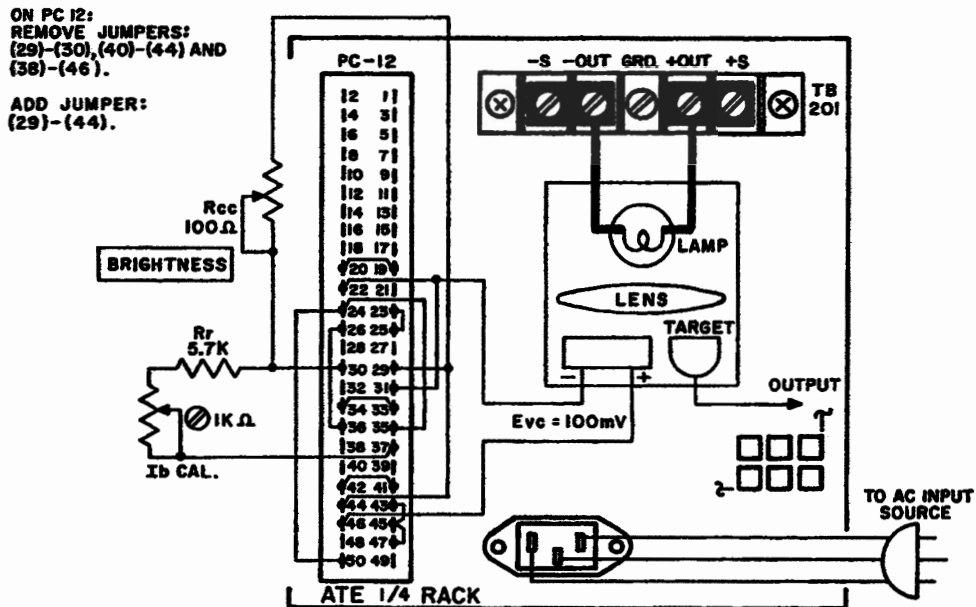


FIG. 3-18 CONNECTIONS FOR ILLUMINATION CONTROL, USING THE EXT. CURRENT COMPARISON AMPL.

3-89 PROCEDURE, ILLUMINATION CONTROL

- 1) Connect the external components to the ATE power supply as shown in FIG. 3-18.
- 2) Adjust both, ATE front panel VOLTAGE and CURRENT CONTROLS approximately 10% beyond the values required by the LAMP which represents the power supply load. Although the voltage or current channel are not in control in this application, the setting of the front panel output controls close to the lamp requirements serve as a "back-up" voltage and current limit should feedback control from the photo-cell be lost.
- 3) Turn the external BRIGHTNESS CONTROL to its mid-range and turn the ATE power supply "on". Vary the BRIGHTNESS CONTROL through its range and observe its effect on the LAMP. The lamp brightness should vary from zero (dark) to the approximate maximum brightness.

3-90 CALIBRATION

Turn the BRIGHTNESS CONTROL (R_{cc}) to its maximum clockwise position and adjust the external I_b CAL. control until the maximum desired brightness is measured.

3-91 MULTIPLE POWER SUPPLY AND SYSTEMS OPERATION

- 3-92 In applications where several power supplies are used it is often necessary to shut down *all* power supplies if a malfunction on a *single* supply forces its shut-down. Sometimes, a "PANIC BUTTON" arrangement is desired, where *all* system power supplies can be shut-down with a single manual switch or a common signal from a controller. ATE power supplies are ideally suited for multi-unit poeration since all necessary crowbar control circuit connections are terminated at the rear PROGRAMMING CONNECTOR (PC-12). The crowbar control connections in a multi-unit application can be externally wired to form a closed loop fault-detection circuit as shown in FIG. 3-19. Although only three ATE power supplies are shown, the control loop may be extended to include as many ATE power supplies as are required.

REFER TO PAR 3-11 AND FIG.3-31

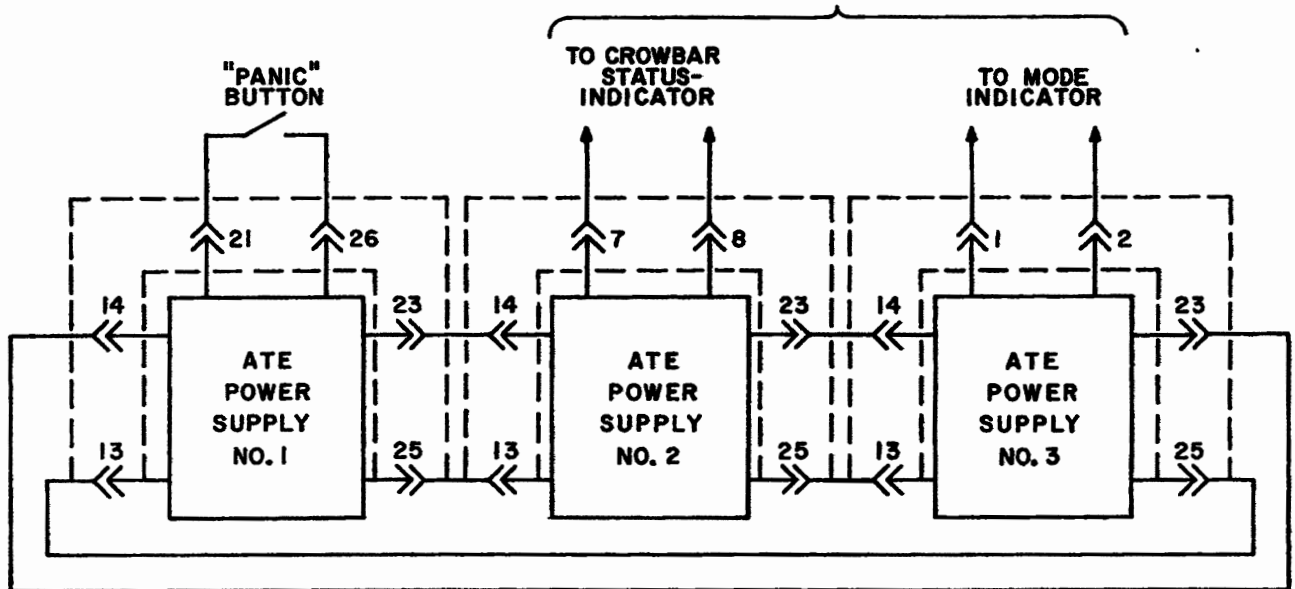


FIG. 3-19 MULTIPLE POWER SUPPLY FAULT DETECTION LOOP

3-93 In addition to the crowbar terminals, optically isolated flag signals are available at the PROGRAMMING CONNECTOR (PC-12) of each ATE power supply. These signals may be used to indicate the crowbar status and the operating mode of each ATE power supply (See FIG. 3-19).

3-94 SERIES CONNECTION OF ATE POWER SUPPLIES

3-95 Kepco ATE power supplies may be connected in series for increased voltage output. Series connection of *two* ATE units is described here, but several units, up to an output voltage total of 500 volts may be inter-connected. Two basic methods of series connection are commonly used: The "AUTOMATIC" and the "MASTER/SLAVE" configuration. The choice between these two methods will depend on the application at hand. If individual power supply control is desired, the "Automatic" series connection should be used. If the output of the interconnected power supplies is to be controlled simultaneously, the "MASTER/SLAVE" method is recommended. For *either* method, some general rules should be remembered:

- 1) Series - connect supplies *only* up to a total of 500 volts output voltage, this is the isolation voltage limit for the ATE power supply.
- 2) Series - connect supplies *only* if they have *similar current rating* or, if the current control can be adjusted to the same load current.
- 3) Use error-sensing, as shown in the diagram (See FIG. 3-20), to compensate for load-wire drops.


NOTE: SENSING LEADS ARE NOT REQUIRED IF THE APPLICATION CALLS FOR CURRENT MODE OPERATION EXCLUSIVELY.

- 4) The load-wires should be as short as practicable. Select the load-wires as heavy as possible and twist the load-wire pair tightly. Approximate equal lengths of load-wire between each pair of supplies is recommended.
- 5) Use the Fault Detection Loop, as described in par. 3-91.
- 6) All previously described programming circuits may be used on the MASTER power supply, to program the series connected system.

3-96 PROCEDURE, AUTOMATIC SERIES CONNECTION

- 1) Without connecting the power supplies to the load, turn a-c power "on", and adjust the output voltage on each supply to the required level (the sum of the output voltages will be the voltage applied to the load).
- 2) Adjust the current control on each power supply to its extreme counterclockwise position. Turn a-c power "off". Connect a short circuit consisting of a short wire across the output terminals of each power supply. Turn a-c power "on" and adjust each ATE Current Control to the required load current. Turn a-c power "off". Remove shorting wires from output terminals.
- 3) Make all load connections as shown in the diagram (refer to FIG. 3-20).
- 4) Turn a-c power "on". Observe output metering and front panel MODE indicators. The output current should be identical on all series connected supplies and all supplies should operate in the voltage mode (VOLTAGE MODE indicator "on").
- 5) On those supplies *not* operating in the voltage mode, turn current control slightly clockwise until the VOLTAGE MODE indicator energizes.
- 6) If current mode operation is desired turn one front panel current control slightly counterclockwise such that the CURRENT MODE indicator is just energizing (the remaining supply (supplies) should remain in the voltage mode of operation).

Operation can now proceed.

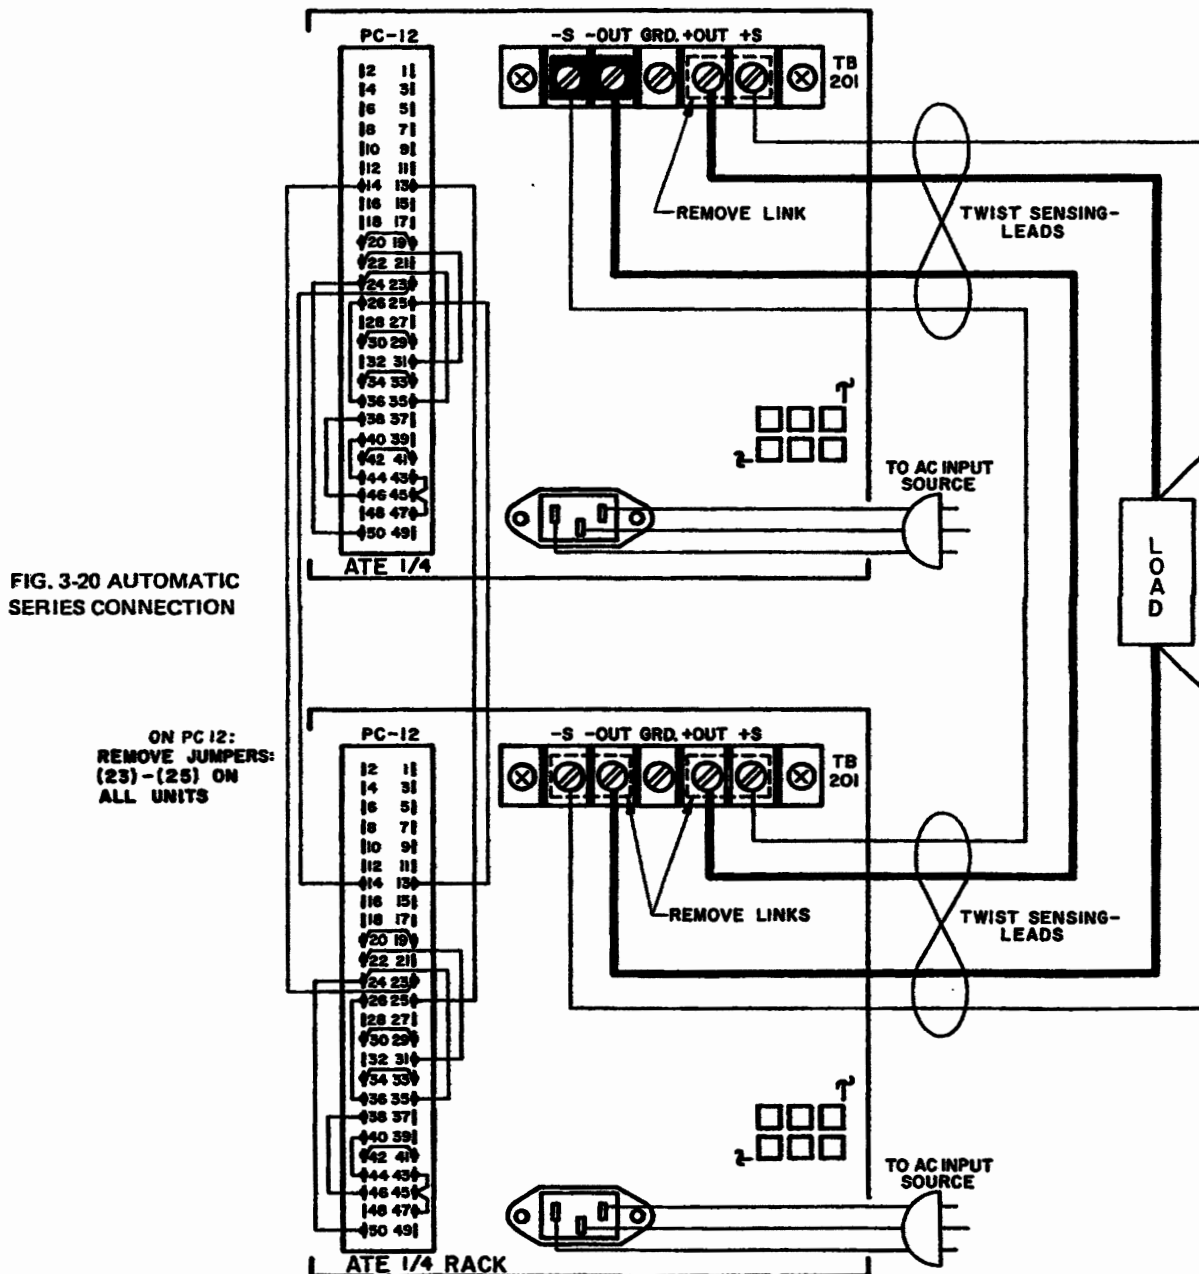

- 3-97 **MASTER/SLAVE SERIES OPERATION.** In this mode of operation the total output voltage of all supplies in the series connection is controlled from a common "Master" supply, while the voltage output of the "Slave" supplies "follow" the output voltage of the "Master".
- 3-98 As seen from the diagram (FIG. 3-21) in each SLAVE supply, the input to the VOLTAGE COMPARISON AMP is disconnected from the output of the VOLTAGE CONTROL amplifier and an external drive signal is derived from the output voltage of the MASTER supply (E_{om}) and applied via a coupling resistor (R_t), to the SLAVE supply.

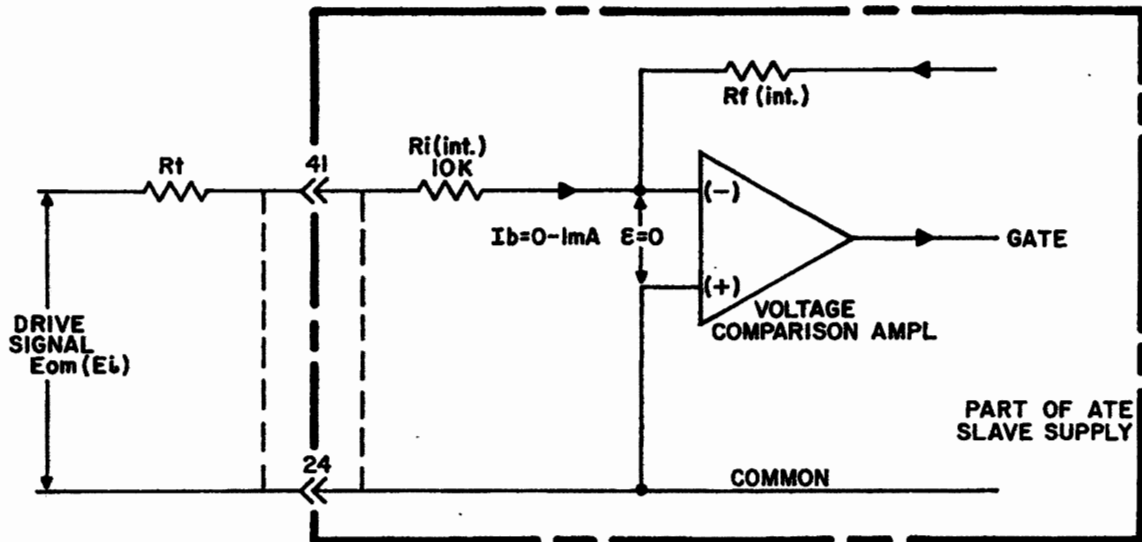


FIG. 3-21 DEVELOPING THE DRIVE FOR THE MASTER/SLAVE SERIES CONNECTION, ATE POWER SUPPLIES WITH RATED OUTPUT VOLTAGE $> 6V$.

- 3-99 The output voltage of each SLAVE supply (E_{os}) will be from 0 to its maximum rated output voltage if the input signal to its VOLTAGE COMPARISON AMP (E_i) is proportioned to produce a control current (I_b) of 1mA. Since the null junction voltage (E) equals zero at balance,

$$I_b = \frac{E_{om}}{R_t + R_i(\text{int})} \quad \text{or, } R_t = \frac{E_{om} - I_b R_i}{I_b} = \frac{E_{om}}{I_b} - R_i$$

Since $I_b = 1\text{mA}$, $R_i = 10\text{K ohm}$ in all ATE power supplies, $R_t \text{ (K ohms)} = \frac{E_{om}}{1\text{mA}} - 10\text{K}$

For example, if a series connection of two ATE supplies with maximum output voltage of 36 and 55 volts is planned for an application requiring a voltage supply from 0 to 91 volts into a common load, the coupling resistor is selected as follows:

Let $E_{om} = 0-55V$ (MASTER SUPPLY), then the SLAVE SUPPLY (E_{os}) must vary from zero to 36 volts, as the MASTER supply is varied over its output voltage range. Calculating the coupling resistor.

$R_t = \frac{55V}{1\text{mA}} - 10\text{K} = 45\text{K ohms}$, and connecting the system as shown in FIG. 3-22 will produce the desired result.

3-101 MASTER/SLAVE SERIES OPERATION WITH ATE 6V POWER SUPPLIES

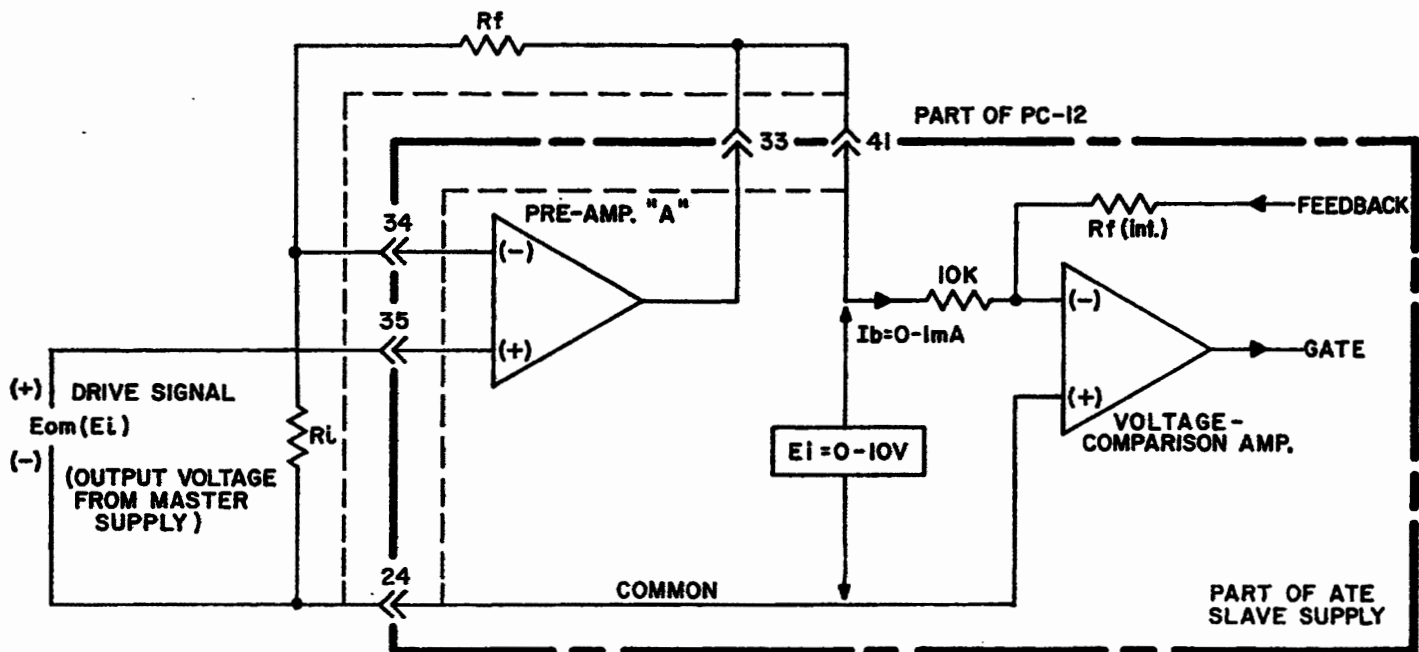


FIG. 3-23 DEVELOPING THE DRIVE FOR THE MASTER/SLAVE SERIES CONNECTION FOR 6V ATE SUPPLIES.

3-102 ATE power supplies with 6 volts maximum output voltage cannot be master/slave connected as described in par. 3-97. Instead, the MASTER output voltage (6V) must first be amplified to 10 volts if the SLAVE supply is to be driven through its full output voltage range. As seen from FIG. 3-23, one of the preamplifiers of the slave unit may be used to proportion the drive signal to the required level. For a 0–1mA control current (I_b) the input voltage (E_i) to the VOLTAGE COMPARISON AMP must be 0–10 volt. Therefore, the MASTER output voltage (E_{om}) is amplified, using PREAMP "A", by selecting the value for the external resistors (R_f , R_i) accordingly. The values for these resistors are calculated on the basis of the equation: $E_{out} \text{ (preamp)} = E_i = E_{om} \times (R_f + R_i)/R_i$. For the example of two 6 volt ATE supplies in series connection: $E_{om} = 6V$, therefore $(R_f + R_i)/R_i$ (the closed loop gain of PREAMP "A") must be $6 \times (R_f + R_i)/R_i = 10$ or $(R_f + R_i)/R_i \approx 1.7$. Letting $R_f = 3K$, R_i must be approximately 5K ohms. R_f may be selected to be a rheostat, so that a convenient gain control is available for calibration.

3-103 PARALLEL OPERATION OF ATE POWER SUPPLIES

3-104 Normally, crowbar equipped power supplies can not be connected in parallel, since a triggered crowbar in one supply, working in a parallel configuration, would present a short circuit to all other supplies and would have to absorb the total output current. In the ATE power supply, crowbar control circuitry is provided, allowing the setup of a fault-detection loop, which shuts off all power supplies in a parallel configuration if one power supply is "crowbared" for any reason.

3-105 As in the previously described "series" connections, an "Automatic" or a "Master/Slave" connection method can be chosen for paralleling ATE power supplies. The choice between the two methods will depend on the application at hand. For constant loads or small load variations (load changes smaller than the maximum output range of a single power supply), the "Automatic" parallel connection can be used. For load changes exceeding the maximum rating of a single power supply, the "Master/Slave" method is suitable. Both methods allow operation in the voltage or current mode. For either method, some general rules should be observed:

- 1) Parallel only supplies which can be adjusted to the same compliance (output) voltage.
- 2) Error sensing, as shown in the following diagrams, can be used to compensate for load wire voltage drops.
- 3) Load wires should be as short as practicable. Select wire gauge as heavy as possible and twist wires tightly. Approximately equal lengths of wire should be used.
- 4) Use the fault detection loop circuit, as described in par. 3-91.

NOTE: The diagram below (refer to FIG. 3-24) shows how the two power supplies operate in the automatic parallel mode. As seen from FIG. 3-24, load variations should be confined to the stabilization region of SUPPLY #2 since there is an initial adjustment error (ΔE_o) between the two supplies.

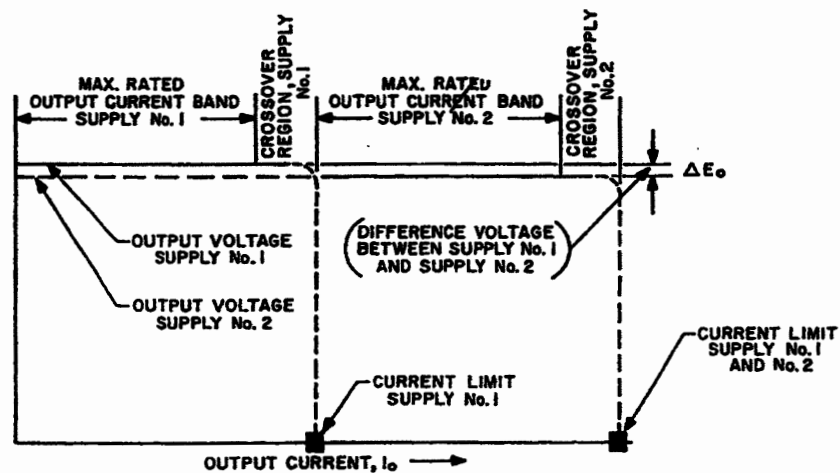


FIG. 3-24 "AUTOMATIC" PARALLEL OPERATION (TWO SUPPLIES).

3-106 If stabilized output current (rather than stabilized output voltage) is desired, all previous comments are valid, except that error sensing is not needed. For stabilized output current, the Current Control of the supply operating initially in the "voltage" mode (SUPPLY #2) is readjusted (counterclockwise) to such a value that SUPPLY #2 just switches to the "current" mode (observe front panel MODE indicators).

3-107 PROCEDURE, AUTOMATIC PARALLEL CONNECTION

Note: The parallel connection of two ATE power supplies is described, although more can be connected.

- 1) Without connecting the power supplies to the load or to each other, turn a-c power "on", and adjust the output voltage on each supply to the desired value.
- 2) Adjust both power supply current controls to their maximum (extreme clockwise) position. Turn a-c power "off".
- 3) Make all load interconnections as shown in the connection diagram (refer to FIG. 3-25).
- 4) Place the individual a-c power switches of the power supplies in the "on" position. Observe output current meters and mode lights on both units. Since the initial output voltage adjustments were not identical, one of the power supplies (to be designated SUPPLY #1), will be at a slightly higher output voltage than the other (to be designated SUPPLY #2). Consequently, SUPPLY #1 will deliver its maximum load current and will operate in the current mode, CURRENT MODE indicator "on". The rest of the load current is delivered by SUPPLY #2 which is operating in the voltage mode (VOLTAGE MODE indicator "on").
- 5) The Current Control of SUPPLY #1 can now be adjusted, as to equalize the total load current between SUPPLY #1 and SUPPLY #2, and operation can proceed.

ON PC-12:
REMOVE JUMPER:
(23)-(25) ON
ALL UNITS

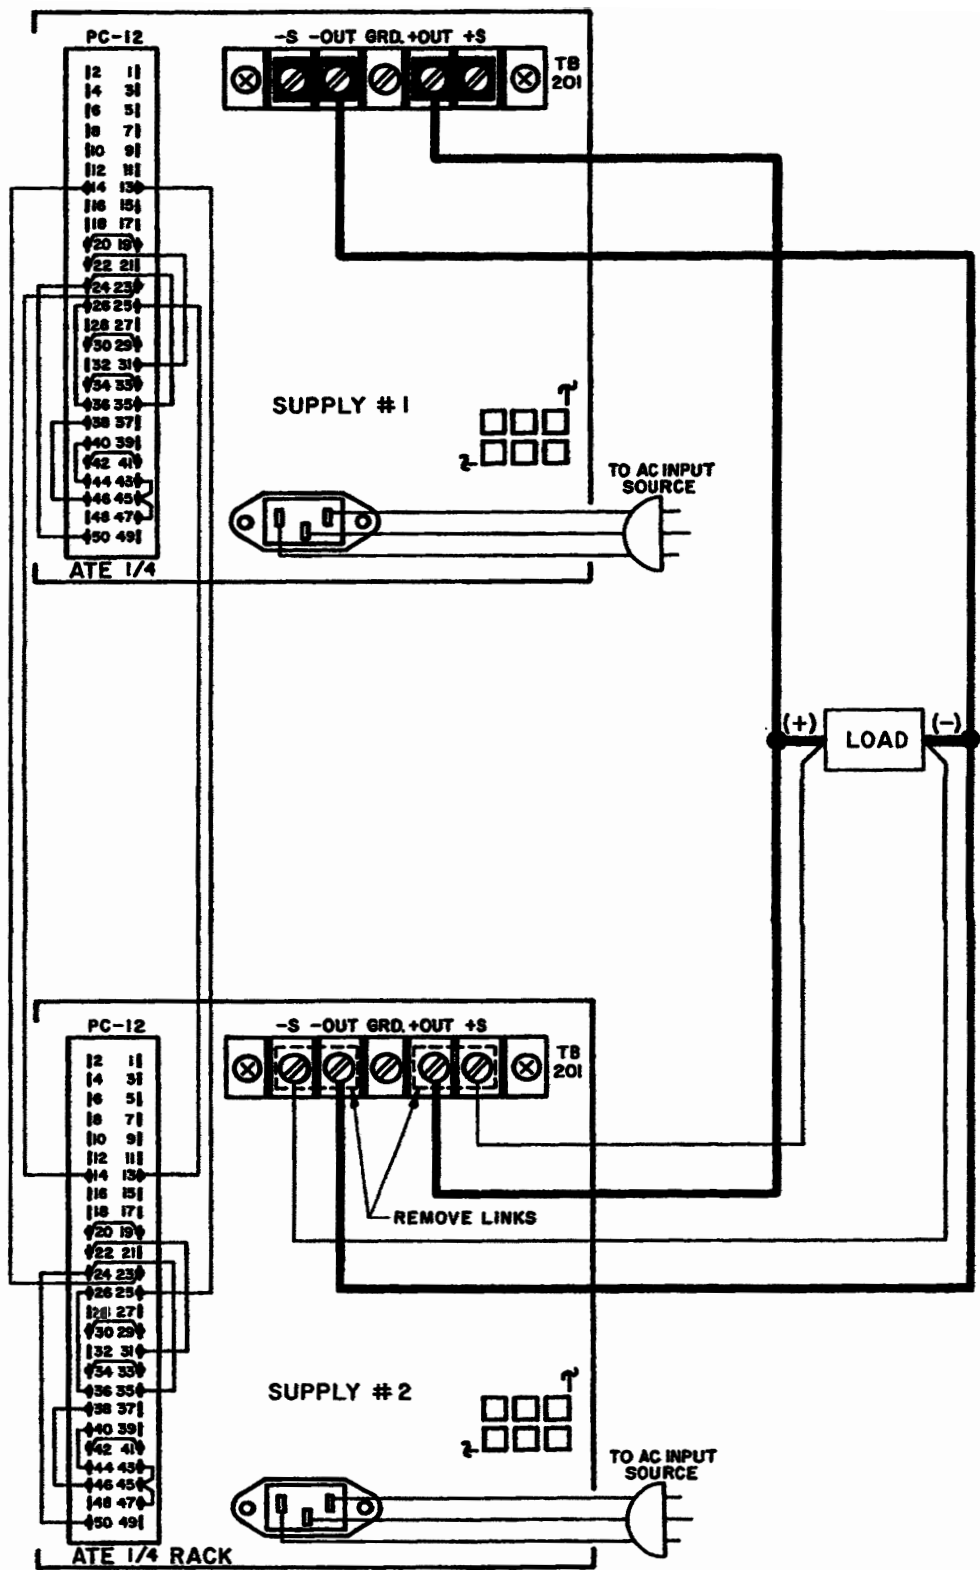


FIG. 3-25 CONNECTIONS FOR AUTOMATIC PARALLEL OPERATION.

3-108 MASTER/SLAVE PARALLEL CONNECTION

3-109 This method is especially convenient with ATE power supplies, since no external current sensing resistors are required and all control connections can be made via the ATE's rear PROGRAMMING CONNECTOR. In the MASTER/SLAVE parallel mode, the EXT. CURRENT COMPARISON AMPL on each SLAVE unit is disconnected from its 15V bias and is driven instead from the common MASTER CURRENT SENSING AMPL. As the MASTER supply delivers load current from zero to its rated maximum value, the signal from its CURRENT SENSING AMPL changes from zero to 1 volt. Applied to each SLAVE unit, this signal programs the output current of the SLAVE units from zero to the maximum value. While all Slave units will operate in the current mode, the MASTER unit can be operated in either the voltage or the current mode.

3-110 PROCEDURE, MASTER/SLAVE PARALLEL CONNECTION

- 1) All power supplies to be paralleled must be able to deliver the required compliance (load) voltage. Before paralleling, set each power supply voltage control to this voltage.
- 2) Make all load and sensing connections as shown in FIG. 3-26.
- 3) Turn all power supplies "on". Observe from panel meters and MODE indicator(s). Adjust the MASTER supply output controls for either voltage or current mode operation. All CURRENT MODE indicator(s) on the SLAVE supplies should be "on".

ON PC 12:
REMOVE JUMPER:
(23)-(25)

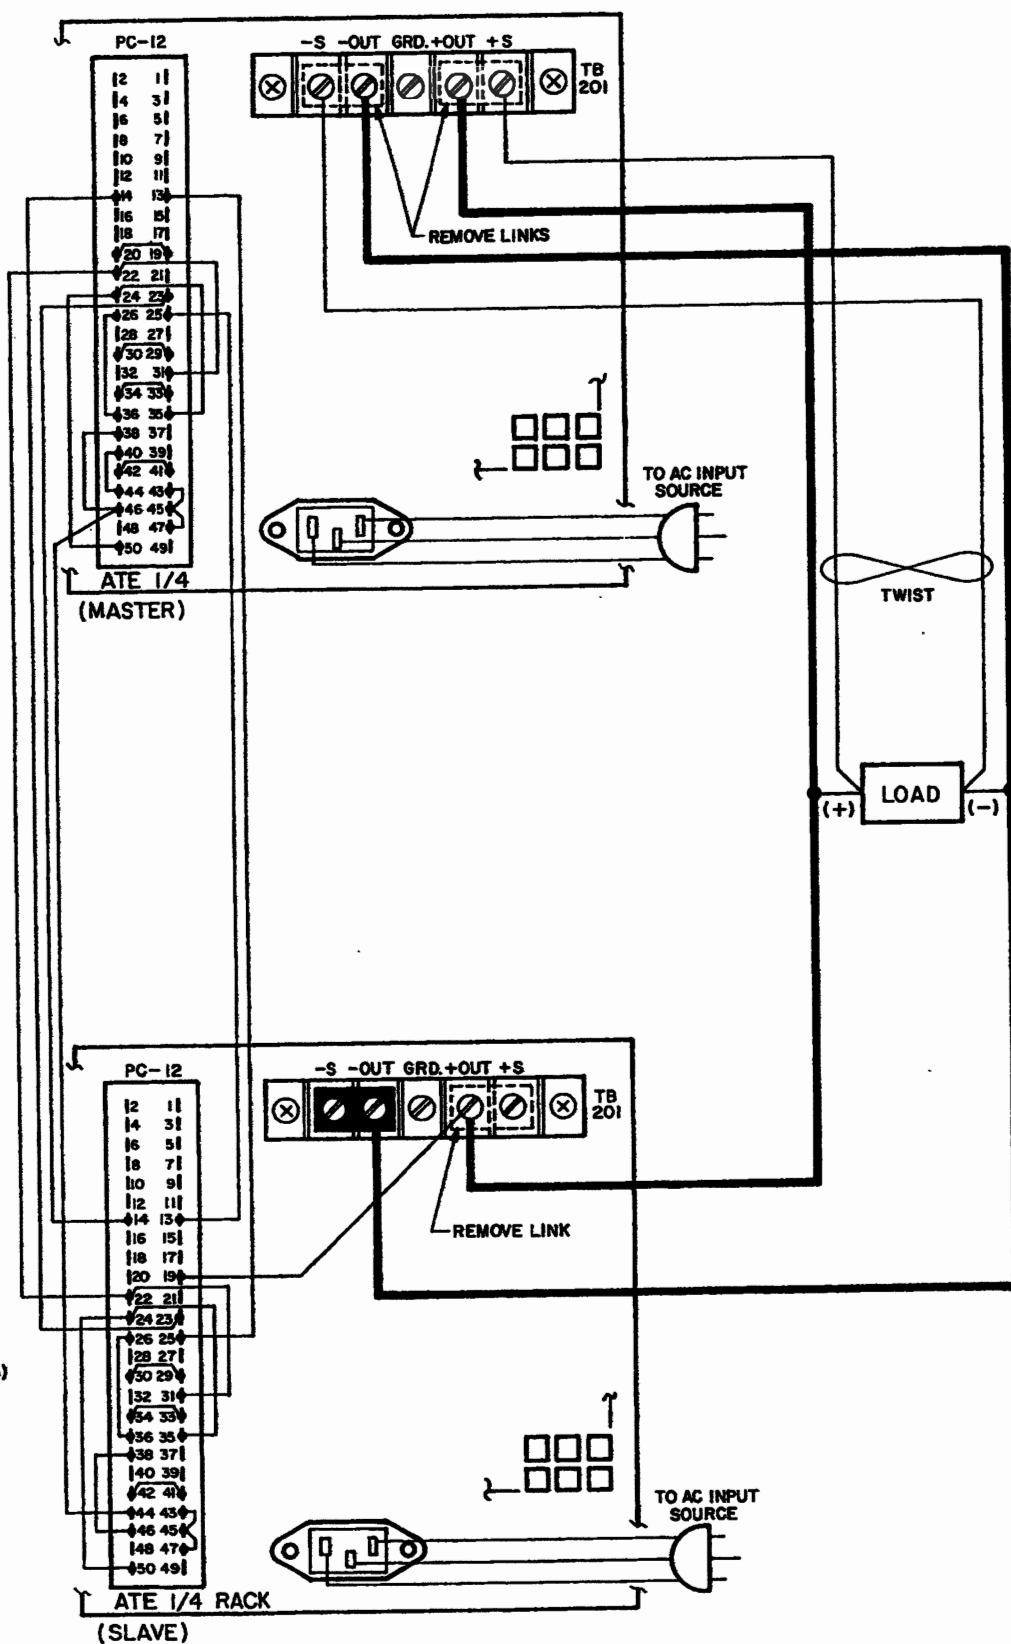


FIG. 3-26 MASTER/SLAVE PARALLEL CONNECTIONS

3-111 REDUNDANT PARALLEL OPERATION

3-112 Two ATE Power Supplies can be connected in parallel to a load in such a way that if one of the power supplies fails or is interrupted in any other manner, the other will continue to supply uninterrupted load current. The two power supplies are isolated from each other by means of external diodes (D1, D2 in FIG. 3-28) which must be rated for the maximum load voltage and current of the ATE units used.

3-113 The problem encountered in operating power supplies with overvoltage detection circuits in a redundant parallel configuration is that the overvoltage sensing leads are usually permanently wired to the error sensing leads. If now an overvoltage occurs on *either* power supply, *both* supplies will shut down, defeating the purpose of the redundant circuit. In the ATE power supplies, provisions are made on the control circuit P.C. card (A1), to disconnect the overvoltage sensing from the error sensing terminal, reconnect it to the output terminal and remove C26, thus successfully solving the problem described. (See FIG. 3-27).

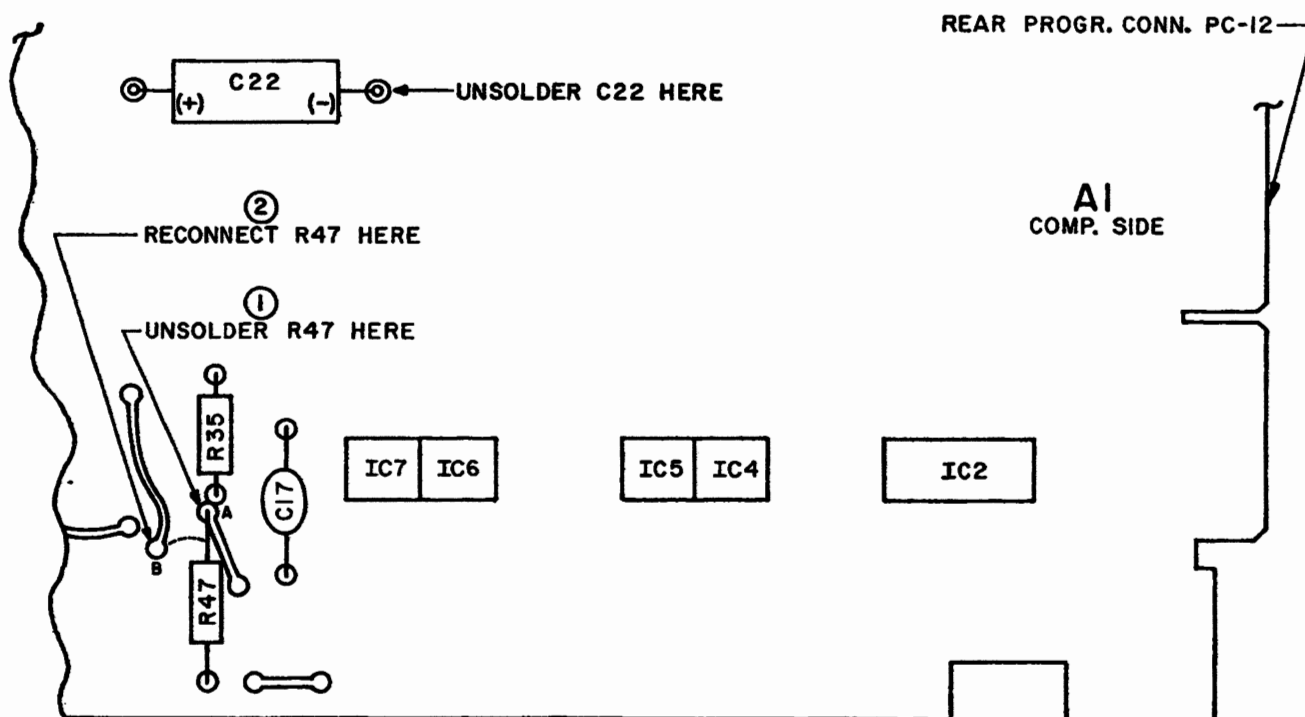


FIG. 3-27 LOCATION OF OVERVOLTAGE SENSING LEAD DISCONNECT.

3-114 PROCEDURE, REDUNDANT PARALLEL OPERATION

- 1) Remove covers from both ATE power supplies, locate A-1 P.C. card and rewire overvoltage sensing as described in par. 3-113 and as illustrated in FIG. 3-27. Remove capacitor C26 as described in par. 3-113 and as illustrated in FIG. 3-27.
- 2) Make all load and sensing connections as shown in FIG. 3-28.
- 3) Turn a-c power "on" and set both ATE supplies to the desired load voltage. One of the ATE supplies (Supply #1) will invariably be at a slightly higher output voltage than the other (Supply #2). Supply #1 will consequently be in control of the load, while Supply #2 will be cut-off. If Supply #2 is desired as the controller, increase its output voltage slightly, until it takes control of the load as evidenced by the read-out on its front panel meters. It is recommended the loading be at least 10% of the rated maximum ATE output current.
- 4) Test the redundant parallel system by manually shutting off the a-c power on the controlling power supply. The other supply should now deliver the power to the load.

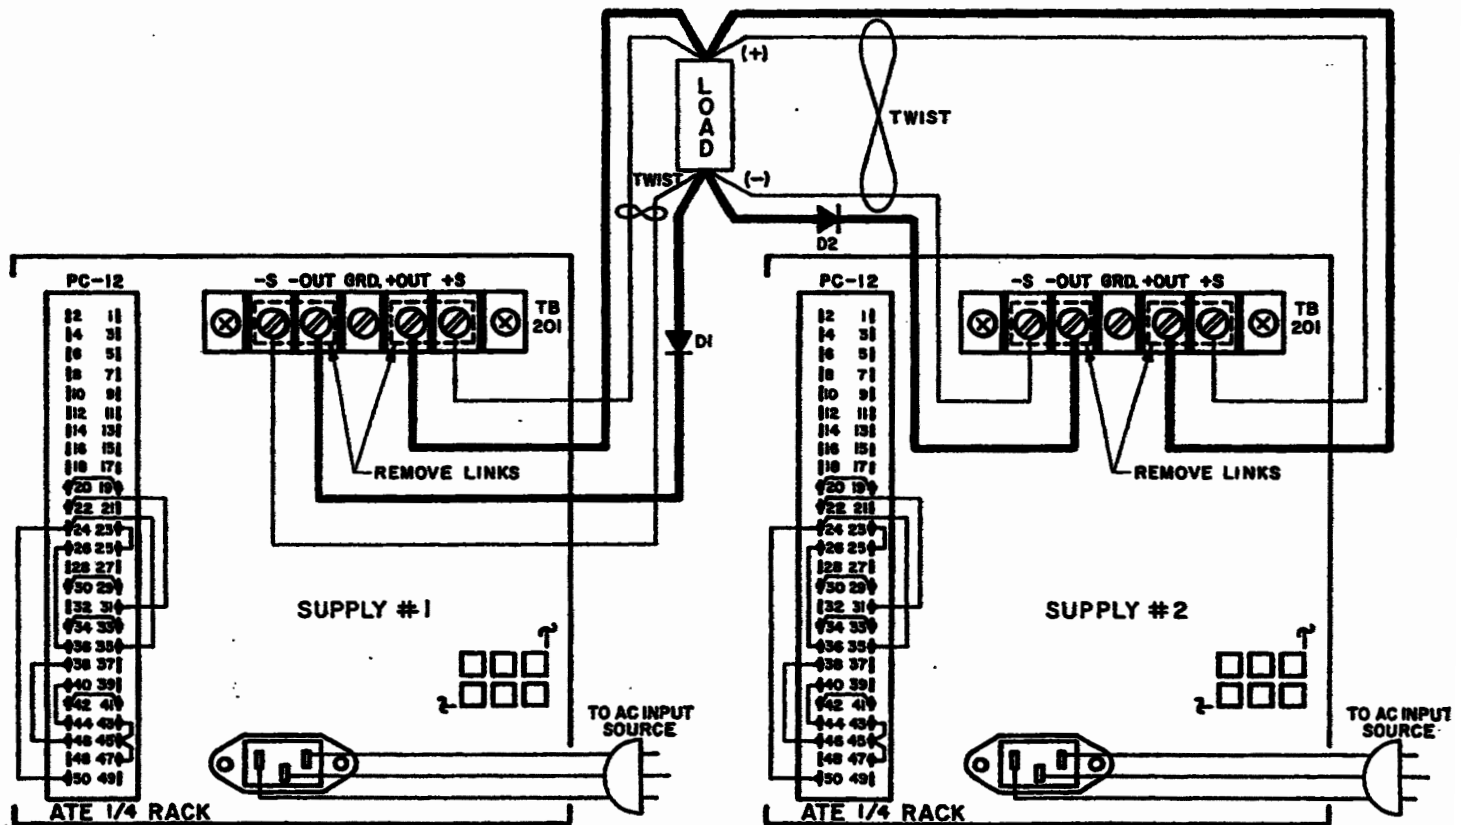


FIG. 3-28 REDUNDANT PARALLEL CONNECTION WITH ATE POWER SUPPLIES.

3-115 PROGRAMMING WITH REFERENCE TO THE NEGATIVE POWER SUPPLY OUTPUT

3-116 ATE power supplies may be used in many unique applications. The two uncommitted ATE preamplifiers make it possible to solve application problems which would require special circuitry or additional equipment with standard power supplies. One example of such an application problem is the case in which the programming common must be the *negative* output side of the power supply, rather than the positive side. With standard power supplies, either the programming source would have to be completely isolated, or an isolating interface would be required.

3-117 This problem is readily solved by the ATE power supply (See FIG. 3-29). PREAMP "A" is used to perform as a differential attenuator, permitting a level shift of the programming source, while PREAMP "B" brings the programming signal back to the required level (0–10V).

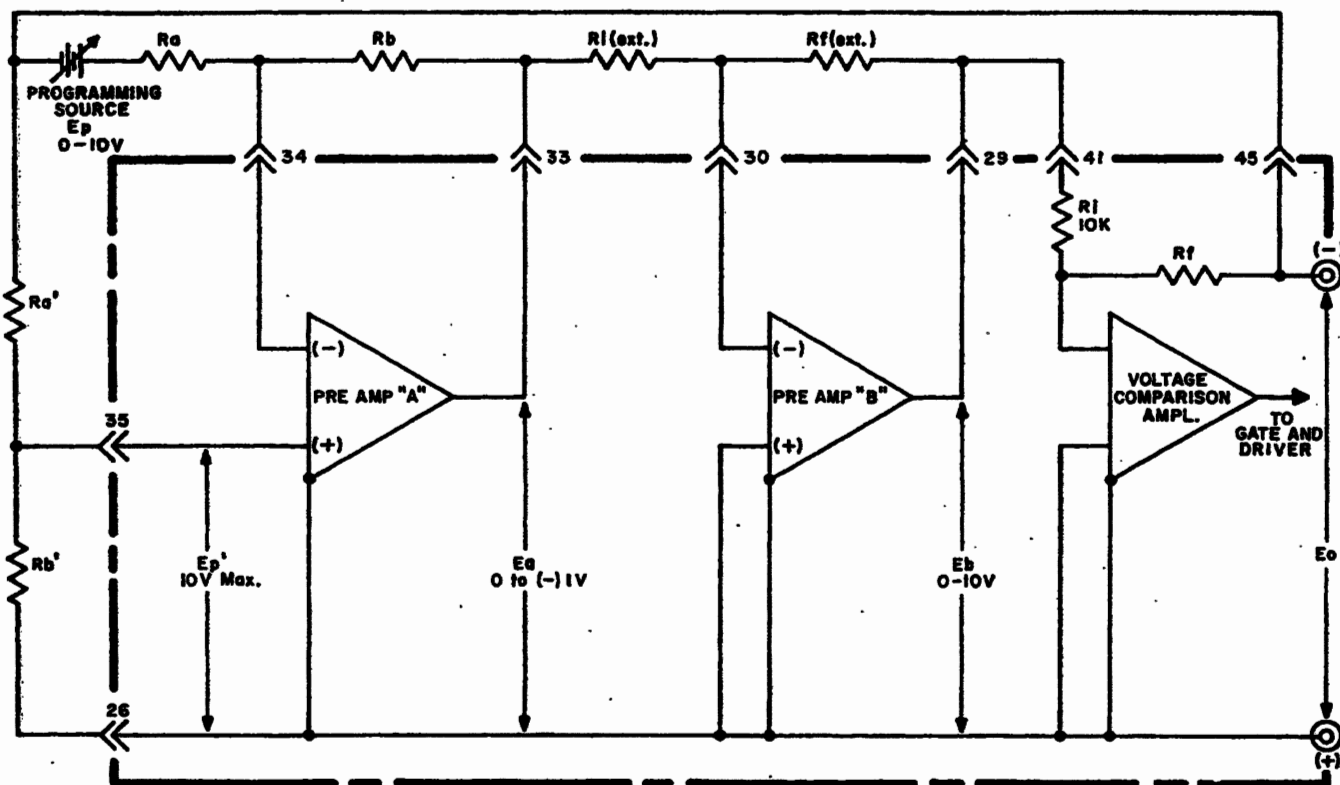


FIG. 3-29 PROGRAMMING WITH REFERENCE TO THE NEGATIVE OUTPUT SIDE OF THE ATE.

Definition of Symbols in FIG. 3-29:

E_o = Power Supply Output Voltage

E_a = PREAMP "A" Output Voltage

E_b = PREAMP "B" Output Voltage

E_p' = Common Mode Voltage Limit (10 Volts max.)

E_p = Programming Voltage

$R_a = R_a'$ Voltage Divider Network

$R_b = R_b'$

3-118 Component selection will depend on the parameters of the programming source and the ATE power supply output voltage. AN EXAMPLE: An ATE model with an output voltage of 0–100 Volt is programmed through its full output voltage range by a programming source (E_p) of 0–10 volt which can supply 0.1mA. The negative output side of the ATE is grounded. Selecting the voltage divider (R_a' , R_b'), such that the common mode voltage, $E_p' < 10V$, we let $R_a = R_a' = 1M$ ohm, $R_b = R_b' = 100K$ ohm. In this case the output voltage for PREAMP "A" can be expressed by:

(-) $E_a = E_p R_b / R_a = 0$ to (-) 1 volt

Note: The equation for the standard differential amplifier is derived in Burr-Brown's "Operational Amplifiers".

3-119 The next step is to select the input resistor (R_i ext.) and the feedback resistor (R_f ext.) for PREAMP "B". Since an input voltage (E_b) of 0 to 10 volts is required to drive the VOLTAGE COMPARISON AMPL (and thereby the power supply output voltage) over its rated range, the previously derived signal from PREAMP "A" must be reversed and amplified with a gain of 10. PREAMP "B" is used in the inverting configuration, for which the output equation is:

$$E_b = (-) E_a R_f (\text{ext.}) / R_i (\text{ext.})$$

Selecting a 1K ohm resistor for R_i (ext.), R_f (ext.) must be 10K ohm to achieve the desired result.

Note: The selected resistors should be high quality components with a tolerance of 1%. They should be wired as close to the PROGRAMMING CONNECTOR terminals as possible.

3-120 PROCEDURE, PROGRAMMING WITH REFERENCE TO THE NEGATIVE POWER SUPPLY OUTPUT

- 1) Connect the external components, the LOAD and the PRECISION VOLTMETER (M1) to the ATE as shown in FIG. 3-30.
- 2) With the EXT. CONTROL SOURCE at zero, turn ATE "on".
- 3) Vary the EXT. CONTROL SOURCE from zero to 10 volts. The ATE output voltage, as read out on M1, should vary approximately from zero voltage to the rated value. Return the EXT. CONTROL SOURCE to zero.

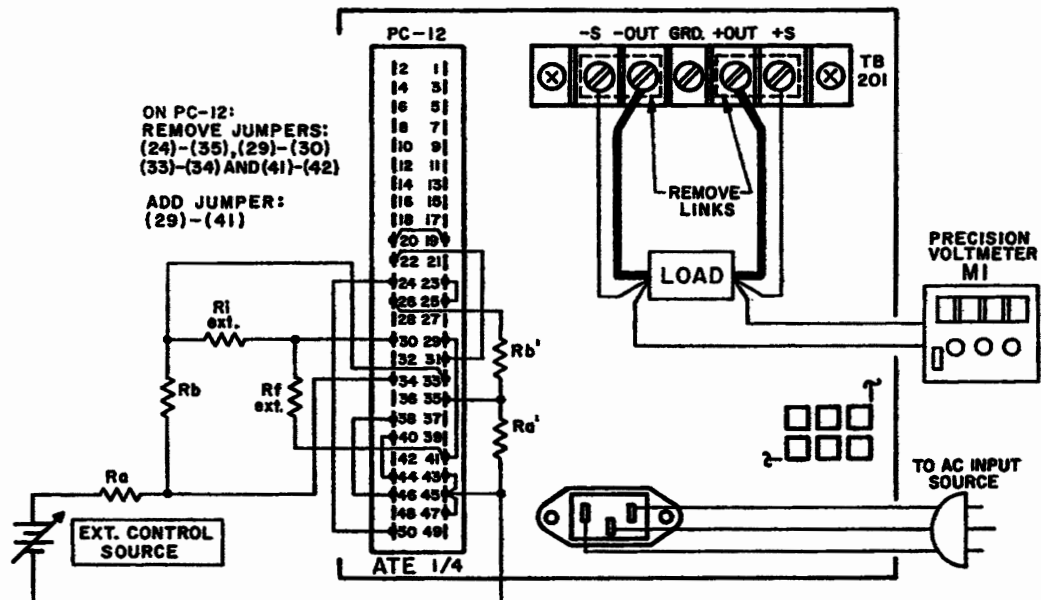


FIG. 3-30 CONNECTIONS FOR PROGRAMMING WITH REFERENCE TO THE NEGATIVE POWER SUPPLY OUTPUT.

3-121 APPLICATION OF THE ISOLATED FLAG SIGNALS

3-122 Two opto-isolated flag signals are provided at the rear programming connector (PC-12). One of them signals the ATE operating mode (Voltage or Current Mode), the other one provides a signal to indicate that the ATE crowbar has been tripped. Both flag signals consist of the Collector/Emitter terminals of a Photo-Transistor Optical Isolator and change their impedance from high to low if activated. The ATE flag signals may be converted to TTL logic signals as indicated in FIG. 3-31. The photo transistors are capable of sinking at least one (1) standard TTL load (1.6mA). Since the crowbar flag signal is followed by the shut-down of the ATE power supply, the flag signal is the form of a pulse, rather than a permanent level shift.

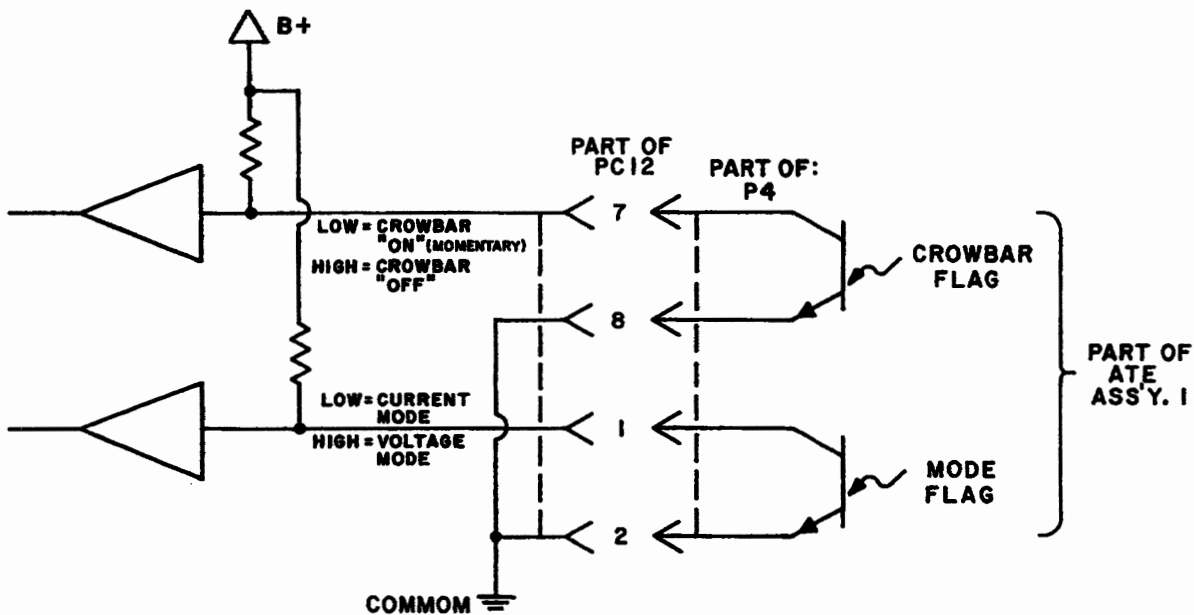


FIG. 3-31 ISOLATED FLAG SIGNAL OUTPUTS.

SECTION IV – THEORY OF OPERATION

NOTE: References in CAPITAL LETTERS refer to the nomenclature used in FIG.'s 4-1 through 4-7.

4-1 SIMPLIFIED DIAGRAM DISCUSSION. REFER TO THE "FOLD-OUT" DRAWING (FIG. 4-6) AT THE END OF THIS SECTION.

- 4-2 The ATE power supply is basically a voltage and current stabilized d-c source with a sharp crossover between the voltage and the current mode of operation. A linear series PASS ELEMENT is controlled by either the current control channel or the voltage control channel and provides excellent stabilization and fast response in either operating mode. The operating mode of the ATE is determined by the value of the front panel adjusted (or externally controlled) ATE output voltage (E_o) and output current (I_o) and by the magnitude of the load resistance (R_L). The "crossover" resistance (R_{LX}) is given by Ohm's Law:

$$R_{LX} = E_o / I_o \text{ (See FIG. 4-1).}$$

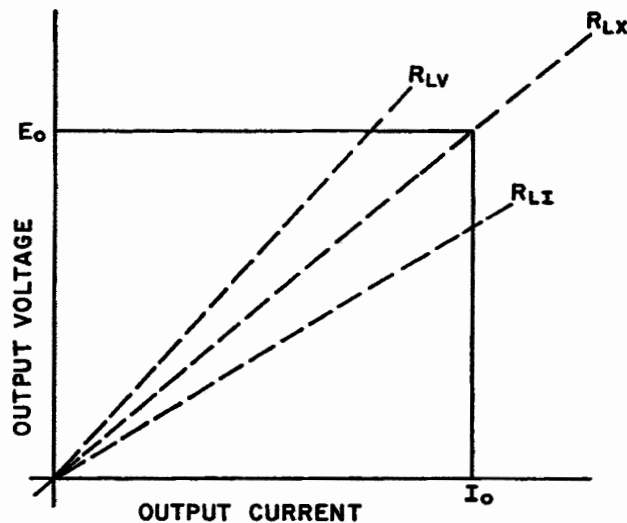


FIG. 4-1 CROSSOVER CHARACTERISTICS, ATE POWER SUPPLY.

- 4-3 Any load resistance, *smaller* than R_{LX} (as for example R_{LI} in FIG. 4-1) will transfer the ATE into the "Current Mode." With a load resistance *larger* than R_{LX} (as for example R_{LV} in FIG. 4-1), the ATE will operate in the "Voltage Mode."
- 4-4 In the voltage mode of operation, the VOLTAGE-COMPARISON AMPL. senses any change in the output voltage by comparing it to a reference potential, developed by the VOLTAGE CONTROL AMPL. (See FIG. 4-2).

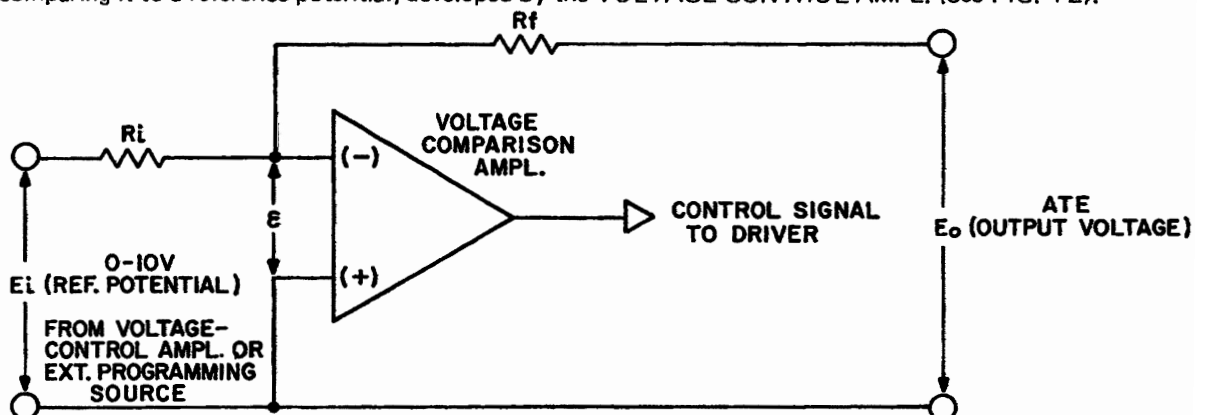


FIG. 4-2 VOLTAGE COMPARISON EQUIVALENT CIRCUIT.

- 4-5 A condition of balance exists if: $E_o/R_f = E_i/R_i$, and $\epsilon \rightarrow 0$. A change in either " E_i " or " E_o " in the balance equation produces an error signal which, amplified by the VOLTAGE COMPARISON AMPL., becomes a control signal for the DRIVER STAGE. The control signal is applied, via the DRIVER stage, to the PASS ELEMENT which increases or decreases its conductance in response to the DRIVER signal as required to maintain the output voltage at the desired value.
- 4-6 In the current mode of operation, the CURRENT-COMPARISON AMPL. senses any change in the output current by comparing an amplified sensing voltage to a reference potential, developed by the CURRENT-CONTROL AMPL. (See FIG. 4-3).

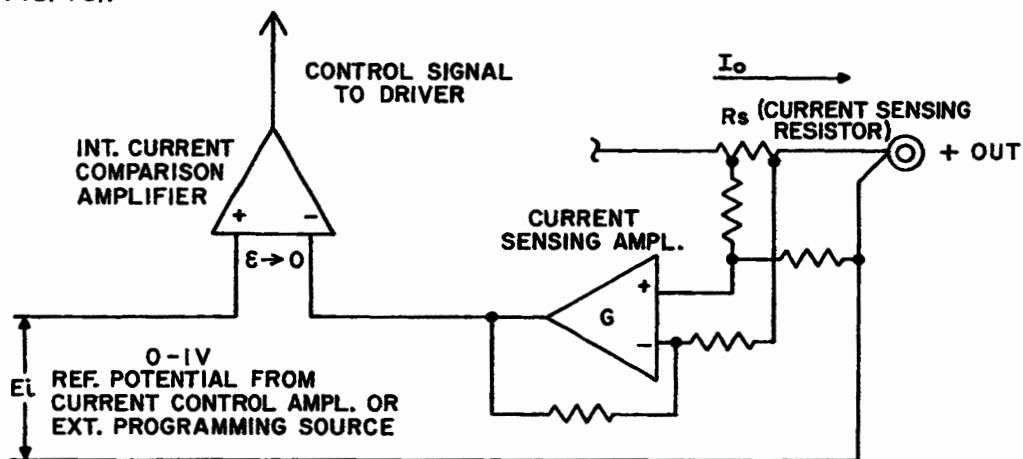


FIG. 4-3 CURRENT COMPARISON EQUIVALENT CIRCUIT.

- 4-7 The current sensing voltage is derived across the CURRENT SENSING RESISTOR (R_s), in series with the (+) output lead, and is proportional to the flow of output current. The sensing voltage sample across R_s is amplified differentially by the CURRENT SENSING AMPL. and applied, together with the reference potential from the CURRENT CONTROL AMPL. at the differential input of the INT. CURRENT COMPARISON AMPL. A condition of balance exists, if:

$$(G)I_oR_s = E_i \text{ and } \epsilon \rightarrow 0.$$

A change in either " E_i " or " I_o " in the balance equation produces an error signal which, amplified by the CURRENT COMPARISON AMPL., becomes a control signal for the DRIVER STAGE. The control signal is applied via the DRIVER STAGE to the PASS ELEMENT, which increases or decreases its conductance in response to the driver signal as required to maintain the output current constant and vary the output (compliance) voltage proportionally.

- 4-8 The internal feedback components in the voltage, as well as in the current control channel of the ATE are selected for each ATE model such that a 0 to 10 volt d-c signal, applied to the VOLTAGE COMPARISON AMPL. or 0-1 volt to the CURRENT COMPARISON AMPL. control the full output range for each ATE model. For local (front panel) control of the ATE output quantities a CONTROL AMPLIFIER is used in a similar manner for the voltage as well as for the current channel. (See FIG. 4-4) to produce the required 0-10V or 0-1V control signal.

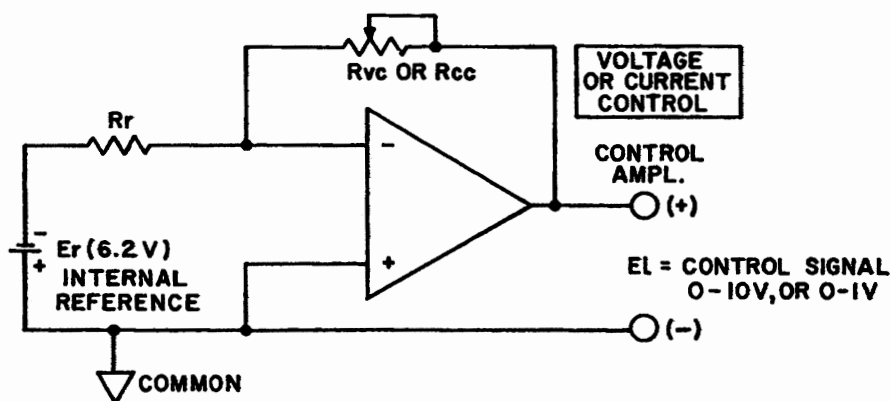


FIG. 4-4 GENERATION OF THE INTERNAL CONTROL SIGNAL FOR THE ATE VOLTAGE AND CURRENT CHANNELS.

- 4-9 To produce the internal 0–10V or 0–1V control signals (E_i), an operational amplifier is used in the inverting configuration, as shown in FIG. 4-4. The output equation for the circuit is $E_i = E_r (R_{VC}/R_r)$.
- 4-10 External control over the voltage and/or current channel of the ATE can be exercised by disconnecting the internal control channel at the REAR PROGRAMMING CONNECTOR (PC–12) and substituting an external control signal (0–10V or 0–1V for Voltage or Current control over the specified output ranges). Programming examples are described in Section III of this manual.
- 4-11 Two independent preamplifiers (PREAMP "A", PREAMP "B") are provided in the ATE with all their input/output terminations accessible at the REAR PROGRAMMING CONNECTOR (PC–12). These preamplifiers may be used for a variety of tasks, for example, to boost and/or invert an external programming signal to the required 0 to 10 volt level (Voltage Channel) or 0–1 volt (Current Channel).

4-12 PROGRAMMABLE OVERVOLTAGE PROTECTOR, SIMPLIFIED DIAGRAM DISCUSSION (REFER TO THE "FOLD-OUT" DRAWING FIG. 4-7 AT THE END OF THIS SECTION).

- 4-13 The ATE overvoltage protector monitors the output voltage at the (\pm) SENSE terminals. A portion of the output voltage is continuously compared at the differential input of the OVERVOLTAGE COMPARATOR to a reference voltage, produced by the OVERVOLTAGE REFERENCE AMPL. The circuit is inactive as long as the output voltage sample stays below the reference voltage level at the input of the OVERVOLTAGE COMPARATOR. If an overvoltage occurs, this amplifier produces an output signal which turns the CROWBAR COMPARATOR "on" and this fires the AUXILIARY SCR. As a result, the diode in the CROWBAR FLAG and the CROWBAR SIGNAL ISOLATORS conduct and produce an optical signal to their associated circuit elements. The CROWBAR SIGNAL ISOLATOR fires its SCR which in turn produces the turn-on pulse for the MAIN SCR. The CROWBAR FLAG ISOLATOR simultaneously produces a flag signal via its associated photo transistor. In addition, the CIRCUIT BREAKER, the coil of which is also in series with the AUXILIARY SCR, removes the a-c power from the ATE input.
- 4-14 The crowbar level may be adjusted locally by the provided CROWBAR LEVEL front panel control, or it may be externally controlled by means of a 0–10 volt d-c signal. For internal control, the crowbar level is produced by the OVERVOLTAGE REFERENCE AMPL. and the internal REFERENCE SOURCE (SEE FIG. 4-5).

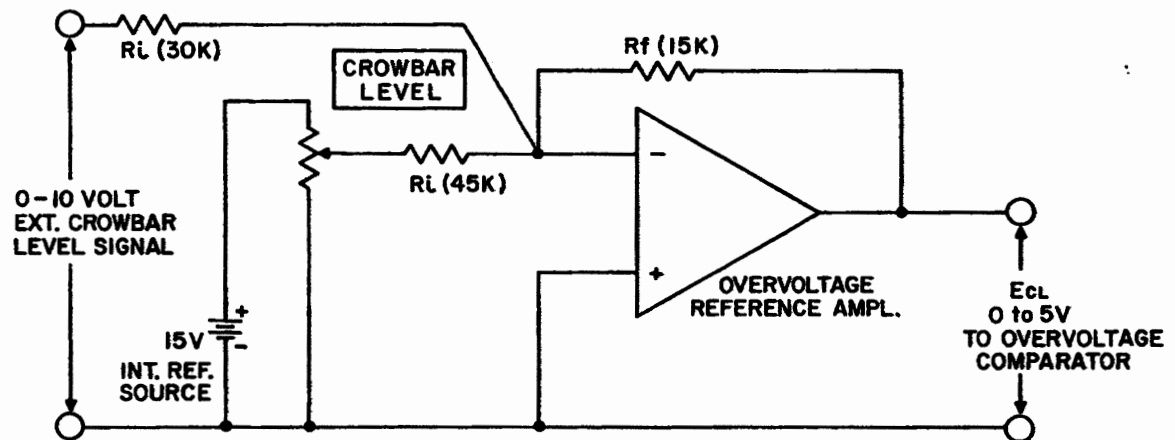


FIG. 4-5 GENERATION OF THE INTERNAL CROWBAR LEVEL SIGNAL.

- 4-15 An operational amplifier (OVERVOLTAGE REFERENCE AMPL.) is used in an inverting configuration, as shown in FIG. 4-5. The output equation for this circuit is: $E_{CL} = E_r (R_f/R_i)$. Inserting circuit values from FIG. 4-5.

$$E_{CL} = (0-15V) 15K \text{ ohm}/45K \text{ ohm} = 0 \text{ to } 5 \text{ volt}$$

- 4-16 For external control by means of a 0 to 10 volt signal, the result is:

$$E_{CL} = (0-10V) 15K/30K = 0 \text{ to } 5 \text{ volt}$$

Since the external and internal crowbar levels are summed at the inverting input of the OVERVOLTAGE REFERENCE AMPL., the front panel CROWBAR LEVEL control must be turned to zero if its influence is not desired. The external 0 to 10 volt signal is applied to the OVERVOLTAGE REFERENCE AMPL. via the OVERVOLTAGE TRACKING DELAY CIRCUIT, consisting of two voltage followers (GAIN = 1) and RC network. This delay circuit has the function of preventing false triggering when the overvoltage protector is used in the "tracking mode" (programmed simultaneously with the voltage channel). Without the delay, the overvoltage protector would interpret a fast falling output voltage step as an overvoltage.

- 4-17 A variety of inputs and outputs to and from the overvoltage protector circuit are provided via the rear PROGRAMMING CONNECTOR (PC-12). Their use has been described in the operating section (Section III) of this manual.
- 4-18 A front panel CROWBAR light, triggered by the AUXILIARY SCR, indicates when the ATE is in the crowbar condition. A front panel DISARM push-button is provided to facilitate setting of the crowbar level. The depressed DISARM button prevents the MAIN SCR from firing if the CROWBAR LEVEL is inadvertently misadjusted.

4-19 CIRCUIT DESCRIPTION (Refer to MAIN SCHEMATIC DIAGRAM, SECTION VI, FIG. 6-4).

NOTE: MAIN SCHEMATIC NOMENCLATURE IS CAPITALIZED IN THESE PARAGRAPHS.

- 4-20 For the purpose of analysis, the circuitry of the ATE Power Supply may be divided into several sections which are individually described below.
 - a) A-C INPUT CIRCUIT. A-C line power is introduced through the (detachable) 3-wire line cord with safety plug. The use of a grounded a-c power outlet will automatically ground the power supply, since the third wire of the line cord is directly connected to the metal chassis and case. Once the a-c power switch/circuit breaker (CB201) is closed, the primary of the main transformer (T201) and the fan (B201) will be energized. The two primary windings of the main transformer are either connected in parallel (for 115V a-c nominal line voltage) or in series (for 230V a-c nominal line voltage) by means of removable links on the transformer barrier strip. The circuit breaker/power switch (CB201) protects the power supply from overcurrents reflected into the primary winding of T201 and shuts off automatically if the overvoltage crowbar circuit is activated. The current sensing coil of CB201 is connected in such a way that equal protection is provided, whether the ATE is operated on a 115V or 230V a-c input source.
 - b) MAIN D-C SUPPLY. The main d-c power is derived from a center-tapped secondary winding on T201. A full-wave rectifier circuit with silicon diodes CR301, CR302 (located on the heat sink assembly) works into a capacitor input filter (C201), paralleled by a bleeder resistor (R201). The main d-c supply delivers the output current through the series regulator or pass elements.
 - c) SERIES REGULATOR (PASS ELEMENTS). The series regulator transistors (Q301, 302, . . . number of pass elements depends on ATE model number) are NPN silicon devices, located on a specially constructed heat sink (A3) and cooled by a fan (B201). Electrically, these pass transistors are connected in series with the (unregulated) main d-c supply and the output. The effective series resistance of the pass transistors (and thereby the voltage drop across them) is changed in such a way as to keep either the output voltage (VOLTAGE MODE) or the output current (CURRENT MODE) constant, regardless of variations in the unregulated main supply or changes in load conditions. The base drive needed to affect this change in the pass transistors is supplied by the main driver (Q305), also located on the heat sink assembly.
 - d) VOLTAGE CONTROL CHANNEL. The VOLTAGE COMPARISON AMPL. (IC3) senses the ATE output voltage at the (\pm) OUTPUT SENSING terminals. A portion of the output voltage is applied via the feedback resistor (R49) to the (+) input of IC3 and compared with either the internal control potential (via R64, PC-12 pin 41, 42 connected) or an external reference (control) signal (PC-12 pins 41, 42 open, signal + to pin 41 with reference to pin 26). Internally, the control potential (0-10 volts) is produced by the VOLTAGE CONTROL AMPL. (1/4 IC2) in combination with the negative reference and the required input and feedback resistors (R19 and R204 VOLTAGE CONTROL). By varying the front panel VOLTAGE CONTROL (R204), the internal control potential changes from 0 to 10 volts, while the output voltage is controlled from 0 to its maximum rated value for the individual ATE model. An external 0 to 10 volt potential, applied to PC-12 pin 41 (JUMPER BETWEEN PINS 41, 42 removed) and PIN 26 will exercise similar control over the output voltage.

- e) **CURRENT CONTROL CHANNEL.** The current sensing resistor (R305), in series with the (+) output lead, monitors the output current at all times. The voltage drop across R305, proportional to the output current, is amplified by the CURRENT SENSING AMPL. (IC4), applied to the (-) input of the INTERNAL CURRENT COMPARISON AMPL. (1/4 IC2) and compared to the reference (control) signal from the CURRENT CONTROL AMPL. (1/4 IC2). The current control signal (0 to 1 volt) is produced by the CURRENT CONTROL AMPL. (1/4 IC2) in combination with the NEGATIVE REFERENCE and the input and feedback resistors (R17, R20, R205 CURRENT CONTROL). By varying the front panel CURRENT CONTROL (R205), the internal control signal changes from 0 to 1 volt, while the output current is controlled from zero to the maximum rated value for the individual ATE supply. An external (0–1 volt) control signal applied to the REAR PROGRAMMING CONNECTOR (PC–12 pin 44 to pin 26 (common) JUMPER 40, 44 REMOVED) will similarly exercise full range control over the output current. The external signal is applied to the input of a separate amplifier (EXTERNAL CURRENT COMPARISON AMPL., 1/2 IC5) which is gated (via CR11) together with the INTERNAL CURRENT COMPARISON AMPL., (1/4 IC2) to the EXCLUSIVE OR GATE consisting of diodes CR10 through CR13.
- f) Two separate preamplifiers (IC10 - PREAMP "A", IC9 - PREAMP "B") are provided in the ATE with their input/output connections terminated at the REAR PROGRAMMING CONNECTOR (PC–12) pins 33, 34, 35 - PREAMP "A", pins 29, 30, 31 - PREAMP "B"). The preamplifier inputs are protected by fast acting signal diodes (CR33 through CR40) and are equipped with their own offset zeroing controls, accessible through the ATE top cover (R63 - PREAMP "A", R62 - PREAMP "B"): The PRE-AMPLS. are frequency compensated by means of a feedback capacitor (C25 - PREAMP "A", C24 - PREAMP "B") and may be used for signal processing etc.
- g) **OVERVOLTAGE PROTECTOR CIRCUIT.** The OVERVOLTAGE COMPARATOR (IC7) compares a sample of the ATE output voltage (via R46, R47) to the reference voltage from the OVERVOLTAGE REFERENCE AMPL. (IC7). The circuit is inactive, as long as the output voltage sample stays below the reference level at the (+) input of IC7. If an overvoltage occurs (either from internal power supply failure or from an operator's error) the OVERVOLTAGE COMPARATOR (IC7) produces an output signal resulting in the following simultaneous events:
 - 1) The crowbar comparator (IC8) is turned "on" fires the auxiliary SCR (CR43) via Q6 and energizes the front panel CROWBAR Indicator (DS103).
 - 2) The light emitting diode in the crowbar flag isolator (LC3) and the crowbar signal zener (CR42) are energized and produce a signal, available at the REAR PROGRAMMING CONNECTOR (PC–12). The crowbar signal isolator (LC2) fires its SCR, which in turn produces a turn-on pulse for the main SCR (CR202).
 - 3) The voltage sensing coil of the main circuit breaker (CB201) is energized by the current through the conducting auxiliary SCR (CR43). As a result CB201 removes the a-c power from the ATE.
- h) The reference level to which the output voltage sample is continuously compared, is adjustable through the ATE output voltage range by means of a front panel screwdriver control (CROWBAR LEVEL, R101). The crowbar level reference voltage is derived from a potentiometer (R101) across the (+)15V reference voltage. The 0 to 5 volt crowbar level is established by the OVERVOLTAGE REFERENCE AMPL. (1/2 IC5) and resistors R45 and R44.
- i) External control of the crowbar level (by means of a 0 to 10 volt signal) is performed via the REAR PROGRAMMING CONNECTOR (PC–12). The control signal is applied to the OVERVOLTAGE REFERENCE AMPL. 1/2 IC5) and summed with the internal crowbar level reference at the (-) input. In the tracking mode, the OVERVOLTAGE TRACKING DELAY CIRCUIT (IC6) is used. It consists of two voltage follower stages which impart a delay to the tracked programming voltage to avoid false triggering of the overvoltage protector circuit.

- k) **MODE INDICATORS and MODE FLAG.** A pair of LED mode indicators on the front panel indicate either voltage mode or current mode of operation. The voltage mode indicator (DS101) and current mode indicator (DS102) are driven from transistors (Q3) and (Q4) respectively. Signals for the VOLTAGE INDICATOR DRIVER (Q3) are derived from the output of the VOLTAGE COMPARISON AMPL. (IC3) via R27 and CR14. When the ATE is operating in voltage mode, the voltage indicator driver will be placed into saturation causing the voltage MODE INDICATOR (DS101) to display and causing the current mode driver (Q4) to cut off. Operation in current mode (either internal or remote control) will cause the voltage indicator driver to cut off, allowing the current indicator driver to turn on and hence, the current mode indicator will energize. The MODE FLAG opto-isolator (LC1) derives its signal from the output of the current indicator driver (Q4) via R33. The MODE FLAG opto-isolator (LC1) transfers the input information from the current indicator driver and presents an isolated FLAG at the MODE FLAG terminals on the REAR PROGRAMMING CONNECTOR (PC-12). In voltage mode of operation, the phototransistor is off and in current mode of operation, the phototransistor is in saturation.
- i) **AUXILIARY SUPPLIES**
- 1) **AMPLIFIER POWER SUPPLY.** This d-c source is derived from one of the secondary windings on the power transformer (T201). A bridge rectifier (CR3) and a capacitor filter (C4) provide the unregulated d-c voltage. A voltage regulator stage, consisting of the REFERENCE REGULATOR (IC1) and the pass transistor (Q1) with their associated components (R4, R5, R9, R10, C7, R11, CR6) generates the regulated positive 15 volt potential, while the negative 15V potential is established by the zener diode (CR7). From this dual (\pm) 15 volt supply, which provides the operating potential for IC's 2 through IC9, another (\pm) 12 volt source is derived via zener diodes CR8, CR9 and dropping resistors R12, R13. The dual 12 volt supply is used to terminate the protective input diodes of the two PRE-AMPLIFIERS (CR33 through CR40) and those of the EXT. CURRENT COMPARATOR (CR20, CR21, CR23, and CR25). This method of amplifier input protection allows common mode programming signals of 0–10 volts to be used. Finally, the (+) 6.2 volt reference sources (CR6) is similarly derived from the (+) 15 volt source, via dropping resistor R11. The negative reference potential is developed by the NEGATIVE REFERENCE amplifier (1/4 IC2) with input resistor R15 and feedback resistor R16. This reference source constitutes the internal reference potential for the VOLTAGE and CURRENT CONTROL AMPLIFIERS. The (\pm) 6.2 volt reference sources are terminated at the REAR PROGRAMMING CONNECTOR (PINS 28, 37) while the (\pm) 15 volt source is available at pins 39 and 40.
 - 2) **PRE-DRIVER COLLECTOR SUPPLY.** A half-wave rectifier (CR2) and capacitor filtered (C3) d-c source is derived from a secondary winding on T201, to supply the collector voltage for pre-driver stage (Q2).
 - 3) **RETURN SUPPLY.** This full wave rectifier (CR4, CR5) and capacitor filtered (C2) auxiliary supply is derived from the same secondary winding on T201 and the main d-c supply. The d-c supply is connected (with reverse polarity) across the ATE output terminals (in series with resistor R203) and provides a return path for the leakage current (I_{CBO}) of the main driver stage (Q305, via R3) and the pass transistors (Q301, Q302. . . number of pass transistors depends on ATE model number) via R202.
 - 4) **SCR SUPPLY.** A half-wave rectifier (CR1) and capacitive filtered (C1) auxiliary supply is derived from the main secondary winding on T201, to provide the operating voltage for the photo-SCR (LC2).
- m) **METERING CIRCUIT.** Both output voltage and output current are monitored by front panel meters (M101, M102). While the output voltage is measured directly across the error sensing terminals, the output current is measured indirectly as a voltage drop across the current sensing resistor (R305).

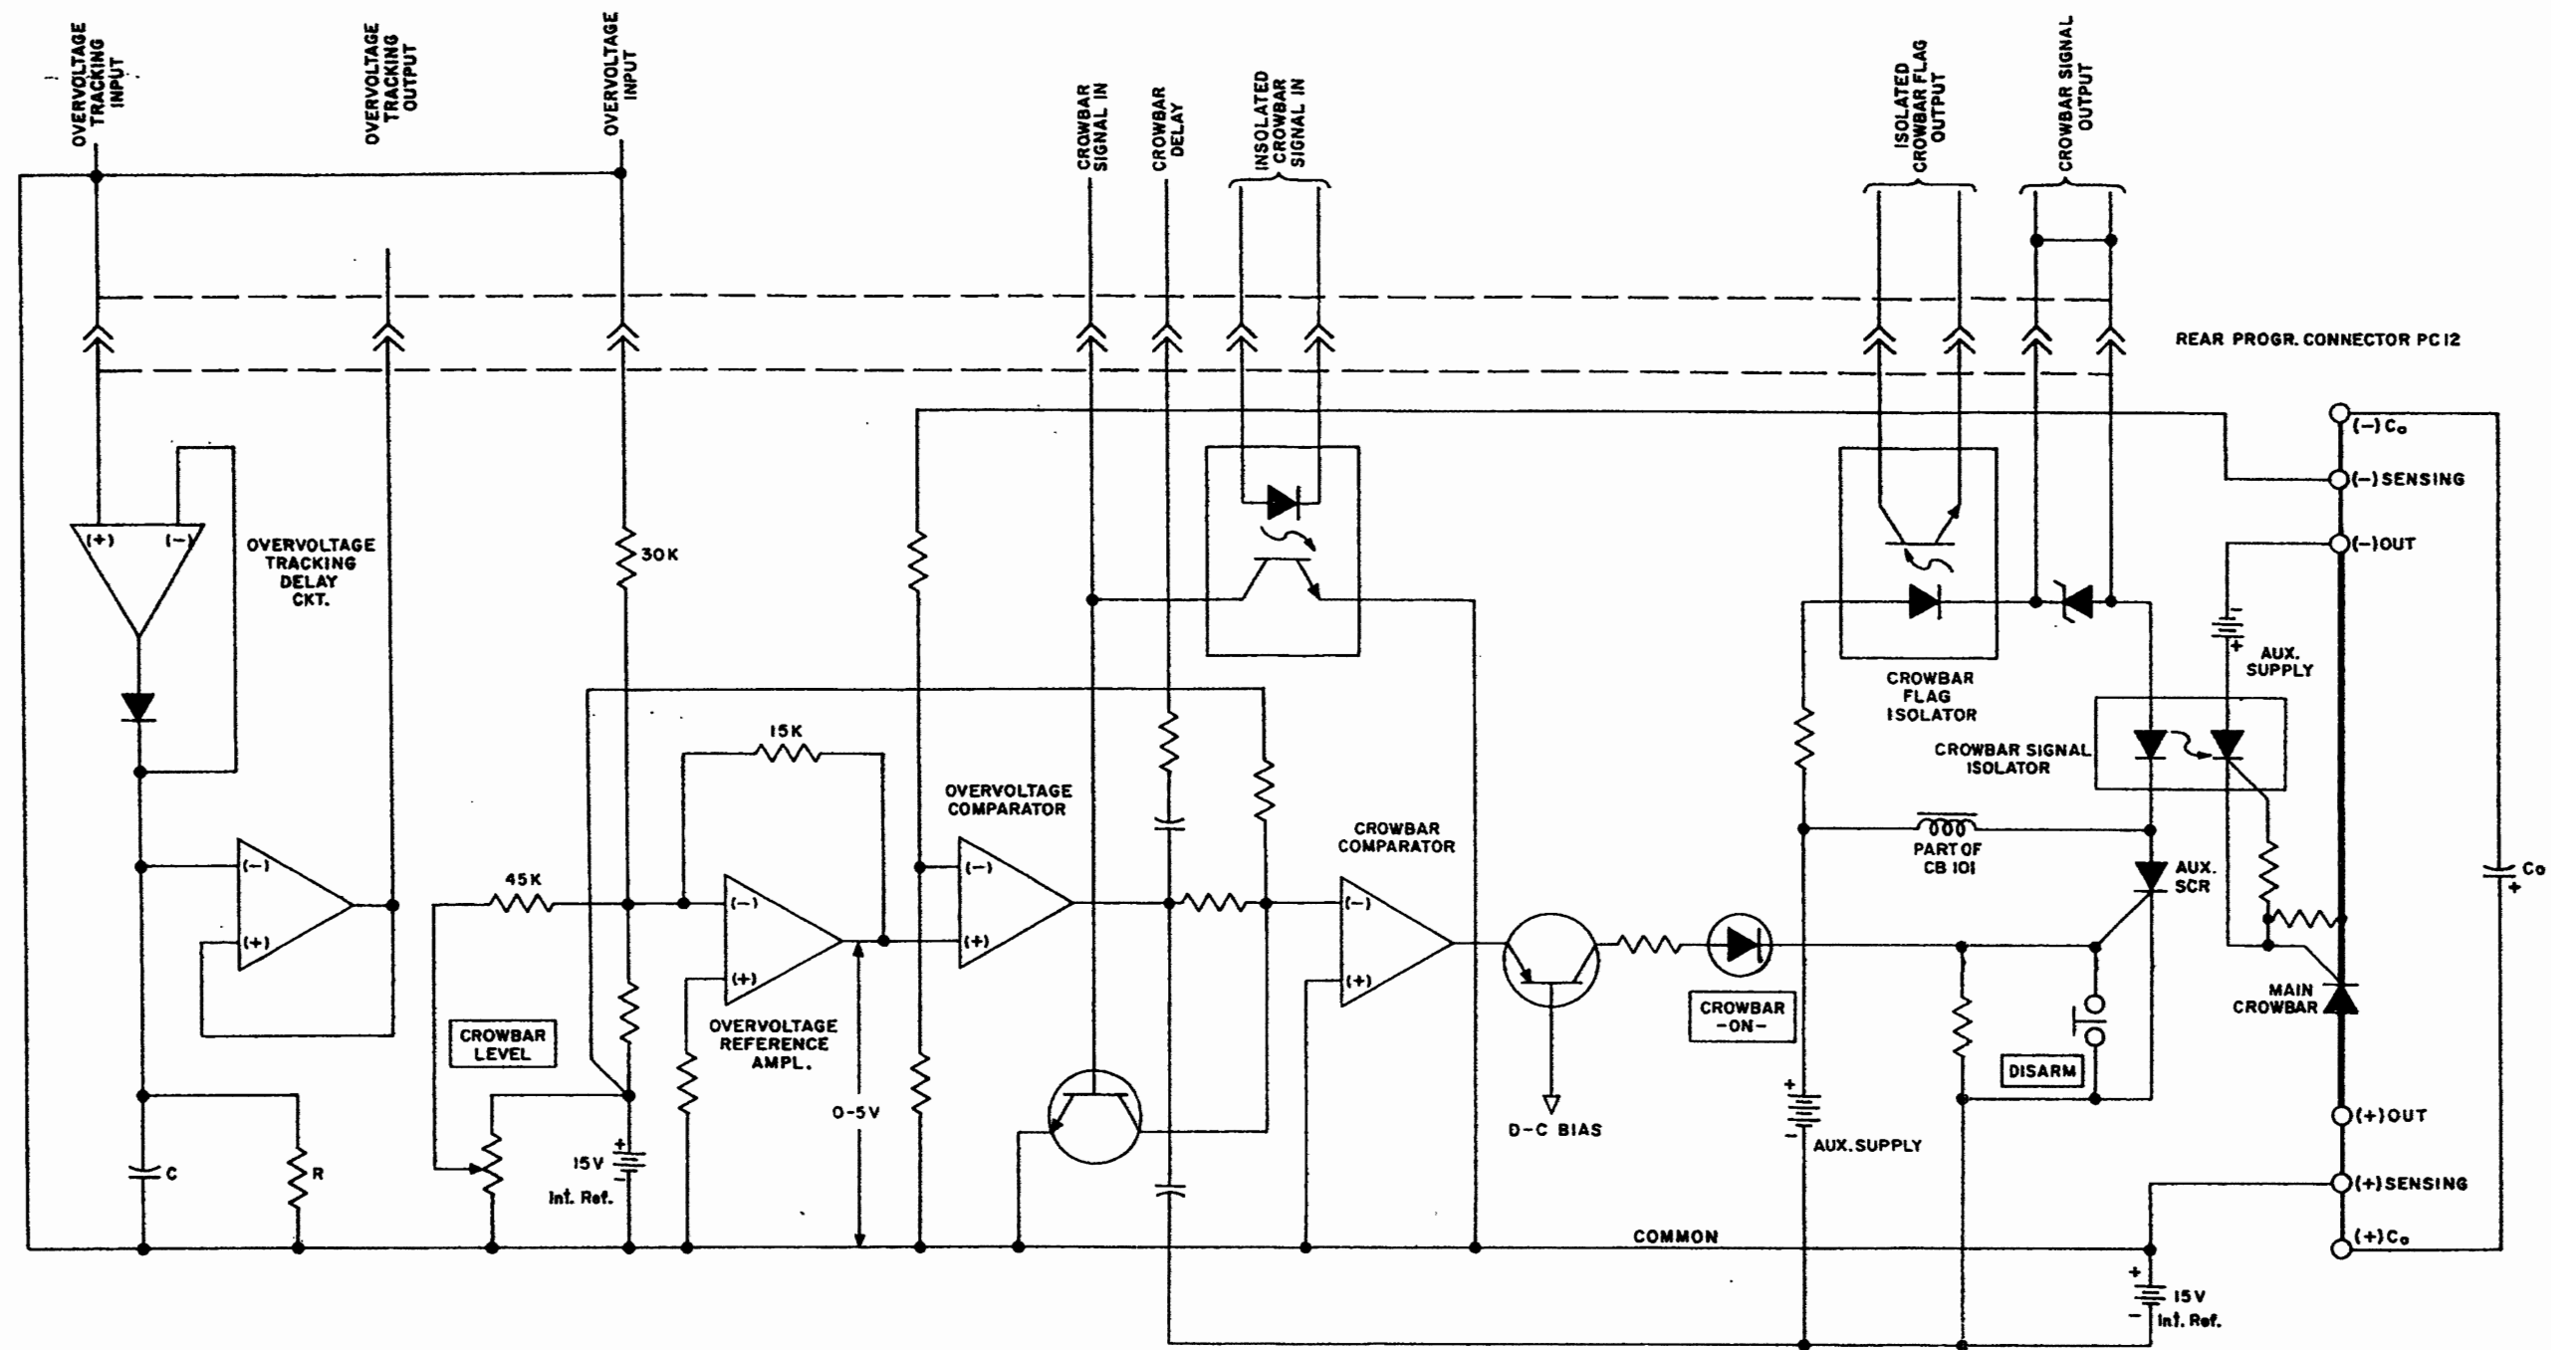


FIG. 4-7 PROGRAMMABLE OVERVOLTAGE PROTECTOR AND CROWBAR CIRCUIT, SIMPLIFIED SCHEMATIC DIAGRAM

- NOTES: 1. NOMENCLATURE SAME AS IN MAIN SCHEMATIC DIAGRAM.
2. JUMPER CONNECTIONS ON PC-12 ARE FOR FRONT PANEL (LOCAL) OUTPUT CONTROL.

SECTION V – MAINTENANCE

5-1 GENERAL

5-2 This section covers maintenance procedures, calibration, and test measurements of the Kepco ATE Power Supplies. Conservative rating of components and the noncongested layout should keep maintenance problems to a minimum. If trouble does develop, however, the easily removed wrap-around cover and the plug-in feature of the circuit boards provide exceptional accessibility to all components of the supply.

5-3 DISASSEMBLY (Refer to FIG. 5-1)

- a) **COVER REMOVAL.** The wrap-around cover may be taken off by loosening and removing its (10) holding screws, (4) on each side and (2) on the front panel.
- b) **CIRCUIT BOARD REMOVAL.** The printed circuit board is mounted with (4) screws, (2) of which are removed from the rear, (2) from the side. After removal of the (3) printed circuit board connectors, the board may be lifted from its slide-guide.
- c) **HEAT SINK REMOVAL.** The heat sink assembly is mounted with (3) screws to the chassis bottom. After the screws are taken out, the wires may be removed by means of the "quick-disconnect" terminals and the printed circuit board connector.
- d) **RE-ASSEMBLY.** Re-assembly of all components takes place in reverse order of the above described procedures.

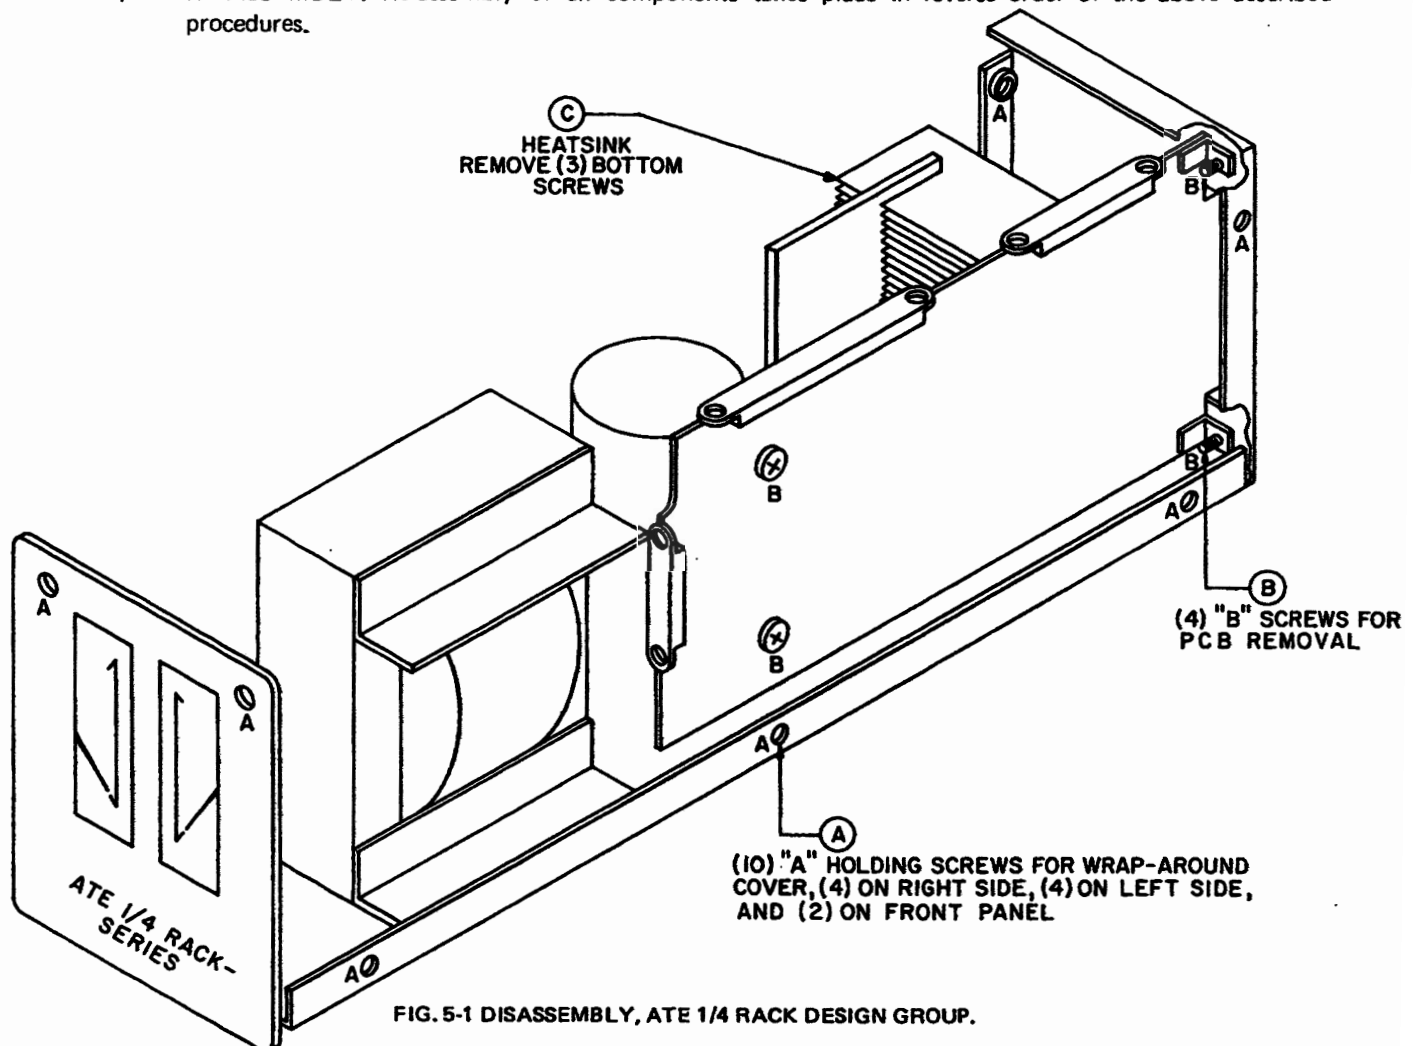


FIG. 5-1 DISASSEMBLY, ATE 1/4 RACK DESIGN GROUP.

5-4 INTERNAL ADJUSTMENT PROCEDURES

- 5-5 All available internal controls are located on the MAIN AMPLIFIER ASSEMBLY (A1) and are accessible through the top cover of the ATE (See Section II, FIG. 2-1). The practical use of the individual controls had been described for several application, in the "CALIBRATION" paragraphs of each application. (See Section III of this manual). The following paragraphs describe the function of *all* internal controls.
- 5-6 PRE-AMPL. ZERO CONTROLS (R62, 63). These controls are factory-set to zero output from each pre-amplifier, with zero input signal. When using one or both at the pre-amps of the ATE, the zero controls can be used to establish zero output from an external programming source, if the latter does not have a zeroing control.
- 5-7 I_O and E_O ZERO CONTROLS (R32, 39). These controls are factory-set to zero output from the ATE, with the front panel CURRENT and VOLTAGE controls set to their maximum counterclockwise position. In programming applications, when the ATE is controlled by external means, these controls can be used to establish zero output, with the external programming source at zero.
- 5-8 LAG NETWORK ADJUSTMENTS. A dynamic stability control in the form of a lag network (connected for fast mode operation only) has been provided in the voltage channel of this power supply (R24, " E_O LAG" see FIG. 2-1 for location). This network has been factory-adjusted for maximum amplifier stability when operating in the fast mode and into a resistive load. Re-adjustment is indicated if components affecting the dynamic characteristics of the amplifier must be replaced, or if the load connected to the power supply contains excessive capacity or inductance, causing instability. Dynamic instability is usually indicated by high frequency oscillation observed with an oscilloscope across the power supply load. In such cases, the lag network should be adjusted so that stable operation is resumed. If, in extreme cases, adjustment of the lag network should not prove sufficient, twisted load and error-sensing wire pairs, or decoupling capacity directly across the load, may provide a solution to the problem. The current channel does not require an adjustable lag control.

5-9 TROUBLE SHOOTING

- 5-10 Modern, high performance power supplies have reached a state of sophistication which requires thorough understanding of the problems involved in repairing complex, solid-state circuitry. Servicing beyond simple parts replacements should consequently be attempted only by personnel thoroughly familiar with solid state component techniques and with experience in closed-loop circuitry.
- 5-11 Trouble shooting charts, showing resistance and voltage readings, are of very limited usefulness with feedback amplifiers and are not included here. Instead, a detailed circuit description (Section IV), parts location diagrams, simplified functional schematics and a main schematic with all significant voltage readings are presented.
- 5-12 The following basic steps in case of power supply malfunctioning may be found helpful:
- a) NO OUTPUT:
 - 1) If power supply does not function at all, check obvious points first. Check a-c input source connections, a-c input source voltage and frequency. (Normally the power supply is delivered for 115V a-c service).
 - 2) Connect rear links on barrier strip TB201 for local sensing, see Section III, FIG. 3-2.
 - 3) Check if current control has been inadvertently misadjusted. Turn current control to its maximum *clockwise* position.
 - 4) Check the mating of the programming connector (PC-12) with the PC board at the rear of the ATE. Check for correct jumper positions on PC-12 for the application at hand.
 - 5) Check the mating of all printed circuit connectors with their printed circuit card.
 - 6) Check indicated voltage readings on the main schematic, check transistors and start circuit analysis with the help of Section IV.

- b) **HIGH OUTPUT:** Checks number (4), (5), and (6) are also applicable for this condition. In addition, check the following:
- 1) Test main driver transistor (Q305) and pass transistors (Q301 to Q3. . . ., number of transistors depending on the ATE model number, see Parts List, Section VI): Turn ATE off. Remove pre-driver transistor (Q2) from the Control Assembly (A1, see Section VI, FIG. 6-2 for location). Turn ATE on. If the ATE output is now zero, the pass element section (A3) is functioning. Concentrate trouble shooting on the Control Assembly (A1). Look for burned components, check small signal transistors and IC's either by successive replacement or by using an appropriate test instrument. Replace defective components.
 - 2) If the ATE output voltage is not zero after Q2 has been removed, the possible cause is a shorted pass or driver transistor in the pass element assembly (A3). The power transistors may be checked by means of an ohmmeter if a transistor tester is not available. Polarity reversal of the ohmmeter leads should produce an approximate 1:4 resistance ratio on functioning power transistors. Replace transistors with listed types only (See Parts List, Section VI).
- c) **POOR PERFORMANCE:**
- 1) Excessive output variations are often due to incorrectly connected loads or faulty measurement techniques. Perform measurements only as directed in PAR. 5-13 and follow the connection diagrams.
 - 2) High frequency oscillations at the output are often due to improperly adjusted lag networks (see Par. 5-8) *or* to loads with large inductive or capacitive components and/or long load wires. Tightly twisted load wires of sufficient diameter and kept as short as possible are often the solution to the problem. In extreme cases, decoupling **DIRECTLY AT THE LOAD** with appropriate capacitance should be applied.
 - 3) High ripple at the output or the load may be caused by ground loops or long load wires passing through magnetic fields. Grounding of one side of the output and careful lead dressing are often helpful, refer to Section III, par. 3-6 for more grounding information.
- d) KEPCO Field Engineering Offices or the KEPCO Applications Engineering Department are always available for consultation or direct help in difficult service or applications problems.

5-13 POWER SUPPLY MEASUREMENTS

5-14 Output effect measurements (regulation measurements) in the voltage or current mode of operation and output ripple measurements are an excellent indication of the power supply's d-c performance and may be performed with a minimum of instrumentation. Since these measurements require special techniques to insure correct results, suggestions for their performance are given below.

- a) **Required instrumentation.**
- 1) Constant a-c input source voltage with provisions for "stepping" the voltage over a specified region (105–125V). A variable autotransformer is generally adequate if it is rated to deliver the input current of the unit under test.
 - 2) Resistive load, variable, and capable of dissipating the full output power of the unit under test, equipped with on/off and shorting switch.
 - 3) D-C voltage monitor, differential voltmeter or power supply analyzer.
 - 4) A-C ripple monitor, sensitivity better than 1 mV. Ballentine Model 302C or Hewlett Packard Model 400H.
 - 5) Optional: Oscilloscope, vertical sensitivity better than 0.1 mV/cm.
- b) The proper location of the instrument leads when measuring output effects in response to a-c input source changes or load variations is of the utmost importance. Improperly placed leads may measure voltage drop due to contact resistance and load current flow and thus lead to incorrect results. FIG's. 5-2A and 5-2B show clearly how to employ "4-terminal network techniques" when measuring output effects. The principle is very simple but important: ***Do not measure voltage drops due to load current.***
- c) Output effects due to source or load variations in the voltage mode of operation are defined as the amount of output voltage change resulting from a specified change in a-c input source voltage or from a change in load resistance. These output effects can be expressed as an absolute change (ΔE_O) or as a percentage in reference to the total output voltage E_O :

$$\% \text{ Output Effect} = \frac{\Delta E_O}{E_O} (100\%) \quad (\text{Eq. 1}).$$


USE THE TEST SET-UP SHOWN IN FIG. 5-2. Vary the a-c input *or* the load over the specified limits and note the deviation (ΔE_O) on the instrument (M1). Calculate output effects by means of the equation (Eq. 1) above.

- d) Output effects due to source or load variations in the current mode of operation are defined as the amount of output current change resulting from a specified change in a-c input source voltage or from a change in load resistance. The output effects can be expressed as an absolute change (ΔI_O) or as a percentage in reference to the total output current I_O :

$$\% \text{ Output Effect} = \frac{\Delta I_O}{I_O} (100\%) \text{ (Eq. 2).}$$

USE THE TEST SET-UP SHOWN IN FIG. 5-2B. Vary the a-c input or the load over the specified limits and note the deviation (ΔV_{RM}) on the instrument connected across the measuring resistor ($M1$ across R_M in FIG. 5-2B). The change in output current is equal to: $\Delta I_O = V_{RM}/R_M$. Insert value of ΔI_O into the equation (Eq. 2) above and calculate the output effects.


- e) RIPPLE: Rms ripple may be monitored on a true rms reading instrument connected parallel to the instrument measuring the output effects. Careful wire dressing and shielding, as well as good a-c grounding, are of the utmost importance if valid measurements are expected. An oscilloscope may be used for p-p readings of noise and ripple. An approximate rms reading can be calculated from the p-p reading of the ripple displayed on the oscilloscope, if the reading is divided by three.

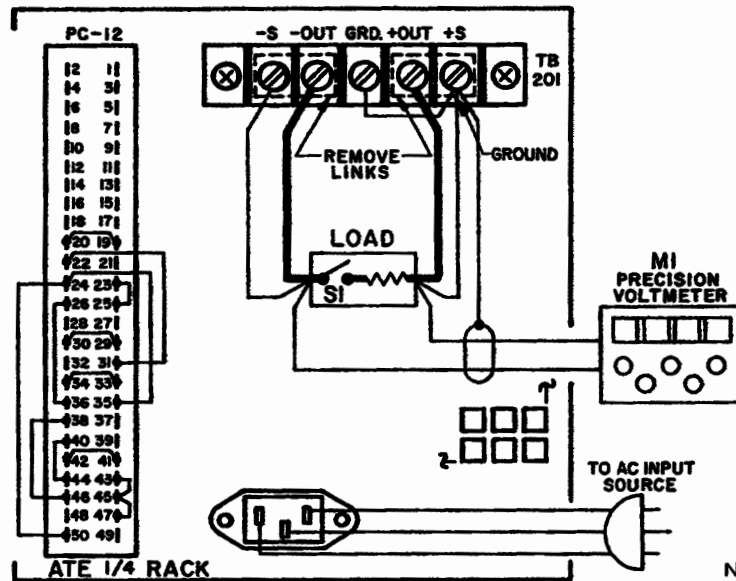

A) TEST SET-UP FOR "VOLTAGE MODE" MEASUREMENTS.

Note:

- 1) Test *Source Effect* with S1 closed and varying AC input source over the specified range.
- 2) Test *Load Effect* from 0 to 100% Load by opening and closing S1.

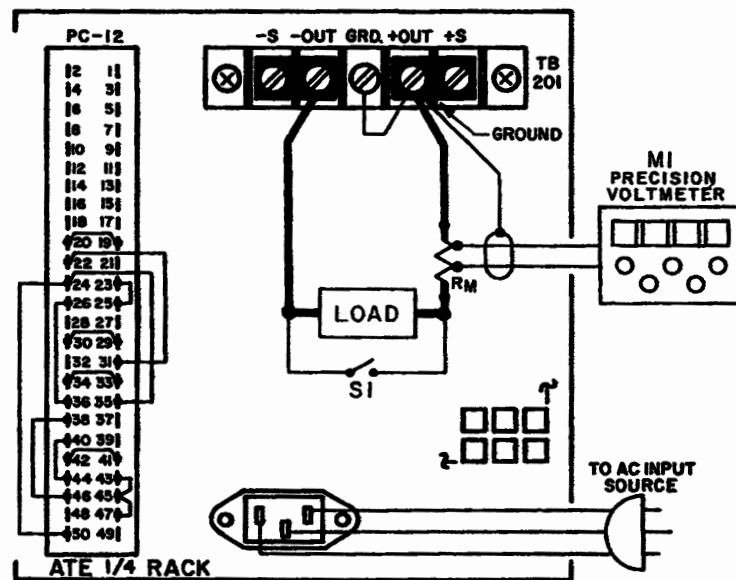

B) TEST SET-UP FOR "CURRENT MODE" MEASUREMENTS.

FIG. 5-2 TEST SET-UP DIAGRAMS FOR OUTPUT EFFECT MEASUREMENTS.

SECTION VI—ELECTRICAL PARTS LIST AND DIAGRAMS

6-1 GENERAL

- 6-2** This section contains the main schematic, the parts location diagrams, and a list of all replaceable electrical parts. All components are listed in alpha-numerical order of their reference designations. Consult your Kepco Representative for replacement of parts not listed here.

6-3 ORDERING INFORMATION

- 6-4** To order a replacement part or to inquire about parts not listed in the parts list, address order or inquiry either to your authorized Kepco Sales Representative or to:

KEPCO, INC.
131-38 Sanford Avenue
Flushing, N.Y. 11352

- 6-5** Specify the following information for each part:

- a) Power Supply Model number, Serial number, and Revision number stamped on the Nameplate of the unit.
- b) Kepco part number. See Parts List.
- c) Circuit reference designation. See Schematic Drawing.
- d) Description. See Parts List.

- 6-6** To order a part not listed in the parts list, give a complete description and include its function and location.

NOTE: KEPCO DOES NOT STOCK OR SELL COMPLETE POWER SUPPLY SUBASSEMBLIES AS DESCRIBED HERE AND ELSEWHERE IN THIS INSTRUCTION MANUAL. SOME OF THE REASONS ARE LISTED BELOW:

- 1) Replacement of a complete subassembly is a comparatively rare necessity.
- 2) Kepco's subassemblies are readily serviceable, since most of them are the "plug-in" type.
- 2) All active components are socket mounted, making replacement extremely easy.
- 4) The nature of a closed-loop power supply system requires that subassembly replacement is followed by careful measurement of the total power supply performance. In addition, depending on the function of the subassembly, extensive alignment may be required to restore power supply performance to specified values.

IF REPAIRS INVOLVING SUBASSEMBLY REPLACEMENTS ARE REQUIRED, PLEASE CONSULT YOUR LOCAL KEPCO REPRESENTATIVE OR THE KEPCO SALES ENGINEERING DEPARTMENT IN FLUSHING, NEW YORK, N.Y.

ABBREVIATIONS USED IN KEPCO PARTS LISTS

A) Reference Designators:

| | | | |
|-----------|----------------------------|-----------|------------------------|
| A | = Assembly | L | = Inductor |
| B | = Blower (Fan) | LC | = Light-Coupled Device |
| C | = Capacitor | M | = Meter |
| CB | = Circuit Breaker | P | = Plug |
| CR | = Diode | Q | = Transistor |
| DS | = Device, Signaling (Lamp) | R | = Resistor |
| F | = Fuse | S | = Switch |
| FX | = Fuse Holder | T | = Transformer |
| IC | = Integrated Circuit | TB | = Terminal Block |
| J | = Jack | V | = Vacuum Tube |
| K | = Relay | X | = Socket |

B Descriptive Abbreviations

| | | | |
|--------------|-----------------------------|----------------|---------------------------------|
| A | = Ampere | n | = Nano (10^{-9}) |
| a-c | = Alternating Current | NC | = Normally Closed |
| AMP | = Amplifier | NO | = Normally Open |
| AX | = Axial | p | = Pico (10^{-12}) |
| CAP | = Capacitor | PC | = Printed Circuit |
| CER | = Ceramic | POT | = Potentiometer |
| CT | = Center-Tap | PIV | = Peak Inverse Voltage |
| °C | = Degree Centigrade | p-p | = Peak to Peak |
| d-c | = Direct Current | ppm | = Parts Per Million |
| DPDT | = Double Pole, Double Throw | PWR | = Power |
| DPST | = Double Pole, Single Throw | RAD | = Radial |
| ELECT | = Electrolytic | RECT | = Rectifier |
| F | = Farad | RECY | = Recovery |
| FILM | = Polyester Film | REG | = Regulated |
| FLAM | = Flammable | RES | = Resistor |
| FP | = Flame-Proof | RMS | = Root Mean Square |
| °F | = Degree-Fahrenheit | Si | = Silicon |
| FXD | = Fixed | S-End | = Single Ended |
| Ge | = Germanium | SPDT | = Single Pole, Double Throw |
| H | = Henry | SDST | = Single Pole, Single Throw |
| Hz | = Hertz | Stud Mt | = Stud Mounted |
| IC | = Integrated Circuit | TAN | = Tantalum |
| K | = Kilo (10^3) | TSTR | = Transistor |
| m | = Milli (10^{-3}) | μ | = Micro (μ) (10^{-6}) |
| M | = Mega (10^6) | V | = Volt |
| MFR | = Manufacturer | W | = Watt |
| MET | = Metal | WW | = Wire Wound |



KEPCO. REPLACEMENT PARTS LIST

ATE 15-3M

CONTROL ASSEMBLY, PCB (A1)

Code 06-2282

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|-----------------------|------|--|--|----------------|----------------------|
| C1 | 1 | Cap., Elect., Ax. Leads 22 μ F, 20%, 50V | United Chemi-Con Type KMC | 117-0462 | 1 |
| C2,4 | 2 | Cap., Elect., Ax. Leads 220 μ F, 20%, 50V | United Chemi-Con Type KMC | 117-0651 | 1 |
| C3,23 | 2 | Cap., Elect., Ax. Leads 220 μ F, 20%, 15V | United Chemi-Con Type KMC | 117-0677 | 1 |
| C5,24,25 | 3 | Cap., Ceramic Disc 100pF, 10%, 500V | Radio Mat. Corp. Type JK | 117-0754 | 1 |
| C7,8 | 2 | Cap., Elect., Ax. Leads 10 μ F, 20%, 50V | United Chemi-Con Type KMC | 117-0136 | 1 |
| C9,10,11,16 | 4 | Cap., Film, Ax. Leads 0.01 μ F, 20%, 200V | Westlake 150 Series | 117-0353 | 1 |
| C12,15 | 1 | Cap., Film, Ax. Leads 4700pF, 10%, 200V | Westlake 150 Series | 117-0588 | 1 |
| C13 | 1 | Cap., Met., Film 560pF, 10%, 200V | Sprague Type 192P | 117-0569 | 1 |
| C14 | 1 | Cap., Ceramic Disc 47pF, 20%, 1000V | Radio Mat. Corp. Type CN | 117-0088 | 1 |
| C17 | 1 | Cap., Film, Ax. Leads 0.001 μ F, 10%, 200V | Sprague Type 192P | 117-0570 | 1 |
| C18 | 1 | Cap., Ceramic Disc 500pF, 10%, 500V | Radio Mat. Corp. Type JF | 117-0755 | 1 |
| C19 | 1 | Cap., Film, Ax. Leads 0.5 μ F, 10%, 200V | Wesco Type 33M | 117-0123 | 1 |
| C20,32 | 2 | Cap., Tantalum, Ax. Leads 1 μ F, 20%, 50V | Sprague Type 162D | 117-0815 | 1 |
| C21 | 1 | Cap., Elect., Ax. Leads 22 μ F, 20%, 15V | United Chemi-Con Type KMC | 117-0444 | 1 |
| C22 | 1 | Cap., Elect., Ax. Leads 150 μ F, + 75 - 10%, 3V | Mallory Type TT | 117-0512 | 1 |
| C26 | 1 | Cap., Elect., Ax. Leads 470 μ F, 20%, 25V | United Chemi-Con Type KMC | 117-0648 | 1 |
| C27 | 1 | Cap., Film, Ax. Leads 0.1 μ F, 20%, 600V | Wesco Type 33M | 117-0316 | 1 |
| C30 | 1 | Cap., Ceramic Monolithic 0.1 μ F, 20%, 50V | Kemet Type C320 | 117-0967 | 1 |
| C31 | 1 | Cap., Ceramic, Disc 0.01 μ F, + 80 - 20%, 50V | Centralab Type CK-103 | 117-0860 | 1 |
| C33 | 1 | Cap., Ceramic Disc 0.047 μ F, 20%, 50V | Radio Mat. Corp. Type MLC2020L | 117-0964 | 1 |
| CR1,4,5,45 | 4 | Diode, Rect., Ax. Leads 400V (PIV), 1A | Semicon Inc. Type SI-4 | 124-0028 | 1 |
| CR2 | 1 | Diode, Rect., Ax. Leads 100V (PIV), 1A | Semicon Inc. Type SI-1 | 124-0133 | 1 |
| CR3 | 1 | Rectifier Bridge 200V (PIV), 1A | General Instruments Type W-02 | 124-0346 | 1 |
| CR6 | 1 | Diode, Zener, Ax. Leads 6.2V, 5%, 0.4W | Motorola 1N827 | 121-0062 | 1 |
| CR7 | 1 | Diode, Zener, Ax. Leads 15V, 5%, 1W | Motorola 1N3024B | 121-0057 | 1 |

6-3/6-4

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.

**KEPCO®****REPLACEMENT PARTS LIST****MODEL ATE 15-3M****CONTROL ASSEMBLY, PCB (A1)****Code 10-0984**

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|----------------------------------|------|---|--|----------------|----------------------|
| CR8 | 1 | Diode, Zener, Ax. Leads 11V, 5%, 0.5W | Motorola 1N5241B | 121-0082 | 1 |
| CR9 | 1 | Diode, Zener, Ax. Leads 12V, 5%, 0.4W | Int. Rect. Corp. 1N963B | 121-0058 | 1 |
| CR10,11,12,13, 15 thru 41, 44 | 32 | Diode, Switching 75V (PIV), 1A, 0.4W | AM Power Devices 1N4148 | 124-0437 | 6 |
| CR14 | 1 | Diode, Zener, Ax. Leads 6.8V, 5%, 0.5W | Motorola 1N5235B | 121-0080 | 1 |
| CR42 | 1 | Diode, Zener, Ax. Leads 3.3V, 5%, 0.4W | Motorola 1N746A | 121-0060 | 1 |
| CR43 | 1 | Thyristor, SCR 100V ($V_{R_{XM}}$), 4A, TO-220 | RCA S2062A | 124-0496 | 1 |
| IC1,4,9,10 | 4 | IC, Op. Amp., 741 Type 8 Pin-Dip | Texas Instruments SN72741P | 250-0025 | 1 |
| IC2 | 1 | IC, Quad Op. Amp., 324 Type 14 Pin-Dip | National LM324N | 250-0050 | 1 |
| IC3 | 1 | IC, Op. Amp. 8 Pin-Dip | Texas Instruments TL081CP | 250-0100 | 1 |
| IC5,6 | 2 | IC, Dual Op. Amp. 8 Pin-Dip | Motorola MC1458 | 250-0040 | 1 |
| IC7,8 | 2 | IC, Comparator, 311 Type 8 Pin-Dip | Texas Instruments SN72311P | 250-0063 | 1 |
| LC1,3,4 | 3 | Opto Coupler (Photo-TSTR) 6 Pin-Dip | Monsanto MCT2 | 119-0106 | 1 |
| LC2 | 1 | Opto Coupler (Photo-SCR) 6 Pin-Dip | Kepco Inc. 119-0115 | 119-0115 | 1 |
| Q1,2 | 2 | Transistor, Si., NPN Low Power, TO-5 | RCA 2N3053 | 119-0059 | 1 |
| Q3,4,6 | 3 | Transistor, Si., PNP Small Signal, Plastic | Fairchild 2N5138 | 119-0096 | 1 |
| Q5 | 1 | Transistor, Si., NPN Small Signal, TO-18 | Texas Instruments 2N5450 | 119-0093 | 1 |
| R1 | 1 | Res., Fxd., Molded 10K ohm, 10%, ½W | Allen Bradley EB1031 | 115-0489 | 1 |
| R2,59 | 2 | Res., Fxd., Molded 10 ohm, 10%, ¼W | Allen Bradley CB1001 | 115-2230 | 1 |
| R3 | 1 | Res., Fxd., Molded 3.9K ohm, 10%, 1W | Allen Bradley GB3921 | 115-2116 | 1 |
| R4 | 1 | Res., Fxd., Molded 510 ohm, 5%, 2W | Allen Bradley HB5115 | 115-2116 | 1 |
| R5,29 | 2 | Res., Fxd., Molded 100 ohm, 10%, ¼W | Allen Bradley CB1011 | 115-2231 | 1 |
| R6,26,33 | 3 | Res., Fxd., Molded 560 ohm, 10%, ¼W | Allen Bradley CB5611 | 115-2210 | 1 |
| R7,53 | 2 | Res., Fxd., Molded 2.2K ohm, 10%, ¼W | Allen Bradley CB2221 | 115-2382 | 1 |

6-5/6-6

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.

**KEPCO®****REPLACEMENT PARTS LIST****MODEL ATE 15-3M****CONTROL ASSEMBLY, PCB (A1)****Code 10-0984**

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|--|------|--|--|----------------|----------------------|
| R8 | 1 | Res., Fxd., Molded 2K ohm, 5%, ½W | Allen Bradley EB2025 | 115-0520 | 1 |
| R9 | 1 | Res., Fxd., Metal Film 8.06K ohm, 1%, ⅛W | Dale Type RN55D | 115-2445 | 1 |
| R10 | 1 | Res., Fxd., Metal Film 5.62K ohm, 1%, ⅛W | Dale Type RN55D | 115-2409 | 1 |
| R11 | 1 | Res., Fxd., Metal Film 1.1K ohm, 1%, ¼W | Dale Type RN60D | 115-1860 | 1 |
| R12,13,21,37 | 4 | Res., Fxd., Molded 330 ohm, 10%, ¼W | Allen Bradley CB3311 | 115-2233 | 1 |
| R14 | 1 | Res., Fxd., Molded 180 ohm, 10%, ¼W | Allen Bradley CB1811 | 115-2385 | 1 |
| R15,16 | 2 | Res., Fxd., Metal Film 10K ohm, 1%, ⅛W | Dale Type RN55D | 115-2174 | 1 |
| R17 | 1 | Res., Var., Cermet, Trim. 1K ohm, 10%, ¾W | Bourns Type 3009P | 115-2456 | 1 |
| R18,61 | 2 | Res., Fxd., Molded 4.7K ohm, 10%, ¼W | Allen Bradley CB4721 | 115-2383 | 1 |
| R19,20 | 2 | Res., Fxd., W.W., Ax. Lds. 5.7K ohm, 1%, 1W | Tepro Type TS1 | 115-1301 | 1 |
| R22,23,25,34, 36,54,65,66,67, 68,69,70,71,75 | 14 | Res., Fxd., Molded 1K ohm, 10%, ¼W | Allen Bradley CB1021 | 115-2238 | 2 |
| R24 | 1 | Res., Var., Cermet, Trim. 500 ohm, 10%, ¾W | Bourns Type 3009P | 115-2398 | 1 |
| R27,28 | 2 | Res., Fxd., Molded 12K ohm, 10%, ¼W | Allen Bradley CB1231 | 115-2276 | 1 |
| R30 | 1 | Res., Fxd., Molded 10 ohm, 5%, ¼W | Allen Bradley CB1005 | 115-2643 | 1 |
| R31,38,40,41 | 4 | Res., Fxd., Metal Film 2K ohm, 1%, ⅛W | Dale Type RN55D | 115-2334 | 1 |
| R32 | 1 | Res., Var., Cermet, Trim. 100K ohm, 10%, ¾W | Bourns Type 3009P | 115-2399 | 1 |
| R35 | 1 | Res., Fxd., Molded 390K ohm, 5%, ½W | Allen Bradley EB3945 | 115-0252 | 1 |
| R39,62,63 | 3 | Res., Var., Cermet, Trim. 10K ohm, 10%, ¾W | Bourns Type 3009P | 115-2481 | 1 |
| R42,50,78 | 3 | Res., Fxd., Molded 2.7M ohm, 5%, ¼W | Allen Bradley CB2755 | 115-2602 | 1 |
| R43 | 1 | Res., Fxd., Metal Film 11K ohm, 1%, ¼W | Dale Type RN60D | 115-1804 | 1 |
| R44 | 1 | Res., Fxd., Metal Film 40.2K ohm, 1%, ⅛W | Dale Type RN55D | 115-2391 | 1 |
| R45 | 1 | Res., Fxd., Metal Film 15K ohm, 1%, ⅛W | Dale Type RN55D | 115-2452 | 1 |
| R46 | 1 | Res., Fxd., Metal Film 5.76K ohm, 1%, ⅛W | Dale Type RN55D | 115-2222 | 1 |

6-7/6-8

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES.

KEPCO, INC.



KEPCO. REPLACEMENT PARTS LIST

ATE 15-3M

CONTROL ASSEMBLY, PCB (A1)

Code 10-0984

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|-----------------------|------|---|--|----------------|----------------------|
| R48,55 | 2 | Res., Fxd., Molded 47K ohm, 10%, ¼W | Allen Bradley CB4731 | 115-2237 | 1 |
| R51,77 | 2 | Res., Fxd., Molded 1.5K ohm, 10%, ¼W | Allen Bradley CB1521 | 115-2229 | 1 |
| R52 | 1 | Res., Fxd., Molded 100K ohm, 10%, ¼W | Allen Bradley CB1041 | 115-2641 | 1 |
| R56,57 | 2 | Res., Fxd., Molded 10K ohm, 10%, ¼W | Allen Bradley CB1031 | 115-2211 | 1 |
| R58 | 1 | Res., Fxd., Molded 3.9K ohm, 10%, ¼W | Allen Bradley CB3921 | 115-2640 | 1 |
| R60 | 1 | Res., Fxd., Molded 1K ohm, 5%, ½W | Allen Bradley EB1025 | 115-0340 | 1 |
| R72 | 1 | Res., Fxd., Metal Film 30.1K ohm, 1%, ¼W | Dale Type RN55D | 115-2541 | 1 |
| R73 | 1 | Res., Fxd., Molded 220 ohm, 5%, ½W | Allen Bradley EB2215 | 115-0470 | 1 |
| R74 | 1 | Res., Fxd., Molded 3.3K ohm, 10%, ¼W | Allen Bradley CB3321 | 115-2257 | 1 |
| R76 | 1 | Res., Fxd., Molded 39K ohm, 10%, ¼W | Allen Bradley CB3931 | 115-2469 | 1 |
| R79 | 1 | Res., Fxd., Molded 220 ohm, 10%, ¼W | Allen Bradley CB2211 | 115-2227 | 1 |
| RN1 | 1 | Res., Network, 2 units 15K ohm and 10K ohm, 1% | Kepco Inc. 234-0010 | 234-0010 | 1 |

6-9/6-10

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPKO, INC. ORDERS SHOULD INCLUDE KEPKO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPKO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPKO, INC.

**KEPCO®****REPLACEMENT PARTS LIST****ATE 15-3M****MAIN CHASSIS ASSEMBLY (A2), WITH FRONT PANEL****Code 10-0984**

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|-----------------------|------|---|--|----------------|----------------------|
| DS101 | 1 | Panel Light, Green | Dialco Type 507 | 152-0097 | 1 |
| DS102 | 1 | Panel Light, Yellow | Dialco Type 507 | 152-0098 | 1 |
| DS103 | 1 | Panel Light, Red | Dialco Type 507 | 152-0092 | 1 |
| M101 | 1 | Ammeter, 0-3A | Kepco Inc. 135-0418 | 135-0418 | 1 |
| M102 | 1 | Voltmeter, 0-20V | Kepco Inc. 135-0406 | 135-0406 | 1 |
| R101 | 1 | Res., Var., Cermet, Panel Mt. 10K ohm, 10%, 1W | Bourns Type 3059J | 115-2621 | 1 |
| S101 | 1 | Switch, Push-Button N.O., 115V-1/10A | Grayhill 30-1-N.O. | 127-0203 | 1 |

CHASSIS ASS'Y. CONTAINS:

| | | | | | |
|-----------|---|--|-------------------------------|----------|---|
| B201 | 1 | Fan, Motor | Kepco Inc. 148-0026 | 148-0026 | 1 |
| C201 | 1 | Cap., Elect., Can-Type 12K μ F, + 75 - 10%, 35V | Sprague Type 36D | 117-0859 | 1 |
| C202 | 1 | Cap., Ceramic Disc 0.05 μ F, 20%, 500V | Radio Mat. Corp. Type B | 117-0163 | 1 |
| CB201 | 1 | Circuit Breaker Dual-Coil | Kepco Inc. 127-0298 | 127-0298 | 1 |
| CR201 | 1 | Diode, Rect., Stud-Mt. 200V (PIV), 15A | Westinghouse R3100215 | 124-0352 | 1 |
| CR202 | 1 | Thyristor, SCR, Stud-Mt. 200V (PIV), 19A | General Electric Type C30B | 124-0268 | 1 |
| CR203,204 | 2 | Diode, Rect., Ax. Leads 100V (PIV), I_f @ 0.5V-5 μ A max. | Semicon Type HVP | 124-0178 | 1 |
| R201 | 1 | Res., Fxd., Molded 680 ohm, 10%, 2W | Allen Bradley HB6811 | 115-0486 | 1 |
| R202,203 | 2 | Res., Fxd., Power-Strip 750 ohm, 5%, 10W | E-Systems MZ10-750 | 115-1603 | 1 |
| R204 | 1 | Res., Var., W.W., Pot. 10K ohm, 5%, 2W | Spectrol Type 534 | 115-1234 | 1 |
| R205 | 1 | Res., Var., W.W., Pot. 1K ohm, 5%, 2W | Bourns Type 3509S | 115-1304 | 1 |
| R206 | 1 | Res., Fxd., Molded 100 ohm, 10%, 1/4W | Allen Bradley CB1011 | 115-2231 | 1 |
| T201 | 1 | Transformer, Power | Kepco Inc. 100-2138 | 100-2138 | 1 |

-6-11/6-12

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



KEPCO. REPLACEMENT PARTS LIST

ATE 15-3M

HEAT SINK ASSEMBLY (A3)

Code 06-2282

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|-----------------------|------|---|--|----------------|----------------------|
| C301,302 | 2 | Cap., Ceramic Disc 0.01 μ F, 20%, 500V | Radio Mat. Corp. Type B-GP | 117-0084 | 1 |
| C303 | 1 | Cap., Film, Ax. Leads 2200pF, 10%, 200V | Westlake 150 Series | 117-0659 | 1 |
| CR301,302 | 2 | Diode, Rect., Ax. Leads 100V (PIV), 5A | Semicon Type S-5A1 | 124-0347 | 1 |
| Q301,302 | 2 | Transistor, Si., NPN Power, TO-3 | Kepco Inc. 119-0061 | 119-0061 | 1 |
| Q305 | 1 | Transistor, Si., NPN Med. Power, TO-66 | RCA 2N3054 | 119-0060 | 1 |
| R301,302 | 2 | Res., Fxd., Power, Ax. Leads 0.3 ohm, 3%, 3W | E-Systems ML3-0.3 | 115-2139 | 1 |
| R305 | 1 | Res., Fxd., Prec., W.W. (4-T) 0.33 ohm, 1%, 5W | Tepro Type TSK5 | 115-2197 | 1 |
| R306 | 1 | Res., Fxd., Molded 100 ohm, 10%, 1/4 W | Allen Bradley CB1011 | 115-2231 | 1 |
| R307 | 1 | Res., Fxd., Molded 470 ohm, 10%, 1/4 W | Allen Bradley CB4711 | 115-2235 | 1 |

6-13/6-14

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



KEPCO. REPLACEMENT PARTS LIST

ATE 15-3M

MISCELLANEOUS MECHANICAL PARTS

Code 10-0984

| REFERENCE DESIGNATION | QTY. | DESCRIPTION | MFRS. NAME & PART NO. SEE BOTTOM NOTE | KEPCO PART NO. | REC. SPARE PART QTY. |
|-----------------------|------|--|--|----------------|----------------------|
| N.A. | 3 | Holding Clip for Front Panel LED Lamp | Dialco 515-0051 | 102-0107 | 1 |
| N.A. | 2 | Knob, Front Panel Control | Alco PKA-50B-¼ | 155-0052 | 1 |
| TB201 | 1 | Barrier Strip, 5-Terminals | Kepeco Inc. 167-0832 | 167-0832 | 1 |
| N.A. | 4 | Foot, Bottom | Bruce Plastics Inc. 0965-0014 | 158-0008 | 1 |
| N.A. | 1 | Line Cord, AWG-18, 3-Wire with Plug | Kepeco Inc. 118-0552 | 118-0552 | 1 |
| PC-12 | 1 | Rear Programming Connector, not Wired | Kepeco Inc. Model PC-12 | Model PC-12 | 1 |
| N.A. | 1 | Fan Blade, 3" Dia. | Kepeco Inc. 149-0019 | 149-0019 | 1 |
| P201 | 1 | A-C Power Receptacle | Switchcraft EAC-302 | 143-0290 | 1 |

6-15/6-16

NOTE: REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.


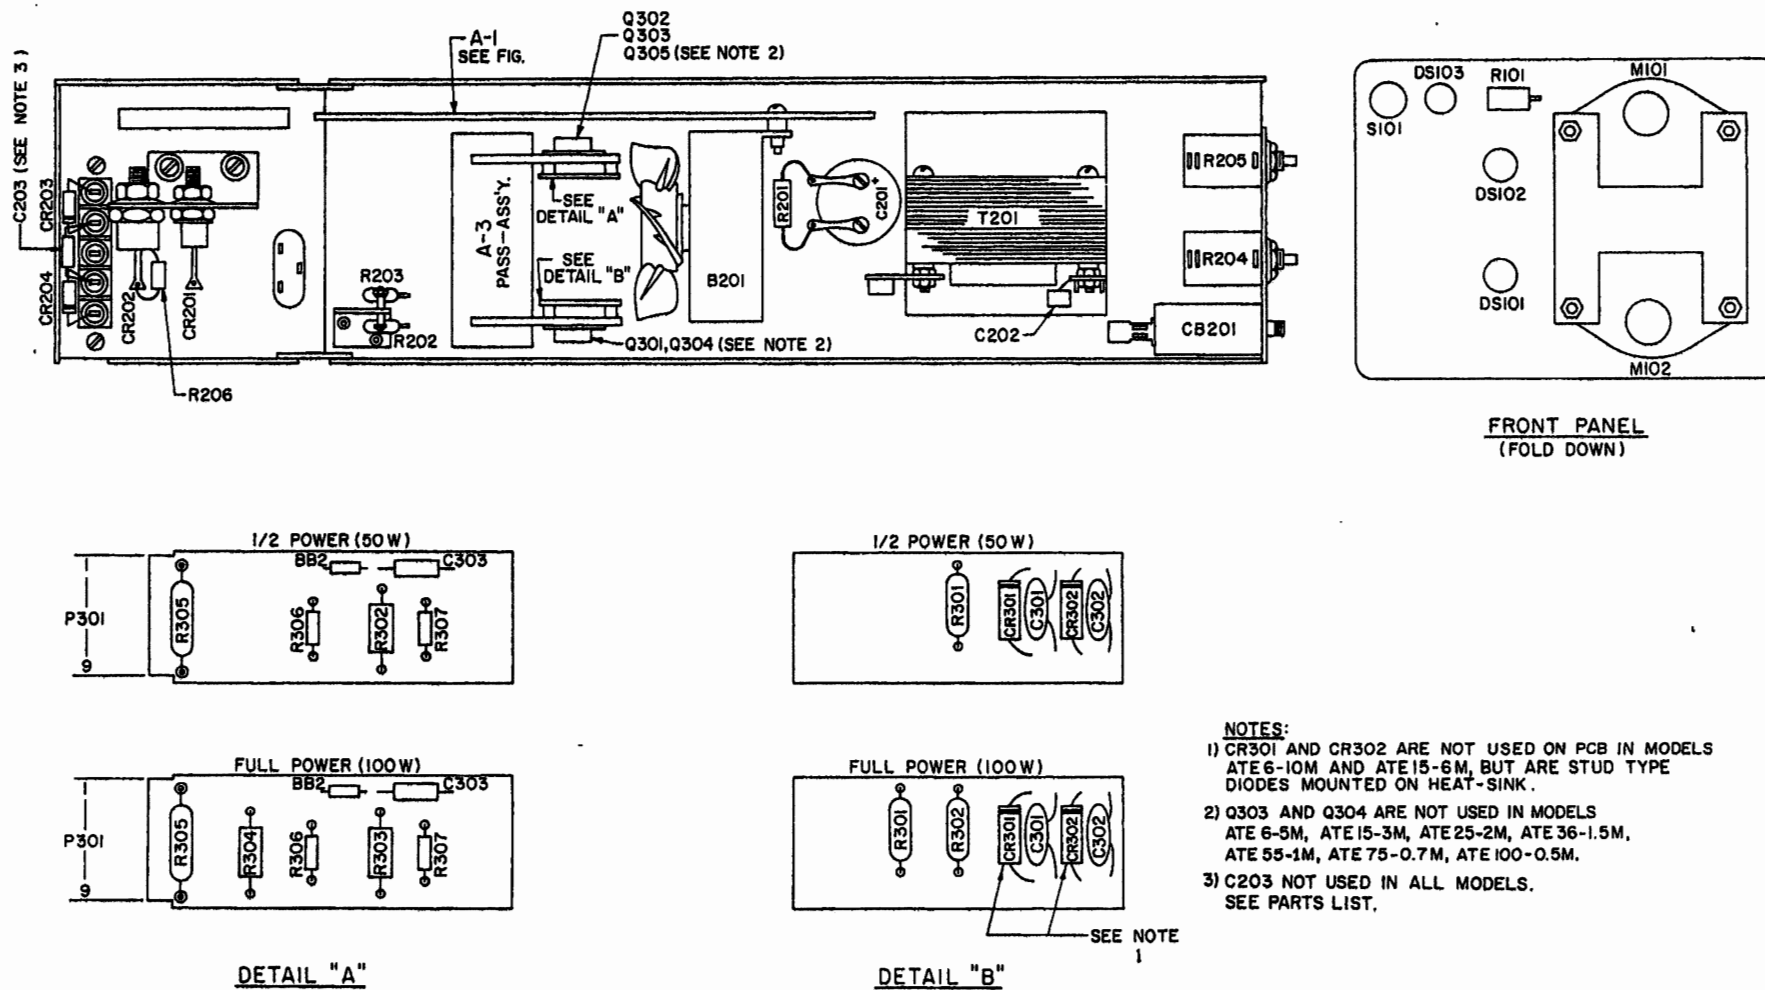


FIG. 6-1 COMPONENT LOCATION, MAIN CHASSIS ASSEMBLY WITH FRONT PANEL AND HEAT SINK ASSEMBLY.

FIG. 6.2 COMPONENT LOCATION, CONTROL ASSEMBLY (A1).



NOTE: NOT ALL COMPONENTS USED IN ALL MODELS, SEE PARTS LIST.

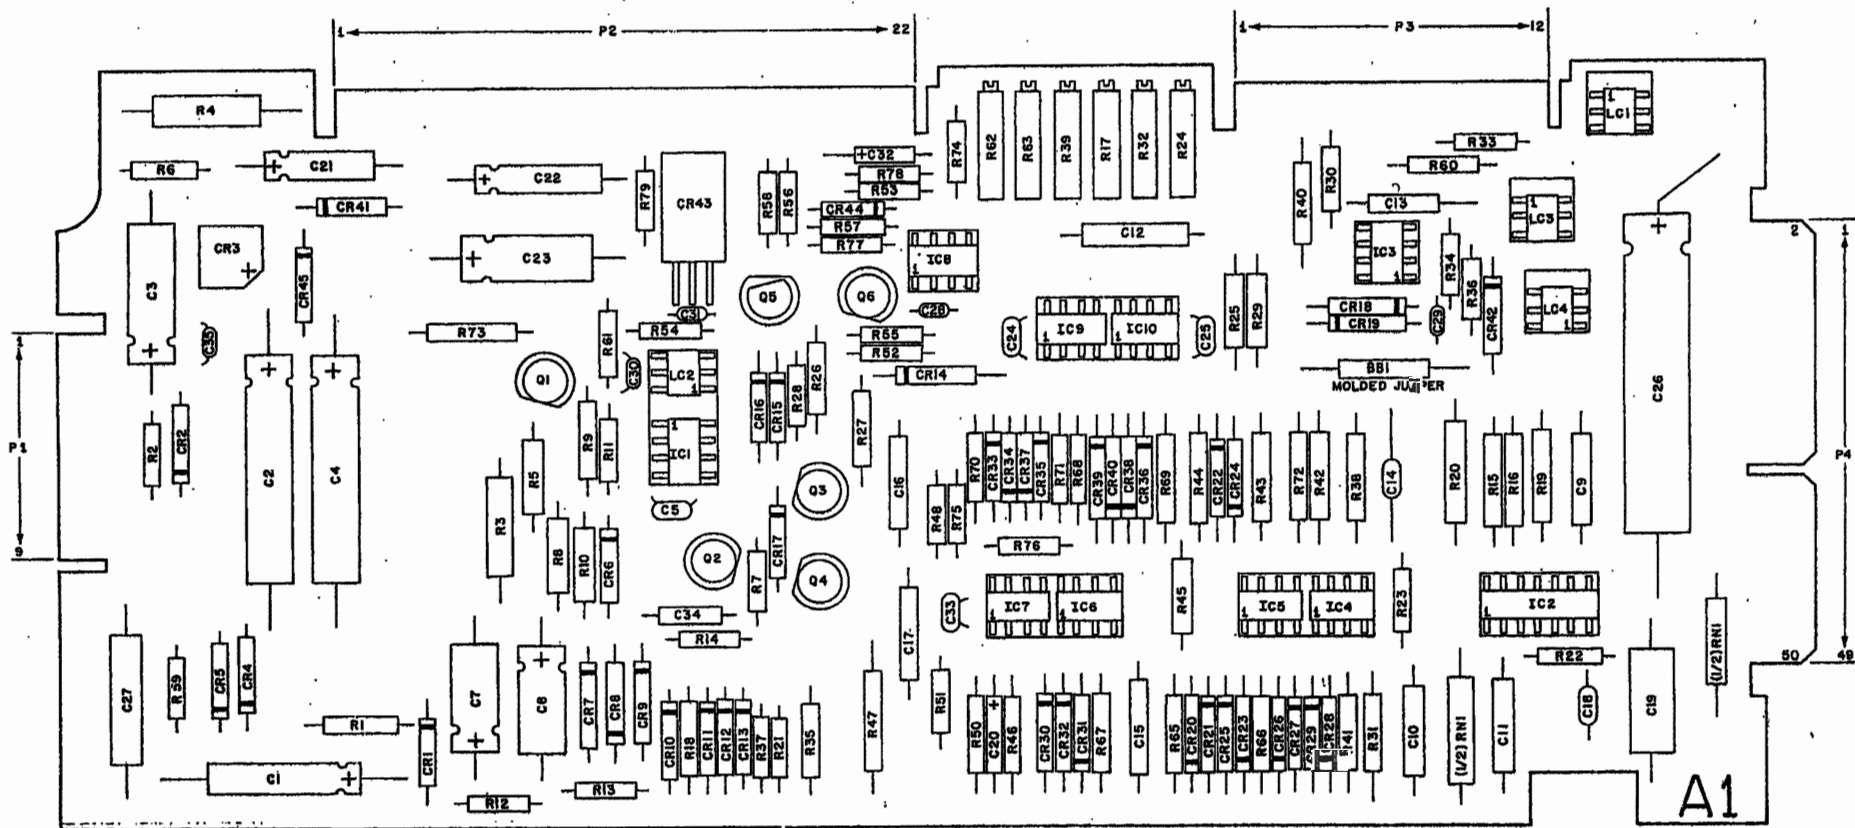

KEPCO®
THE POWER SUPPLIER™

INSTRUCTION MANUAL CORRECTION

Please note the following corrections to the Manual Material as indicated:

Parts List and Schematic Diagram:

| | | | | |
|-------------|-----------------|---------------------------|----------------------|-----------------|
| 1. CHANGE: | R8 | Res.,Fxd.,Molded | 2K ohm,5%,1/2W | Kepco #115-0520 |
| To: | R8 | Res.,Fxd.,Molded | 820 ohm,5%,1/2W | Kepco #115-0956 |
| 2. CHANGE: | R17 | Res.,Variable,Cermet,Trim | 1K ohm,10%,3/4W | Kepco #115-2456 |
| To: | R17 | Res.,Variable,Cermet,Trim | 2K ohm,10%,3/4W | Kepco #115-2405 |
| 3. CHANGE: | R20 | Res.,Fxd.,W.W.,Ax. Leads | 5.7K ohm,1%,1W | Kepco #115-1301 |
| To: | R20 | Res.,Fxd.,W.W.,Ax. Leads | 5K ohm,1%,1W | Kepco #115-2604 |
| 4. CHANGE: | B201 | Motor,Fan | 115V,50/60Hz | Kepco #148-0026 |
| To: | B201 | Motor,Fan | 115V,50/50Hz | Kepco #148-0050 |
| 5. CHANGE: | Blade,Fan,Nylon | | 2 5/8" Dia.,4 Blades | Kepco #149-0019 |
| To: | Blade,Fan,Nylon | | 2 5/8" Dia.,4 Blades | Kepco #149-0034 |
| 6. CHANGE: | BB2 | Molded Jumper | | Kepco #172-0298 |
| To: | R308 | Res.,Fxd.,Molded | 100 ohm,5%,1/4W | Kepco #115-2231 |
| 7. CHANGE: | R60 | Res.,Fxd.,Carbon Film | 1K ohm,0.5W,5% | Kepco #115-0340 |
| To: | R60 | Res.,Fxd.,Carbon Film | 1K ohm,0.5w,5% | Kepco #115-0547 |
| 8. CHANGE: | R3 | Res.,Fxd.,Carbon Film | 3.9K ohm,1W,5% | Kepco #115-0927 |
| To: | R3 | Res.,Fxd.,Carbon Film | 3.9K ohm,1W,5% | Kepco #115-2122 |
| 9. CHANGE: | R30 | Res.,Fxd.,Carbon Film | 10 ohm,0.25W,5% | Kepco #115-2643 |
| To: | R30 | Res.,Fxd.,Carbon Film | 10 ohm,0.25W,5% | Kepco #115-2230 |
| 10. CHANGE: | C1 | Capacitor | 22UF,50V,+75 -10% | Kepco #117-0462 |
| To: | C1 | Capacitor | 22UF,100V,20% | Kepco #117-1103 |

ATE15-3M/10-1488/r12
ATE15-3M/05-1589/r13
ATE15-3M/10-1995/r14
ATE15-3M/12-2795/r14

C6028
C6125
C7384
BMC

ATE15-3M/05-2496/r14
ATE15-3M/07-3097/r15
ATE15-3M/05-1499/r16
ATE15-3M/09-1604/r17

BMC
C7992
C8612
C10391