
REASSEMBLY

Check to make sure that all parts are clean and dry. To lubricate the o-rings, apply a small amount of halocarbon grease prior to reassembly. If applicable, reinstall the rod guide assembly into the flowmeter body. Make sure the rod guide is seated firmly in the body of the meter. Reinstall the top plug, making sure

that the rod guide is properly aligned. Tighten top plug until it's flush with top of acrylic body. Exceeding this may damage the meter body.

If you have any questions regarding the installation, maintenance or use of this flowmeter, please call the Customer Service Department at 1-800-356-7483.

DIME	ENSIONS	FR2000	FR4000	FR4500
A	IN.	4	6 1/2	6 5/8
	mm	102	165	168
В	IN.	3	5 1/2	5 1/2
	mm	76.2	140	140
С	IN.	1	1 3/8	1 1/8
C	mm	25.4	34.9	28.6
D	IN.	1 5/8	3 1/2	3 1/2
D	mm	41.3	88.9	88.9
E	IN.	1 3/16	1 1/2	1 1/2
	mm	30.2	38.1	38.1
F	IN.	1 1/8	1 1/8	1 3/8
	mm	28.6	28.6	34.9
G	IN.	1/8-27	1/8-27	1/4-18
	mm	MNPT	MNPT	MNPT

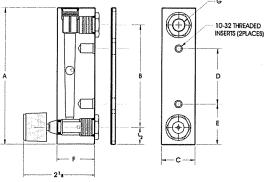

FR2000 SERIES FLOW RATES					
RANGE	MODEL	RANGE	MODEL		
SCFH OF AIR	CODE	LPM OF AIR	CODE		
.1-1	2A00	.04-5	2A12		
.2-2	2A01	,1-1	2A13		
.4-5	2A02	.2-2.5	2A29		
1-10	2A03	.4-5	2A14		
2-20	2A04	1-10	2A15		
330	2A05	2-25	2A16		
4-50	2A06	4-50	2A17		
10-100	2A07	10-100	2A18		
20-200	2A08	GPH OF WATER	CODE		
CCM OF WATER	CODE	GIN OF WATER	CODE		
CCM OF WATER	CODE	.2-2	2L28		
5-50	2L09	.4-5	2L19		
10-100	2L10	1-10	2L20		
20-240	2L11	2-20	2L21		
		4-40	2L22		

FR4000 SERIES FLOW RATES					
RANGE	MODEL	RANGE	MODEL		
SCFH OF AIR	CODE	CCM OF WATER	CODE		
.4-5	4A30	4-50	4L38		
1-10	4A31	10-120	4L56		
2-20	4A32	25-225	4L51		
4-40	4A33	40-400	4L50		
10-100	4A34	40-660	4L52		
14-150	4A35	100-1500	4L53		
20-200	4A36	200-3000	4L54		
CCM OF AIR	CODE	300-3700	4L55		
	CODE	GPH OF WATER	CODE		
100-1000	4A39	GPH OF WATER			
LPM OF AIR	CODE	1-10	4L45		
LPM OF AIR	CODE	2-25	4L48		
.4-5	4A40	4-50	4L49		
1-10	4A41	6-60	4L46		
2-20	4A42	SCEM OF AID	CODE		
3-30	4A43	SCFM OF AIR			
4-50	4A44	.3-3	4A37		
10-100	4A47				

FR4500 SERIES FLOW RATES *						
RANGE	MODEL	RANGE	MODEL			
SCFM OF AIR	CODE	LPM OF AIR	CODE			
.5-5	4A67	14-140	4A72			
1-10	4A65	30-300	4A70			
4-20	4A68	100-560	4A73			
GPM OF WATER	CODE	LPM OF WATER	CODE			
.25-2.5	4L64	1-10	4L69			
.5-5	4L66	2-20	4L71			

^{*}Does not include 1/8" backplate.