



Molex Japan Co., Ltd.

OPERATING MANUAL

INSTRUCTION MANUAL NO.	
IS-0008E	
ISSUED	1979-04-20
REVISED	2005-03-31
REV.	A

EXTRACTION TOOL: 2.36mm (.093") Diameter Pin and Socket

Tool Number : J5800-003

1. Introduction

This document is prepared so that the tool is properly used.

Please take the time to read this manual, making sure you understand the operating procedures described herein before attempting to operate the tool.

2. Specifications

Applicable housing number	1189, 1190, 1380, 1381, 1433, 1434, 2151, 2152
Applicable terminal number	1261, 1292, 1360, 1375, 1396, 1490, 1545, 1619, 1653, 1816, 2629, 2163, 1991, 3191



3. Operation steps

No	Operation steps	Explanation figure
1	Hold an extraction tool as shown in a right picture.	<p>Extraction tool</p>
2	Insert the cylindrical part of the tool point from the terminal side, and insert it until the tool point bumps to the interior of the housing.	<p>Extraction tool</p> <p>Housing</p> <p>Terminal</p> <p>Ejector pin</p>
3	The terminal comes off from the housing when the ejector pin of the tool is pushed with the tool inserted.	<p>Ejector pin</p>

"Note" Please surely lock the terminal pushing the lance of the housing when you install the terminal again after pulling out.