# BVL-100 Fume Extraction System





## SYSTEM USER GUIDE

BVX-100 USER GUIDE	3
BVX-100 GUIDE DE L'UTILISATEUR	10
BVX-100 BEDIENUNGSANLEITUNG	17
MANUALE D'USO BVX-100	24
BVX-100 使用说明	31
CONTACT INFORMATION	38



## **BVX-100 USER GUIDE**

SYSTEM OVERVIEW	4
SYSTEM SET UP and OPERATION	
FILTRATION	6
MAINTENANCE and SAFETY	7
TROUBLESHOOTING	8
SPECIFICATIONS	8
WARRANTY	8
PARTS, REPLACEMENT FILTERS AND ACCESSORIES	9


Technical and Customer Services: Here to help you

If you have difficulty setting up your system, diagnosing problems, or replacing any part, please give your local OK International representative a call.

#### SYSTEM OVERVIEW

## BVX-100 System

- 1. Plenum (the open portion at the bottom of the system where fumes are absorbed)
- 2. Power Cord Socket
- 3. On/Off Switch
- 4. Power On Light/Clogged Filter Indicator
- 5. Arm and Adapter
- Filter
- 7. Lock

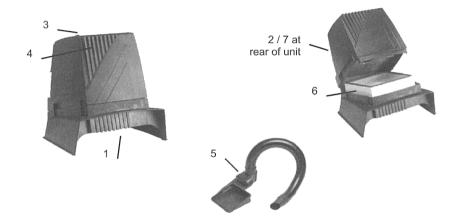

The BVX-100 fume extractor is a bench top fume extraction system specifically designed for portability and performance. This unit meets the needs of both single users and today's fast-paced, flexible manufacturing. The key benefits of this system compared to larger, multi-user machines include: no installation required, flexibility in operation (plenum or arm), a small footprint that allows bench top placement, quiet operation, bi-color LED light to indicate a blocked filter, 50 CFM (85 m³/h) air flow - the same as the multi-user systems with 50mm arms, and ESD safe materials.

The BVX-100 consists of a 12" wide (300mm) plenum, with your choice of two, high-quality, filtration methods. For clean room quality filtration, use the 99.997% efficient HEPA filter. In addition, for light duty organic solvent and adhesive applications, a deep bed carbon filter is also available.

An under-bench mounting bracket, for use with the existing range of OK International arms and nozzles, can be purchased when bench-top space is at a premium. Replacement arms, nozzles and filters are also available for the BVX-100.

## SYSTEM SET-UP and OPERATION

Remove BVX-100 from packaging materials and place on workbench where fume extraction is necessary. Plug the power cord into the outlet on the back of the system. Plug the power cord into a grounded wall socket.

WARNING: To provide protection against the risk of electrical shock, connect only to properly grounded outlets.

To power the system, click the power switch located on the top left of the unit to the "1" position. The LED light will illuminate green when system is "On." If you plan on using the unit with an arm, install the arm prior to powering the system (see Arm Operation for installation instructions). Test the "Blocked Filter" LED Indicator to assure proper operation by blocking the front of the hose or plenum. If operating properly, the LED should change from green to orange. Once you are familiar with operating the system, you can choose your preference of plenum or arm operation.

## PLENUM OPERATION

Place the plenum in front of the work area where fume extraction is necessary. Plug the system in and click "On." Fumes will be absorbed collected through the opening at the bottom of the plenum. Impurities are then removed in the filter and clean air returned to the environment.

#### ARM OPERATION

If you need the flexibility to move the fume collection device to the source of the fumes, the BVX-100 easily converts for use with an arm. An arm and adapter come with the BVX-100 system for easy conversion to arm use. Make sure the system is "Off" and unplugged. Slide the adapter into the plenum till it stops and secure it to the top of the plenum with the lock. Insert the cuffed end of the arm into the adapter. Adjust the arm as needed.



www.okinternational.com

The BVX-100 can also be used with benchmounted arms normally used with multi-user systems. Remove the arm and nozzle from the arm adaptor assembly. Insert the 50mm hose, supplied with the arm, into the arm adaptor assy.



## "BLOCKED FILTER" LED INDICATOR

When the unit is operating properly, the LED indicator will illuminate green. If the HEPA or pre- filter becomes clogged, the LED light will change to orange, indicating the blocked filter. The pre-and/or main filter should be replaced until the light returns to green (see FILTRATION). The LED indicator will not turn orange when the gas filter is saturated. Pre-filters should be replaced three to five times as frequently as the HEPA filter. The gas filter life will be dependent upon the amount of gas vapor in the air stream.

## "NO FILTER" SAFETY INTERLOCK

The safety interlock is a switch that prevents the system from operating open. This safety feature keeps the blower from operating when the unit is open to replace filters, and it prevents the system from contamination if operation is attempted without a filter.

#### **FILTRATION**

OK International fume extraction products are designed to effectively remove and filter fumes generated on the electronics workbench. Two filter configurations are offered with the BVX-100.

For use in light to medium soldering and clean rooms, a 99.997% HEPA / activated carbon gas filtration main filter is recommended. For light duty organic solvent and adhesive applications, a deep bed, activated carbon filter is recommended. In both applications, a dual stage pre-filter is provided to retain the large particles that can reduce filter efficiency and life.

## Filter Replacement

A clogged filter will reduce the performance of your system. The BVX-100 monitors the airflow of the system and the LED will change from green to orange when the filter is clogged. The unit will continue to operate, but failure to promptly replace the filter may result in premature failure of the system.

## Replacement of filters:

- 1. Turn the unit off.
- 2. Disconnect the power cord from the outlet on the system.
- 3. Unlatch the housing from the plenum (the latch is located on the back).
- 4. Remove housing off the plenum.
- 5. Replace the filter.
- Replace housing on plenum and lock.
- 7. Reconnect power cord and turn system on.
- 8. If the LED is still orange, refer to Troubleshooting.

## Filter Disposal

When used in soldering applications, the HEPA and pre-filters collect particles and may be disposed without restrictions. The filters have been EPA tested and certified non-hazardous waste for TCLP (Toxicity Characteristic Leaching Procedure) Test Method 1311 (Extraction) as defined by EPA standards.

The gas filters collect some organic materials and care in disposal may be required. The filters may contain toxic materials and inhalation of dust particulate or exposure to skin must be avoided. Please consult the MSDS's for the materials used at your facility and follow the prescribed handling instructions.

## MAINTENANCE and SAFETY

The BVX-100 is designed with low maintenance in mind. The housing is aluminum finished with high quality ESD safe powder coat paint. The plenum and arm are ESD safe plastic. Here are a few tips to keep your system running in top shape:

- 1. To clean, use a light wipe with a gentle cleaner to prevent build up of particulates and flux residue (be sure unit is turned off while cleaning).
- 2. Do not block the exhaust outlets; this will cause the operating temperature of the system to rise, potentially damaging the unit, and drop in performance.
- 3. Do not defeat the filter interlock switch. Running the system without a filter will allow particulates and flux residue to adhere to the blower and decrease the life of the system and increase the noise.
- 4. Be sure to handle the filters appropriately (See FILTRATION).
- 5. Do not lift system while operating

#### **TROUBLESHOOTING**

Symptom LED does not illuminate	Possible Cause No power	Solution Check electrical outlet for output Check On/Off switch Check power cords Check for main filter Check for safety interlock switch
LED orange	Blocked filter or air flow	511 (O D ) - 1 - 5
main		filter.)
Little air flow	Air leak	Housing not installed correctly Arm adaptor not installed correctly
No air flow	Blower does not work Interlock switch open	No electrical power No filter installed Housing not closed correctly

Please call OK INTERNATIONAL if: your system is still not working properly, or if the LED is green with no air flow.

#### **SPECIFICATIONS**

5 in H20 (1250 Pa) Static Pressure:

50 CFM (85 m3/hr) w/HEPA filter Flow Rates:

Noise Level: < 55 dbA

14.3 lbs. (6.5 kg) Weiaht:

Weight: Size H x W x D: 11.5" x 12" x 9" (29cm x 30cm x 23cm)

90 - 264 VAC Voltage: 50 - 60 HzFrequency: 85 Watt Power:

#### WARRANTY

OK International warrants the BVX-100 system, except consumables (e. g. arms, nozzles and filters), against any defects in materials or workmanship for one year from the date of purchase by original owner.

If the product should become defective within the warranty period, OK International Inc., will repair or replace it free of charge at its sole option. The replacement item(s) will be shipped, freight prepaid, to the original purchaser. The warranty period will start from the date of purchase. If the date of

purchase cannot be substantiated, the date of manufacture will be used as the start of the warranty period.

To return a failed unit for repair or replacement, follow the steps outlined below in Return Procedure. This offer does not apply to any previously opened, modified, repaired, altered, misused or damaged unit.

## RETURN PROCEDURE

Call the OK International RMA Department to obtain a Returned Material Authorization (RMA) number. Proof and date of purchase must be on file for the returned product(s).

#### **FUME EXTRATION SYSTEM**

Parts, Replacement Filters and Accessories

Part No	Description
BVX-101	Bench Top, Single User, Arm/Plenum, Pre-HEPA-Gas, 100-240VAC
BVX-103	Bench Top, Single User, Arm/Plenum, Pre- Gas, 100-240VAC

Replacement Filters

FG-BVX Filter, Deep Bed Gas FM-BVX Filter, Main (combined HEPA/Gas)

FP-BVX Filter, Pre (Packs of 5)

Accessories

BVX-ADT Replacement arm-to-plenum

BVX-ARM Replacement flexible arm, ESD safe BVX-BCK Under bench mounting bracket

BVX-NOZ1 Nozzle, 40mm diameter

## **BVX-100 GUIDE DE L'UTILISATEUR**

VUE D'ENSEMBLE DU SYSTEME	11
NSTALLATION DU SYSTEME et FONCTIONNEMENT	12
FILTRATION	13
MAINTENANCE et SECURITE	14
DETECTION DES PANNES	15
SPECIFICATIONS	15
GARANTIE	16
PIECES, FILTRES ET ACCESSOIRES DE RECHANGE	16

Service technique et Service clients : A votre disposition pour vous aider Si vous avez des difficultés pour installer votre système, diagnostiquer des problèmes ou remplacer une pièce, appelez votre représentant OK International local.