 


# **Regent®**

*Instruction Manual*  
*Manual de Instrucciones*  
*Directives*

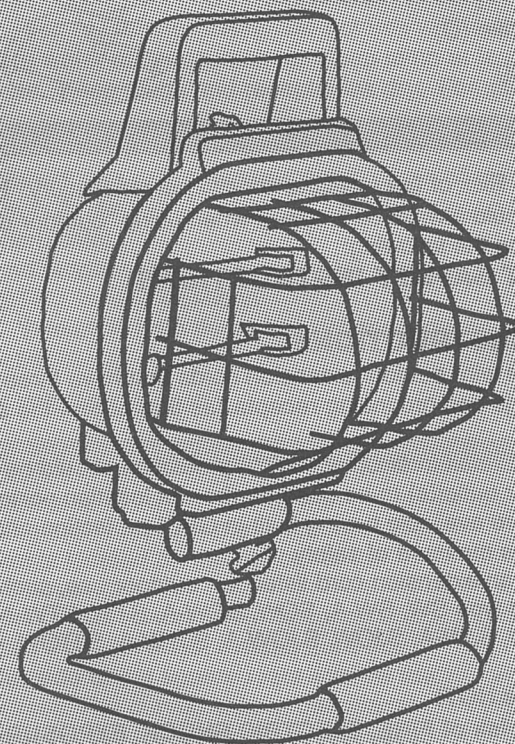

**P600**

**600 Watt Portable Worklight**

ENGLISH

ESPAÑOL

FRANÇAIS



 
# Regent®

## P600 600 Watt Portable Worklight

**Congratulations!** You have purchased a Regent 600-watt portable worklight. This versatile light is perfect for many different applications where a wide area of light is needed.

### What's included:

- Light fixture (A)
- Stand (B)
- (3) 300 Watt halogen bulbs –  
(Two located in fixture, plus  
BONUS bulb stored in handle) (C)
- Protective Grille (D)
- Hardware Bag

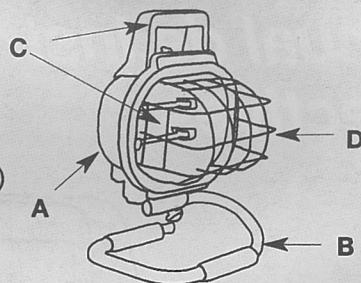

### What to know:

**WARNING:** Risk of fire / electric shock / personal injury. Basic safety precautions should always be followed when using "outdoor use worklights", including the following:

### IMPORTANT SAFETY INSTRUCTIONS

#### READ ALL INSTRUCTIONS

- Use only three wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance's plug.
- Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for the wet location portable lamps. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.
- Use only with an extension cord listed for outdoor use, such as an extension cord type SW, SW-A, SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A, SJOW, SJOW-A, SJTW-A, SJTOW, OR SJTOW-A.

#### Lighted lamp is HOT!

**To reduce the risk of FIRE, ELECTRIC SHOCK, EXPOSURE TO EXCESSIVE UV RADIATION, OR INJURY TO PERSON, please follow the following instructions.**

 
- **WARNING:** Risk of burn. Disconnect power and allow fixture to cool before changing bulb or handling fixture.
- Bulb gets HOT quickly! Only contact switch/plug when turning on.
- Do not touch hot lens, guard, or enclosure.

- Do not remain in light if skin feels warm.
- Do not look directly at lighted bulb
- **WARNING:** Risk of fire. Keep away from flammable vapors and materials
- Use only a 300 watt, or lower wattage halogen type "T" bulb. Use of any other bulb will damage the fixture and void the warranty. Installing a higher wattage bulb could create a fire hazard.
- Do not touch the bulb at any time. Use a soft cloth or gloves. Oil from skin may damage bulb.
- **WARNING:** Risk of Personal Injury. Exposure to Ultraviolet (UV) Radiation. Do not operate with a damaged or missing protective barrier.
- Do not direct light at persons
- Fixture must be connected to a 120 Volt, 60 Hz power source. Any other connection voids that warranty.
- The electrical system, and the method of electrically connecting the fixture to it, must be in accordance with the National Electric Code and local building codes.
- **WARNING:** Risk of Electric Shock. Do not use with extension cord near water or where water may accumulate. Keep lamp at least 16 feet from pools and spas. Keep plugs and receptacles dry. For use only on GFCI protected circuits.
- Disassembly of the fixture will void the warranty.
- If lens is replaced, use only tempered safety glass of equal thickness.
- For maximum bulb life, position light so that the halogen bulb remains within 4° of horizontal.
- For indoor and outdoor use.
- UL / cUL LISTED for wet locations
- **WARNING:** Deviation from these instructions may result in a risk of fire, burns or electric shock.

### SAVE THESE INSTRUCTIONS

#### Assembling your fixture:

- Step 1:** Slide the end of the "S" stand, with the screw hole in it, into the opening of the tube on the U-bracket. This bracket is located on the bottom of the fixture housing.
- Step 2:** Slip the plastic spacer over the screw that extends from the knob, making sure that the flat side of the spacer rests against the knob itself. The curved side of the spacer will rest against the curvature of the stand as the knob is tightened (figure A). Then, align the threaded screw hole in the stand with the slotted hole in the tube and secure with the knob provided.
- Step 3:** To install the wire safety guard, insert bottom of the guard between the frame and lens. Squeeze the guard until the top can be placed between the opposite side of the frame and lens.

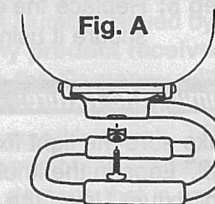



### How to Use:

- Step 1:** Plug light into a GFCI protected 120-volt receptacle.
- Step 2:** To turn light ON, or OFF, push red switch on the back of the fixture.
- 1st push 300-watt setting
  - 2nd push 600-watt setting
  - 3rd push OFF

### Bonus bulb included:

This fixture includes a spare bulb, which insures that you can always finish your job or project without interruption due to bulb failure. The spare bulb and holder are located in the back of handle of the light fixture (Figure B). Pull tabs on bottom of bulb holder to release.

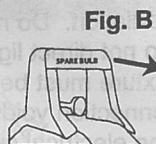 


Fig. B

### Replacing the bulb:

**NOTE:** Always handle halogen bulbs with gloves or with a clean soft cloth. Oil from your skin can cause premature failure of the bulb.

- Step 1:** Make sure fixture is turned OFF and unplugged.
- Step 2:** Loosen the plastic knob on the back on the fixture door (figure C).

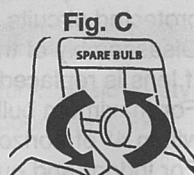 


Fig. C

- Step 3:** The door frame and lens assembly will swing down allowing access to the bulb.

- Step 4:** Using gloves or soft cloth, press the old bulb to one side of the spring loaded socket as indicated on the metal reflector. Remove opposite end of bulb from the other side of the socket. Remove the new bulb from its package making sure not to touch bulb with bare hands. Reverse this procedure to install a new replacement bulb (figure D).

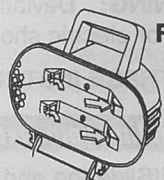 


Fig. D

- Step 5:** Replace the door frame and lens assembly and secure it using the plastic knob.

### Aiming the fixture:

Make sure the light fixture is in the OFF position and cool. Loosen the knob located on the U-bracket under light fixture. Using the top carrying handle tilt to desired position then retighten knob (figure E). There is a stop that restricts the downward movement of the fixture for your safety.

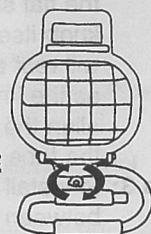 


Fig. E

### Two Year Limited Warranty:

Cooper Lighting ("the Company") warrants this product ("the product") against defects in material or workmanship for a period of two years from date of original purchase, and agrees to repair or, at the Company's option, replace a defective product without charge for either replacement parts or labor during such time. This does not include labor to remove or install fixtures.

This warranty is extended only to the original purchaser of the product. A purchasers receipt or other proof of date of original purchase acceptable to the Company is required before warranty performance shall be rendered.

This warranty only covers product failure due to defects in materials or workmanship which occurs in normal use. It does not cover the bulb or failure of the product caused by accident, misuse, abuse, lack of reasonable care, alteration, or faulty installation, subjecting the product to any but the specified electrical service or any other failure not resulting from defects in materials or workmanship. Damage to the product caused by separately purchased, non-Company brand replacement bulbs and corrosion or discoloration of brass components are not covered by this warranty.

There are no express warranties except as described above.

THE COMPANY SHALL NOT BE LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL IMPLIED WARRANTIES, IF ANY, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

No other warranty, written or verbal, is authorized by the Company. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please write to Cooper Lighting, 1121 Highway 74 South, Peachtree City, GA 30269. Enclose product model number and problems you are experiencing, along with your address and telephone number. You will then be contacted with a solution, or a Return Goods Authorization number and full instructions for returning the product. All returned products must be accompanied by a Return Goods Authorization Number issued by the Company and must be returned freight prepaid. **Any product received without a Return Goods Authorization Number from the Company will be refused.**

Cooper Lighting is not responsible for merchandise damaged in transit. Repaired or replaced products shall be subject to the terms of this warranty and are inspected when packed. Evident or concealed damage that is made in transit should be reported at once to the carrier making the delivery and a claim filed with them.

**COOPER** Lighting



Customer First Center • 1121 Highway 74 South, Peachtree City, GA 30269 USA  
www.cooperlighting.com

© 2003 Cooper Lighting

Reproductions of this document without prior written approval of Cooper Lighting are strictly prohibited.