

Note: Attached is documentation for both the SIS3800 and SIS3801. It is the same unit which can be operated in two different modes

SIS3800 VME Scaler/Counter

User Manual

SIS GmbH
Moorhof 2d
22399 Hamburg
Germany

Phone: ++49 (0) 40 60 87 305 0
Fax: ++49 (0) 40 60 87 305 20

email: info@struck.de
<http://www.struck.de>

Version: 1.1 as of 29.1.99

Revision Table:

Revision	Date	Modification
1.1	18.09.98	Generation
1.2	29.01.99	introduction of revision table LEMO control/flat cable counter front panel included

1 Table of contents

1	Table of contents.....	3
2	Introduction.....	5
3	Technical Properties/Features.....	6
3.1	Board Layout.....	6
3.2	Counter Design and Modus Operandi.....	7
3.3	Count Enable Logic.....	8
3.4	Clear Logic.....	8
4	Getting Started.....	9
4.1	Factory Default Settings.....	9
4.1.1	Addressing.....	9
4.1.2	System Reset Behaviour.....	9
5	Firmware Selection.....	9
5.1	Examples.....	10
6	Front Panel LEDs.....	11
7	VME addressing.....	12
7.1	Address Space.....	12
7.2	Base Address.....	12
7.2.1	VME.....	12
7.2.2	VIPA/VME64x.....	12
7.3	Address Map.....	13
8	Register Description.....	14
8.1	Status Register (0x0).....	14
8.2	Control Register (0x0).....	15
8.3	Module Identification and IRQ control register (0x4).....	16
8.4	Count disable register 0xC.....	17
8.5	Overflow registers 0x380, 0x3A0, 0x3C0, 0x3E0.....	17
8.6	Broadcast Addressing.....	17
9	VME Interrupts.....	19
10	Data Format.....	20
10.1	D16.....	20
10.2	D32.....	20
11	Readout Schemes.....	20
11.1	Read Shadow Register.....	20
11.2	Read and Clear all Counters.....	20
11.3	Read Counter.....	20
12	Input Configuration.....	21
12.1	ECL.....	21
12.2	NIM.....	22
12.3	TTL.....	23
12.3.1	TTL/LEMO.....	23
12.3.2	TTL/Flat Cable.....	23
13	Connector Specification.....	23
14	Control Input Modes.....	24
14.1	Version 1.....	24
14.2	Version 2.....	24
15	Signal Specification.....	25
15.1	Control Signals.....	25
15.2	Inputs.....	25
16	Operating Conditions.....	25
16.1	Power Consumption/Voltage requirement.....	25
16.2	Cooling.....	25
16.3	Insertion/Removal.....	25
17	Test.....	26
17.1	LED (selftest).....	26
17.2	Internal pulser tests.....	26
17.2.1	Single Pulse.....	26

17.2.2	25 MHz Pulser	26
17.3	Reference pulser channel 1	26
17.4	Signal-Input Priority	26
18	Software Support	27
18.1	Contents of the included Floppy	27
19	Appendix.....	28
19.1	Address Modifier Overview.....	28
19.2	Front Panel Layout.....	29
19.3	Flat cable Input/Output Pin Assignments	30
19.3.1	ECL.....	30
19.3.2	TTL	31
19.4	List of Jumpers.....	32
19.5	Jumper and rotary switch locations.....	32
19.5.1	Addressing mode and base address selection.....	32
19.5.2	J500 (Bootfile Selection) and J520 (SYSRESET Behaviour).....	33
19.6	Board Layout	34
19.7	FLASHROM Versions	35
19.8	Row d and z Pin Assignments.....	36
19.9	Geographical Address Pin Assignments	37
19.10	Additional Information on VME.....	37
20	Index	38

2 Introduction

The SIS3800 is one of the classic VME counter/scaler implementations on the base of the SIS360x/38xx printed circuit board. The unit has 32 counter channels and a maximum counting frequency of 200 MHz (ECL and NIM) 100 MHz (TTL) respective. As all boards of the family it is of single slot double Eurocard form factor and available with flat cable connectors for ECL and TTL levels and LEMO connectors for NIM and TTL levels.

The SIS360x/38xx card is a flexible concept to implement a variety of latch and counter firmware designs. The flexibility is based on two to six Xilinx FPGAs in conjunction with a FLASHROM from which the firmware files are loaded into the FPGAs. Depending on the stuffing options of the printed circuit board, the user has the possibility to cover several purposes with the same card, hence the manual is a combination of firmware and hardware description.

All cards of the family are equipped with the 5 row VME64x VME connectors, a side cover and EMC front panel, as well as the VIPA LED set. For users with VME64xP subracks VIPA extractor handles can be installed. The base board is prepared for VIPA style addressing, the current first version of the SIS3800 firmware does not feature VIPA modes yet however.

As we are aware, that no manual is perfect, we appreciate your feedback and will try to incorporate proposed changes and corrections as quickly as possible. The most recent version of this manual can be obtained by email from info@struck.de, the revision dates are online under <http://www.struck.de/manuals.htm>. A list of available firmware designs can be retrieved from <http://www.struck.de/sis3638firm.htm>

3 Technical Properties/Features


The SIS3800 is rather a firmware design in combination with given board stuffing options, than a name for the board (this is the reason, why the modules are named SIS360x/38xx on the front panel and the distinction of the units is made by the module identifier register). The firmware makes use of part of the possibilities of the SIS360x/38xx PCB, if the SIS3800 or other firmware designs of the family come close to what you need, but something is missing, a custom firmware design may be an option to consider.

Find below a list of key features of the SIS3800.

- 32 channels
- 200 MHz counting rate (ECL and NIM), 100 MHz for TTL
- 32-bit channel depth
- NIM/TTL/ECL versions
- flat cable (TTL/ECL) and LEMO (TTL/NIM) versions
- Shadow register
- Read on the fly
- A16/A24/A32 D16/D32/BLT32 (CBLT32 prepared)
- Base address settable via 5 rotary switches (A32-A12) and one jumper (A11)
- VME interrupt capability
- VIPA geographical addressing prepared
- VIPA LED set
- Reference Pulser Capability
- Up to eight firmware files
- single supply (+5 V)

3.1 Board Layout


Xilinx FPGAs are the working horses of the SIS360x/38xx board series. The counter (prescaler, latch, ...) logic is implemented in one to four chips, each chip handles eight front end channels. The VME interface and the input and output control logic reside in two Xilinx chips also. The actual firmware is loaded into the FPGAs upon power up from a FLASHROM under jumper control. The user can select among up to eight different boot files by the means of a 3-bit jumper array. The counter and control inputs can be factory configured for ECL, NIM and TTL levels, on the control outputs the same levels are the available as options. The standard SIS3800 version 1 design has no outputs implemented. The front panel is available as flat cable (ECL and TTL) or LEMO (NIM and TTL) version. The board layout is illustrated with the block diagram below:

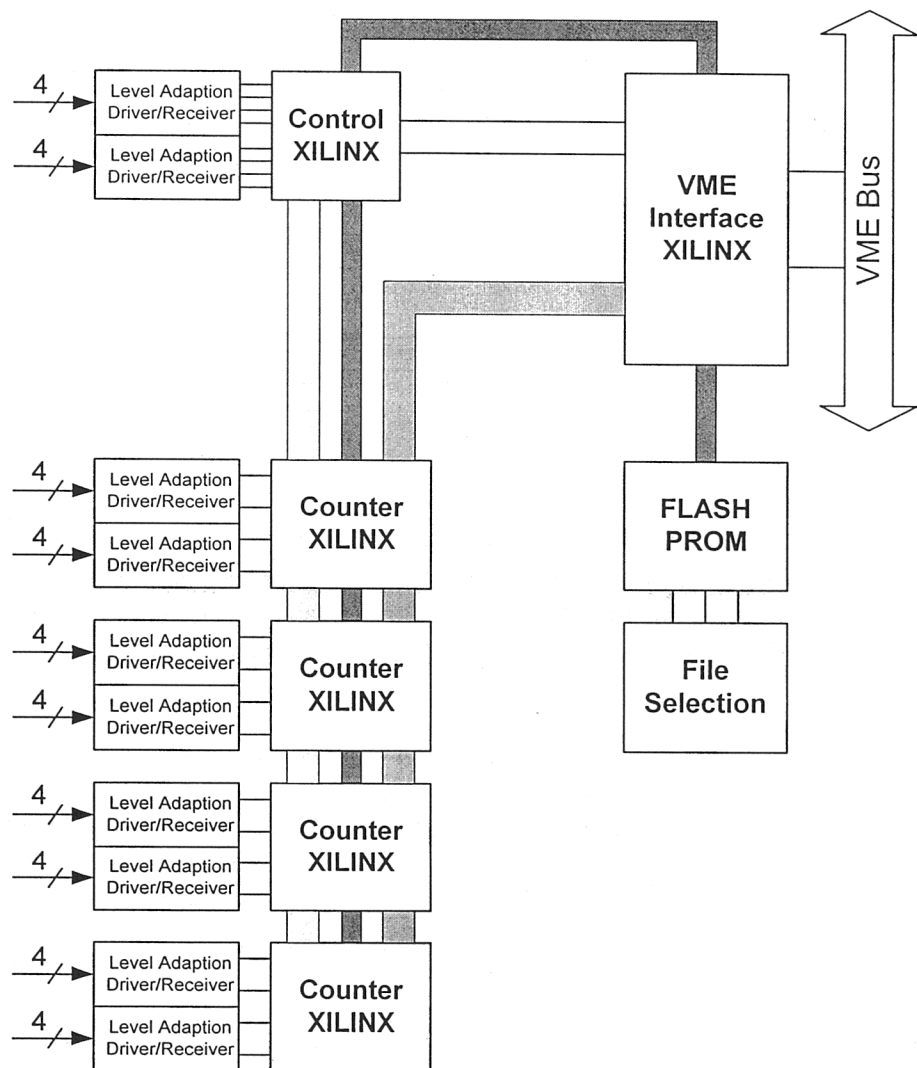

SIS3800 Block Diagram


3.2 Counter Design and Modus Operandi

The counters are implemented in XILINX FPGAs. One of the counter FPGAs holds 8 32-bit deep counter channels. The actual scaler contents are passed to the VME bus via a shadow register. The scaler data have to be copied into the shadow register before readout via a software command or a front panel hardware pulse. This can take place in parallel to the acquisition of counts, what is called read on the fly. On a read on the fly the status of the lowest 6 bits may be not accurate, i.e. the counter readout value is accurate modulo 64. (read on the fly readout accuracy down to one count can be achieved with the SIS3801 multiscaler). No pulses are missed during a read on the fly, i.e. the frontend continues counting. A diagram of the setup is shown in the figure below. The different readout schemes are addressed in the key register section.

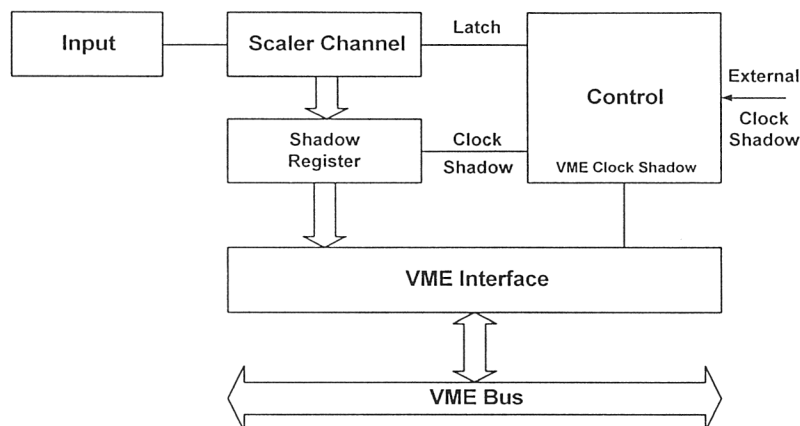


3.3 Count Enable Logic

A channel acquires input or test counts, if the selective count enable and the global count enable conditions are true. Via the test enable toggle bits in the control register the input of the counter is switched to test pulses or front panel signals.

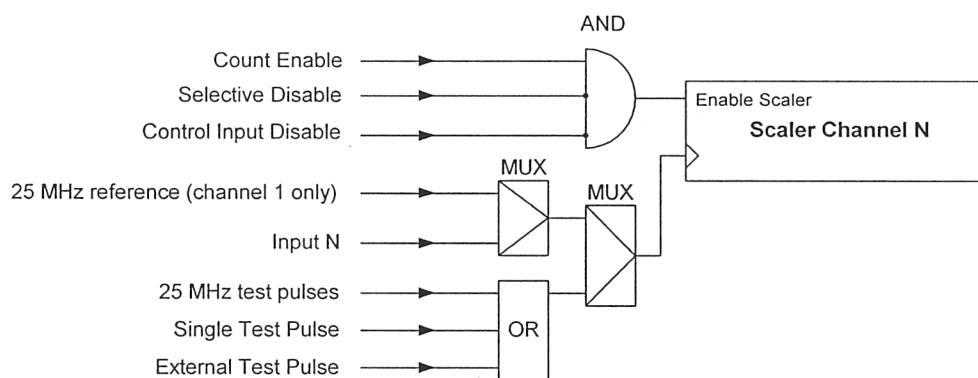

3.4 Clear Logic

The contents of the counters can be cleared via VME access or a front panel pulse. The four possible clear sources are ored as shown in the diagram below.

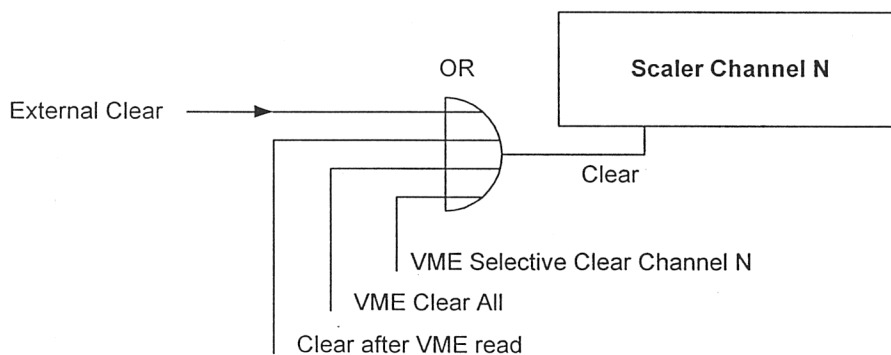

4 Getting Started

The minimum setup to operate the SIS3800 requires the following steps:

- Check the proper firmware design is selected (should be design zero, i.e. all jumpers of jumper array J500 set).
- Select the VME base address for the desired addressing mode
- Select the VME SYSRESET behaviour via J520
- turn the VME crate power off
- install the scaler in the VME crate
- connect your signals to the counter
- turn crate power back on
- set global count enable via key address 0x28
- read all counters with clock shadow register via block transfer from start address 0x280 (read) or 0x300 (read and clear) or subsequent single word reads.

A good way of checking first time communication with the SIS3800 consists of switching on the user LED by a write to the control register at offset address 0x0 with data word 0x1 (the LED can be switched back off by writing 0x1000 to the control register)..

4.1 Factory Default Settings

4.1.1 Addressing

SIS3800 boards are shipped with the En_A32, the En_A24 and the En_A16 jumpers installed and the rotary switches set to:

Switch	SW A32U	SW A32L	SW A24U	SW A24L	SW A16	J A 11	Bits 7-4	Bits 3-0
Setting	3	8	3	8	3	8	0	0

Jumper A_11 is open (bit 11 set).

Hence the unit will respond to the following base addresses:

Mode	Base address
A32	0x38383800
A24	0x383800
A16	0x3800

Firmware Design

Design 1 of the FLASHPROM is selected (lowest jumper of jumper array J500 open, the others set).

4.1.2 System Reset Behaviour

J520 is set, i.e. the SIS3800 is reset upon VME reset.

5 Firmware Selection

 
The FLASH PROM of a SIS360x/38xx board can contain several boot files. A list of available FLASHPROM versions can be found on our web site <http://www.struck.de> in the manuals page. If your FLASHPROM has more than one firmware design, you can select the

desired firmware via the firmware selection jumper array J500 . You have to make sure, that the input/output configuration and FIFO configuration of your board are in compliance with the requirements of the selected firmware design (a base board without FIFO can not be operated as multi channel scaler e.g.). A total of 8 boot files from the FLASHROM can be selected via the three bits of the jumper array. The array is located towards the rear of the card between the VME P1 and P2 connectors. The lowest bit sits towards the bottom of the card, a closed jumper represents a zero, an open jumper a one.

5.1 Examples


The figures below show jumper array 500 with the soldering side of the board facing the user and the VME connectors pointing to the right hand side.

Bootfile 0 selected



With all jumpers closed boot file 0 is selected

 Bootfile 3 selected




With the lowest two jumpers open bit 0 and bit 1 are set to 1 and hence boot file 3 is selected

6 Front Panel LEDs

The SIS3800 has 8 front panel LEDs to visualise part of the units status. Three LEDs according to the VME64xP standard (Power, Access and Ready) plus 5 additional LEDs (VME user LED, Clear, Overflow, Scaler enable and VIPA user LED).

Designation	LED	Color	Function
A	Access	yellow	Signals VME access to the unit
P	Power	red	Flags presence of VME power
R	Ready	green	Signals configured logic
U	VME user LED	green	To be switched on/off under user program control
CLR	Clear	yellow	Signals soft or hardware clear
OVL	Overflow	red	Signals Overflow in one or more channels
S	Scaler Enable	green	Signals one or more enabled channels
VU	VIPA user LED	green	for future use

The LED locations are shown in the portion of the front panel drawing below.

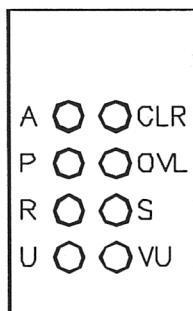

The VME Access, the Clear and the Scaler enable LED are monostable (i.e. the duration of the on phase is stretched for better visibility), the other LEDs reflect the current status. An LED test cycle is performed upon power up (refer to the chapter 17.1).

7 VME addressing

7.1 Address Space

As bit 11 is the lowest settable bit on the 360x/38xx board, an address space of 2 Kbytes (Offset plus 0x000 to 0x7ff) is occupied by the module.

7.2 Base Address

7.2.1 VME

The VME addressing mode (A16/A24/A32) is selected via the jumpers EN_A16, EN_A24 and EN_A32. The mode is selected by closing the corresponding jumper, it is possible to enable two or all three addressing modes simultaneously.

The base address is set via the five rotary switches SW_A32U, SW_A32L, SW_A24U, SW_A24L and SW_A16 and the jumper J_A11. The table below lists the switches and jumpers and their corresponding address bits.

Switch/Jumper	Affected Bits
SW_A32U	31-28
SW_A32L	27-24
SW_A24U	23-20
SW_A24L	19-16
SW_A16	15-12
J_A11	11

In the table below you can see, which jumpers and switches are used for address decoding in the three different addressing modes (fields marked with an x are used).

	SW_A32U	SW_A32L	SW_A24U	SW_A24L	SW_A16	J_A11
A32	x	x	x	x	x	x
A24			x	x	x	x
A16					x	x

Note: J_A11 closed represents a 0, J_A11 open a one

7.2.2 VIPA/VME64x

As the VME64x and the VME64xP (VIPA) standard are not yet standards to refer to and to declare conformity with, addressing modes (like geographical addressing e.g.) according to these standards are prepared but not yet implemented in the current firmware revisions.

7.3 Address Map

The SIS360x/38xx boards are operated via VME registers, VME key addresses and the FIFO (where installed). The following table gives an overview on all SIS3800 addresses and their offset from the base address, a closer description of the registers and their function is given in the following subsections.

Offset	Key	Access	Type	Function
0x000		R/W	D16/D32	Control and Status register
0x004		R/W	D16/D32	Module Identification and IRQ control register
0x00C		W	D16/D32	Selective count disable register
0x020	KA	W	D16/D32	clear all counters and overflow bits
0x024	KA	W	D16/D32	clock shadow register
0x028	KA	W	D16/D32	global count enable
0x02C	KA	W	D16/D32	global count disable
0x030	KA	W	D16/D32	Broadcast; clear all counters and overflow bits
0x034	KA	W	D16/D32	Broadcast; clock shadow register
0x038	KA	W	D16/D32	Broadcast; global count enable
0x03C	KA	W	D16/D32	Broadcast; global count disable
0x040	KA	W	D16/D32	clear counter group and overflow channel 1-8
0x044	KA	W	D16/D32	clear counter group and overflow channel 9-16
0x048	KA	W	D16/D32	clear counter group and overflow channel 17-24
0x04C	KA	W	D16/D32	clear counter group and overflow channel 25-32
0x050	KA	W	D16/D32	enable reference pulser channel 1
0x054	KA	W	D16/D32	disable reference pulser channel 1
0x060	KA	W	D16/D32	reset register (global reset)
0x068	KA	W	D16/D32	Test pulse (generate a single pulse)
0x100-0x17C	KA	W	D16/D32	clear counter N and its overflow bit
0x180-0x1FC	KA	W	D16/D32	clear overflow bit of counter N
0x200-0x27C		R	D16/D32/ BLT32	read shadow register (does not initiate clock shadow)
0x280-0x2FC		R	D16/D32/ BLT32	read counter (initiates clock shadow also)
0x300-0x37C		R	D16/D32/ BLT32	read and clear all counters
0x380		R	D16/D32	Overflow register channel 1-8
0x3A0		R	D16/D32	Overflow register channel 9-16
0x3C0		R	D16/D32	Overflow register channel 17-24
0x3E0		R	D16/D32	Overflow register channel 25-32

Note: D08 is not supported by the SIS38xx boards

8 Register Description

8.1 Status Register (0x0)

The status register reflects the current settings of most of the SIS3800 parameters in read access, in write access it functions as the control register.

Bit	Function
31	0
30	Status VME IRQ source 2 (test IRQ)
29	Status VME IRQ source 1 (ext. clock shadow)
28	Status VME IRQ source 0 (Overflow)
27	VME IRQ
26	internal VME IRQ
25	0
24	0
23	0
22	Status VME IRQ Enable Bit Source 2
21	Status VME IRQ Enable Bit Source 1
20	Status VME IRQ Enable Bit Source 0
19	0
18	0
17	0
16	reserved (read back as 0 at power up)
15	Global Count Enable
14	General Overflow Bit
13	Status enable reference pulser channel 1
12	0
11	0
10	0
9	0
8	0
7	Status broadcast mode handshake controller
6	Status broadcast mode
5	Status input test mode
4	Status 25 MHz test pulses
3	Status input mode bit 1
2	Status input mode bit 0
1	Status IRQ source 2 for software IRQ testing
0	Status user LED

The reading of the status register after power up or key reset is 0x0 (see default settings of control register).

8.2 Control Register (0x0)

The control register is in charge of the control of most of the basic properties of the SIS3800 board in write access. It is implemented via a selective J/K register, a specific function is enabled by writing a 1 into the set/enable bit, the function is disabled by writing a 1 into the clear/disable bit (which has a different location within the register). An undefined toggle status will result from setting both the enable and disable bits for a specific function at the same time.

On read access the same register represents the status register.

Bit	Function
31	reserved
30	disable IRQ source 2 (*)
29	disable IRQ source 1 (*)
28	disable IRQ source 0 (*)
27	reserved
26	reserved
25	reserved
24	clear reserved bit
23	reserved
22	enable IRQ source 2
21	enable IRQ source 1
20	enable IRQ source 0
19	reserved
18	reserved
17	reserved
16	set reserved bit
15	disable broadcast mode handshale controller (*)
14	disable broadcast mode (*)
13	disable input test mode (*)
12	disable 25 MHz test pulses (*)
11	clear input mode bit 1 (*)
10	clear input mode bit 0 (*)
9	clear IRQ test source 2
8	switch off user LED (*)
7	enable handshake controller for broadcast mode
6	enable broadcast mode
5	enable input test mode
4	enable 25 MHz test pulses
3	set input mode bit 1
2	set input mode bit 0
1	set IRQ test (source 2)
0	switch on user LED

(*) denotes the default power up or key reset state

8.3 Module Identification and IRQ control register (0x4)

This register has two basic functions. The first is to give information on the active firmware design. This function is implemented via the read only upper 20 bits of the register. Bits 16-31 hold the four digits of the SIS module number (like 3800 or 3600 e.g.), bits 12-15 hold the version number. The version number allows a distinction between different implementations of the same module number, the SIS3801 for example has the 24-bit mode with user bits and the straight 32-bit mode as versions.

Bit	Read/Write access	Function	
31	read only	Module Identification Bit 15	Module Id Digit 3
30	read only	Module Identification Bit 14	
29	read only	Module Identification Bit 13	
28	read only	Module Identification Bit 12	
27	Read only	Module Identification Bit 11	Module Id Digit 2
26	read only	Module Identification Bit 10	
25	read only	Module Identification Bit 9	
24	read only	Module Identification Bit 8	
23	read only	Module Identification Bit 7	Module Id Digit 1
22	read only	Module Identification Bit 6	
21	read only	Module Identification Bit 5	
20	read only	Module Identification Bit 4	
19	read only	Module Identification Bit 3	Module Id Digit 0
18	read only	Module Identification Bit 2	
17	read only	Module Identification Bit 1	
16	read only	Module Identification Bit 0	
15	read only	Version Bit 3	
14	read only	Version Bit 2	
13	read only	Version Bit 1	
12	read only	Version Bit 0	
11	read/write	VME IRQ Enable (0=IRQ disabled, 1=IRQ enabled)	
10	read/write	VME IRQ Level Bit 2	
9	read/write	VME IRQ Level Bit 1	
8	read/write	VME IRQ Level Bit 0	
7	read/write	IRQ Vector Bit 7; placed on D7 during VME IRQ ACK cycle	
6	read/write	IRQ Vector Bit 6; placed on D6 during VME IRQ ACK cycle	
5	read/write	IRQ Vector Bit 5; placed on D5 during VME IRQ ACK cycle	
4	read/write	IRQ Vector Bit 4; placed on D4 during VME IRQ ACK cycle	
3	read/write	IRQ Vector Bit 3; placed on D3 during VME IRQ ACK cycle	
2	read/write	IRQ Vector Bit 2; placed on D2 during VME IRQ ACK cycle	
1	read/write	IRQ Vector Bit 1; placed on D1 during VME IRQ ACK cycle	
0	read/write	IRQ Vector Bit 0; placed on D0 during VME IRQ ACK cycle	

The second function of the register is interrupt control. The interrupter type of the SIS3800 is D08(O). Via bits 0-7 of the module identifier and interrupt control register you can define the interrupt vector, which is placed on the VME bus during the interrupt acknowledge cycle. Bits 8 through 10 define the VME interrupt level, bit 11 is used to enable (bit set to 1) or disable (bit set to 0) interrupting.

Module identification and version example:

The register for a SIS3801 in straight 32-bit mode (version 1) reads 0x38011nnn, for a SIS3801 in 24-bit mode (version 2) it reads 0x38012nnn. (the status of the lower 3 nibbles is denoted with n in the example).

8.4 Count disable register 0xC

The count disable register can be used to disable single channels or arbitrary groups of channels. Note, that both the external (if used) and the internal conditions have to be in status enable for the given channel.

The register is write only.

If bit N of the register is set, channel N+1 is disabled.

Example: If 0x5 is written to the count disable register, counting of channel 1 and 3 is disabled.

8.5 Overflow registers 0x380, 0x3A0, 0x3C0, 0x3E0

Each overflow register holds the overflow bit of eight counter channels (i.e. of one counter XILINX) in its lowest eight bits.

Example: register 0x380 holds the overflow bits of channels 1-8 as shown in the table below.

Bit	31	30	29	28	27	26	25	24	Bits 23-1
	Ch 8	Ch 7	Ch 6	Ch 5	Ch 4	Ch 3	Ch 2	Ch 1	undefined

8.6 Broadcast Addressing

Broadcast addressing is an efficient way to issue the same command to a number of modules. It can be used in A24 and A32 mode on SIS360x/38xx boards. The higher address bits are used to define the broadcast class, the distinction of the modules is done via the A16 rotary switch and the A_11 jumper. If broadcast addressing is used, the A32_U, the A_32_L, the A24_U and the A24_L rotary switches must have the same setting in A32 mode, in A24 mode the A24_U and A24_L setting must be the same on all participating units. One of the participating units must be configured as broadcast handshake controller by setting bit 7 in the units control register. All of the participating units must have set bit 6 (enable broadcast) in the control register. The broadcast time jitter was measured to be less than 40 ns within a VME crate, i.e. you have the possibility issue commands under software control with a maximum uncertainty of 40 ns (like clear all counters), what sure is worse, than a hard wired front panel clear, but is much better than a VME single cycle loop over a number of units. The four broadcast commands are executed via the VME key addresses at offset 0x030 through 0x3C.

A32 Broadcast Example:

Let four SIS3800 participate by setting the A_32 jumper and setting the base address of the units to:

Unit 1: 0x32001000

Unit 2: 0x32001800

Unit 3: 0x32002000

Unit 4: 0x32002800

Switch on enable broadcast by setting bit 6 in the control register of the four units.

Enable broadcast handshake controller on unit 4 by setting bit 7 of its control register.

An A232 write to address 0x32000034 will clock the shadow register on units 1 through 4.

A24 Broadcast Example:

Let three SIS3800 participate by setting the A_24 jumper and setting the base address of the units to:

Unit 1: 0x541000

Unit 2: 0x542000

Unit 3: 0x543000

Switch on enable broadcast by setting bit 6 in the control register of the three units.

Enable broadcast handshake controller on unit 1 by setting bit 7 of its control register.

An A24 write to address 0x540030 will clear the counters on units 1 through 3.

9 VME Interrupts

Three VME interrupt sources are implemented in the SIS3800 firmware design:

- Overflow
- External Latch Shadow Input
- Test Interrupt


The interrupter is of type D8(O).

The interrupt logic is shown below. For VME interrupt generation the corresponding interrupt source has to be enabled by setting the respective bit in the VME control register (disabling is done with the sources J/K bit). Interrupt generation has to be enabled by setting bit 11 in the IRQ and version register. The internal VME interrupt flag can be used to check on an IRQ condition without actually making use of interrupts on the bus.

The VME interrupt level (1-7) are defined by bits 8 through 10 and the VME interrupt vector (0-255) by bits 0 through 7 of the VME IRQ and version register.

In general an interrupt condition is cleared by disabling the corresponding interrupt, clearing the interrupt condition (i.e. clear overflow) and enabling the IRQ again.

Note: In most cases your experiment may not require interrupt driven scaler readout, but the interrupt capability of the SIS3800 provides a way to overcome the problem of missing front panel inputs on most commercial VME CPUs.

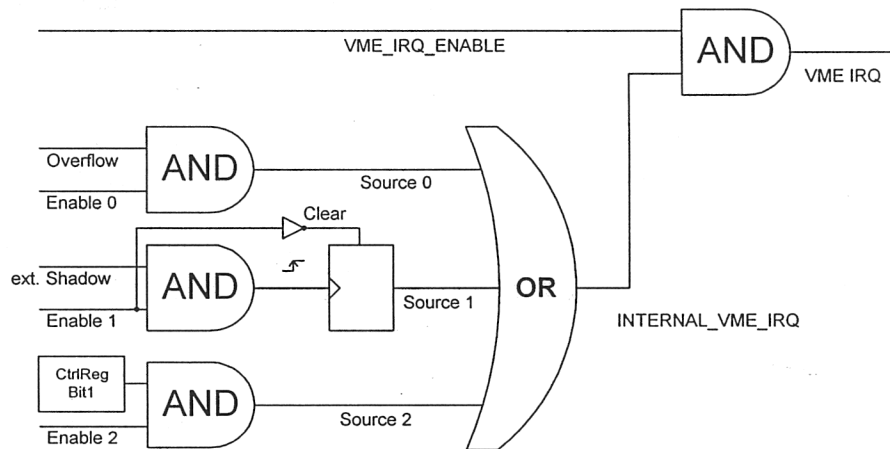

10 Data Format

The data format of the actual counter values (read via the shadow register) for D16 and D32 reads is shown in the two tables below.

10.1 D16

	high Byte	low Byte
first read	Data Bits 31-24	Data Bits 23-16
second read	Data Bits 15-8	Data Bits 7-0

10.2 D32

Data Bits 31-24	Data Bits 23-16	Data Bits 15-8	Data Bits 7-0
-----------------	-----------------	----------------	---------------

11 Readout Schemes

Scaler data can be read from different locations. The read location has an impact on the counter behaviour.

11.1 Read Shadow Register

In a single cycle or block transfer read from the shadow register (0x200-0x27C) the data from the last transfer to the shadow register are obtained. No automatic clock shadow is initiated, i.e. if the user wants to read the actual scaler values he has to ensure a soft- or hardware clock shadow before the read.

11.2 Read and Clear all Counters

In a single cycle or block read from the read and clear all counter registers (0x300-0x37C) the data are transferred into the shadow register, all counters are cleared after the transfer and the shadow data are read.

Note: If your CPU does not support block transfer you can ensure synchronicity to 5 ns by reading the first scaler value from 0x300 and the rest from the shadow registers 0x204-0x27C.

11.3 Read Counter

The read counter behaves like the read and clear all counters except that the counter values are not cleared after the copy to the shadow register.

12 Input Configuration


SIS36/38xx boards are available for NIM, TTL and ECL input levels and in LEMO and flat cable versions. The boards are factory configured for the specified input level and connector type, input termination is installed.

12.1 ECL

The 100 Ω input termination can be removed in groups of four channels by removing the corresponding resistor networks. The termination of single control inputs can be disabled with jumpers J101 through J108, an open jumper disables the termination of the corresponding channel.

Network	Channels	1 K Networks
RN10	1-4	RN11/12
RN20	5-8	RN21/22
RN30	9-12	RN31/32
RN40	13-16	RN41/41
RN50	17-20	RN51/52
RN60	21-24	RN61/62
RN70	25-28	RN71/72
RN80	29-32	RN81/82
RN110	Control 1-4	RN111/RN112
RN120	Control 5-8	RN121/RN122

The schematics of the ECL input circuitry is shown below.

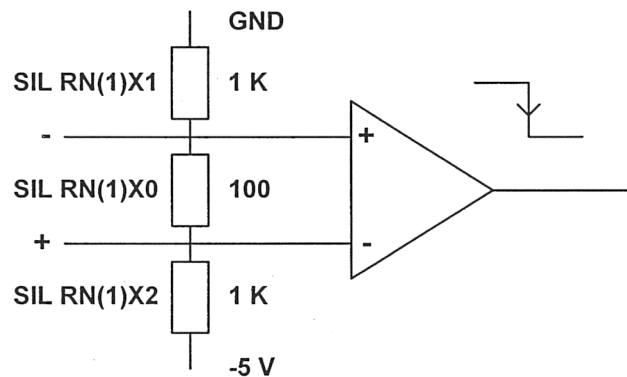


12.2 NIM

The 50 Ω input termination can be removed in groups of four channels by removing the corresponding resistor networks. The termination of single control inputs can be disabled with jumpers J101 through J108, an open jumper disables the termination of the corresponding channel.

Network	Channels
U15 (Pins <u>10</u> to 6)	1-4
U15 (Pins <u>1</u> to 5)	5-8
U35 (Pins <u>10</u> to 6)	9-12
U35 (Pins <u>1</u> to 5)	13-16
U55 (Pins <u>10</u> to 6)	17-20
U55 (Pins <u>1</u> to 5)	21-24
U75 (Pins <u>10</u> to 6)	25-28
U75 (Pins <u>1</u> to 5)	29-32
U115 (Pins <u>10</u> to 6)	Control 1-4
U115 (Pins <u>1</u> to 5)	Control 5-8

The schematics of the NIM input circuitry is shown below.

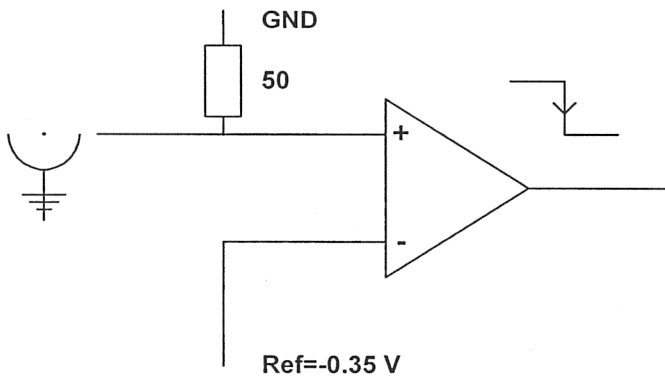


12.3 TTL

The TTL input level option is possible with LEMO and flat cable connectors.


12.3.1 TTL/LEMO

The (low active) TTL/LEMO input circuitry is sketched below. A high active version can be implemented by replacing the 74F245 with a 74F640

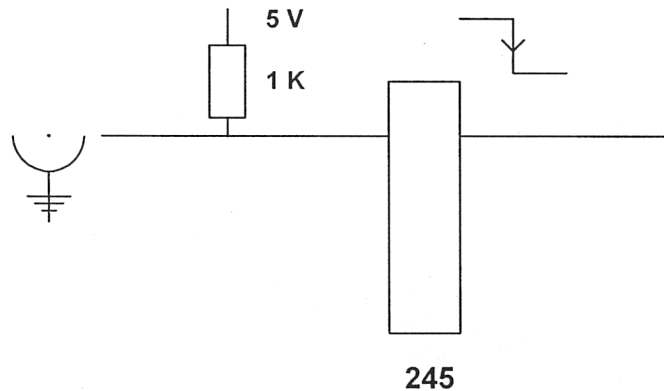

12.3.2 TTL/Flat Cable

In the flat cable TTL version the positive (right hand side) of the connector is tied to ground.

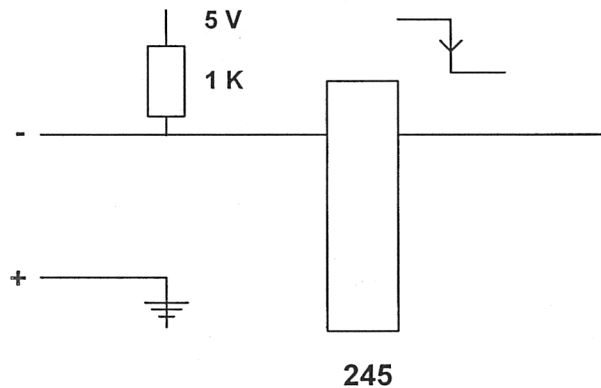

13 Connector Specification

The four different types of front panel and VME connectors used on the SIS360x and SIS38xx boards are:

Connector	Purpose	Part Number
160 pin zabcd	VME P1/P2	Harting 02 01 160 2101
20 pin header	Control (flat cable versions)	DIN41651 20 Pin (AMP e.g.)
34 pin header	Inputs (flat cable versions)	DIN41651 34 Pin (AMP e.g.)
LEMO	Control and Input (LEMO versions)	LEMO ERN.00.250.CTL

14 Control Input Modes

The assignment of the control inputs can be controlled via the input mode bits in the control register. While the standard SIS3800 firmware design (design 3800 version 1) has inputs only, design 3800 version 2 is compatible with board, where control lines 5 to 8 are configured as outputs (what is the case for SIS3801 multiscaler boards).

14.1 Version 1

Control Input Modes

Mode 0 (bit1=0, bit0=0):	all control inputs are disabled
Mode 1 (bit1=0, bit0=1):	input 1 -> disable count all channels input 2 -> clear all channels input 5 -> external clock shadow register input 7 -> external test pulse (max 50 MHz)
Mode 2 (bit1=1, bit0=0):	input 1 -> disable count channels 1-16 input 3 -> disable count channels 17-32 input 2 -> clear channel 1-16 input 4 -> clear channel 17-32 input 5 -> external clock shadow register input 7 -> external test pulse (max. 50 MHz)
Mode 3 (bit1=1, bit0=1):	input 1 -> disable count channels 1-8 input 3 -> disable count channels 9-16 input 5 -> disable count channels 17-24 input 7 -> disable count channels 25-32 input 2 -> clear channels 1-8 input 4 -> clear channels 9-16 input 6 -> clear channels 17-24 input 8 -> clear channels 25-32

14.2 Version 2

Control Input Modes

Mode 0 (bit1=0, bit0=0):	all control inputs are disabled
Mode 1 (bit1=0, bit0=1):	input 1 -> disable count all channels input 2 -> clear all channels input 3 -> external clock shadow register input 4 -> external test pulse (max 50 MHz)
Mode 2 (bit1=1, bit0=0):	all control inputs are disabled
Mode 3 (bit1=1, bit0=1):	all control inputs are disabled

15 Signal Specification

15.1 Control Signals

The width of the clear and external latch shadow pulse has to be greater or equal 10 ns, an external inhibit has to be present for the period you desire to disable counting. An internal delay of some 15 ns has to be taken into account for all external signals.

15.2 Inputs

The SIS3800 is specified for counting rates of 200 MHz for ECL and NIM signals and 100 MHz for the TTL case. Thus the minimum high and low level duration is 2.5 ns (5 ns respective). Signal deterioration over long cables has to be taken into account.

16 Operating Conditions

16.1 Power Consumption/Voltage requirement

Although the SIS3800 is prepared for a number of VIPA features, it was decided to use an on board DC/DC converter to generate the -5 V, which are needed for driver and receiver chips, to allow for the use of the module in all 6U VME environments. The power consumption is counting rate dependent, it varies from the idle value of +5 V 3,3 A to +5 V 4,5 A with all channels counting at 200 MHz(i.e. the power consumption is < 23 W).

16.2 Cooling

Forced air flow is required for the operation of the SIS3800 board.

16.3 Insertion/Removal

Please note, that the VME standard does not support live insertion (hot swap). Hence crate power has to be turned off for installation and removal of SIS3800 scalers.

The leading pins on the SIS3800 VME64x VME connectors and connected on board circuitry are designed for hot swap in conjunction with a VME64x backplane (a VME64x backplane can be recognised by the 5 row VME connectors, while the standard VME backplane has three row connectors only).

17 Test

The SIS380x scaler series provides the user with a number of test features, which allow for debugging of the unit as well as for overall system setups.

17.1 LED (selftest)

During power up self test and LCA configuration all LEDs except the Ready (R) LED are on. After the initialisation phase is completed, all LEDs except the Ready (R) LED and the Power (P) have to go off. Differing behaviour indicates either a problem with the download of the firmware boot file or one or more LCA and/or the download logic.

17.2 Internal pulser tests

17.2.1 Single Pulse

A single pulse into all channels can be generated with a write to the key address 0x68 if test mode is enabled via the control register. In conjunction with the count enable register more complex count patterns, like increment patterns e.g., can be generated before readout.

17.2.2 25 MHz Pulser

Simultaneous pulsing at 25 MHz into all channels can be used to test the complete readout chain and internal counter logic of the SIS3800. The feature is activated by enabling input test mode and 25 MHz test pulses via the corresponding bits in the control register.

The 25 MHz test pulser gives easy access to your VME CPUs readout timing. By making subsequent reads to the same counter and multiplying the difference in counts with 40 ns you can measure the single word access time.

17.3 Reference pulser channel 1

The reference pulser for channel 1 can be seen rather as a monitoring feature than a test feature. It sets the counting rate of channel 1 to 25 MHz (note, that a simultaneous front panel signal on channel 1 is ignored).

17.4 Signal-Input Priority

If the user happens to enable more than one input option (enable test mode, enable reference pulser, scaler enable) at the same time, the priority is as show in the table below:

Priority	Feature
1	Test mode
2	Reference Pulser (channel 1 only)
3	Front Panel Inputs

Example: If test mode and reference pulser are enabled at the same time, channel one will count test pulses (i.e. will count synchronous with the test pulser).

18 Software Support

VME multiscaler boards are tested at SIS with an OR VP6 VME CPU (Pentium II based) under Windows 95 and a National Instruments CVI user interface. The actual VME C code makes use of the OR Windows 95 DLL, which has straightforward to read and understand routines like:

```
VMEA24StdWriteWord(a32address + KEY_RESET, 0x0);    /* Key Reset */  
rdata = VMEA24StdReadWord(a32address + STAT_REG);
```

In most cases the user setup will be using different hardware, a full fleshed real time operating system like VxWorks, and a different user interface. We still believe, that it is helpful to have a look at the code which is used to test the units and to take it as an example for the implementation of the actual scaler readout application. A floppy with our test software is enclosed with SIS3800 shipments.

Depending on the user feedback and co-operation we expect, that we will have drivers or at least example routines for the commonly used VME CPU operating systems at hand in the mid term.

18.1 Contents of the included Floppy

The Floppy contains a readme.txt file with the most up to date information, the CVI project file and all home made files from the project. The important part of the code for the implementation of your own program is sitting in the CVI call back routines.

19 Appendix

19.1 Address Modifier Overview

Find below the table of address modifiers, which can be used with the SIS360x/38xx (with the corresponding addressing mode enabled).


AM code	Mode
0x3F	A24 supervisory block transfer (BLT)
0x3D	A24 supervisory data access
0x3B	A24 non-privileged block transfer (BLT)
0x39	A24 non-privileged data access
0x2D	A16 supervisory access
0x29	A16 non-privileged access
0x0F	A32 supervisory block transfer (BLT)
0x0D	A32 supervisory data access
0x0B	A32 non-privileged block transfer (BLT)
0x09	A32 non privileged data access
	Future option: CBLT

19.2 Front Panel Layout

The front panel of the SIS3800 is equipped with 8 LEDs, 8 control in- and outputs and 32 counter inputs. On flat cable units (ECL and TTL) the control connector is a 20 pin header flat cable connector and the channel inputs are fed via two 34-pin headers. On LEMO (NIM and TTL) units the control in- and outputs are grouped to one 8 channel block and the counter inputs are grouped into 2 blocks of 16 channels. A mixed LEMO control/flat cable counter input version is available also. The units are 4 TE (one VME slot) wide, the front panel is of EMC shielding type. VIPA extractor handles are available on request or can be retrofitted by the user, if he wants to change to a VIPA crate at a later point in time.

In the drawing below you can find the flat cable (left hand side), the LEMO control/flat cable input (middle) and LEMO front panel layouts.

Note: Only the aluminium portion without the extractor handle mounting fixtures is shown

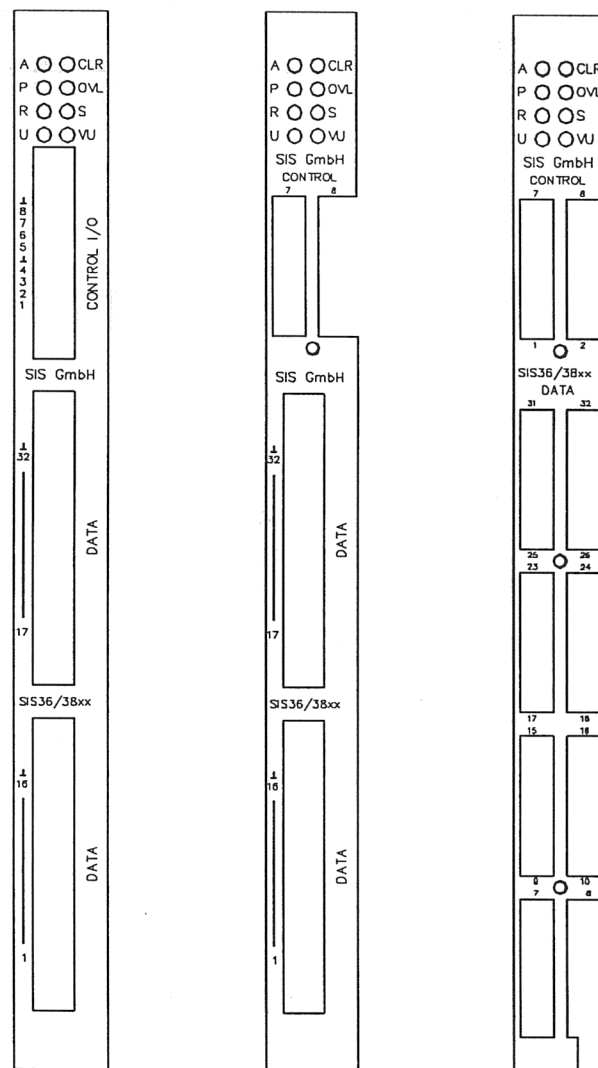

19.3 Flat cable Input/Output Pin Assignments**19.3.1 ECL**

Data-Connector Channel 1-16

PIN	SIGNAL	SIGNAL	PIN
32	IN16 -	IN16 +	31
30	IN15 -	IN15 +	29
28	IN14 -	IN14 +	27
26	IN13 -	IN13 +	25
24	IN12 -	IN12 +	23
22	IN11 -	IN11 +	21
20	IN10 -	IN10 +	19
18	IN9 -	IN9 +	17
16	IN8 -	IN8 +	15
14	IN7 -	IN7 +	13
12	IN6 -	IN6 +	11
10	IN5 -	IN5 +	9
8	IN4 -	IN4 +	7
6	IN3 -	IN3 +	5
4	IN2 -	IN2 +	3
2	IN1 -	IN1 +	1

Front view

INx + = ECL High active
INx - = ECL Low active

Data-Connector Channel 17-32

PIN	SIGNAL	SIGNAL	PIN
32	IN32 -	IN32 +	31
30	IN31 -	IN31 +	29
28	IN30 -	IN30 +	27
26	IN29 -	IN29 +	25
24	IN28 -	IN28 +	23
22	IN27 -	IN27 +	21
20	IN26 -	IN26 +	19
18	IN25 -	IN25 +	17
16	IN24 -	IN24 +	15
14	IN23 -	IN23 +	13
12	IN22 -	IN22 +	11
10	IN21 -	IN21 +	9
8	IN20 -	IN20 +	7
6	IN19 -	IN19 +	5
4	IN18 -	IN18 +	3
2	IN17 -	IN17 +	1

Front view

INx + = ECL High active
INx - = ECL Low active

Control-Connector Input 1-4 /Output 5-8

PIN	SIGNAL	SIGNAL	PIN
20	GND	GND	19
18	OUT8-	OUT8+	17
16	OUT7-	OUT7+	15
14	OUT6-	OUT6+	13
12	OUT5-	OUT5+	11
10	GND	GND	9
8	IN4 -	IN4 +	7
6	IN3 -	IN3 +	5
4	IN2 -	IN2 +	3
2	IN1 -	IN1 +	1

Front view

INx + = ECL High active
INx - = ECL Low active

OUTx + = ECL High active
OUTx - = ECL Low active

19.3.2 TTL

Data-Connector Channel 1-16

PIN	SIGNAL	SIGNAL	PIN
32	IN16 -	GND	31
30	IN15 -	GND	29
28	IN14 -	GND	27
26	IN13 -	GND	25
24	IN12 -	GND	23
22	IN11 -	GND	21
20	IN10 -	GND	19
18	IN9 -	GND	17
16	IN8 -	GND	15
14	IN7 -	GND	13
12	IN6 -	GND	11
10	IN5 -	GND	9
8	IN4 -	GND	7
6	IN3 -	GND	5
4	IN2 -	GND	3
2	IN1 -	GND	1

Front view

Data-Connector Channel 17-32

PIN	SIGNAL	SIGNAL	PIN
32	IN32 -	GND	31
30	IN31 -	GND	29
28	IN30 -	GND	27
26	IN29 -	GND	25
24	IN28 -	GND	23
22	IN27 -	GND	21
20	IN26 -	GND	19
18	IN25 -	GND	17
16	IN24 -	GND	15
14	IN23 -	GND	13
12	IN22 -	GND	11
10	IN21 -	GND	9
8	IN20 -	GND	7
6	IN19 -	GND	5
4	IN18 -	GND	3
2	IN17 -	GND	1

Front view

INx - = TTL Low active (74F245)

INx - = TTL Low active (74F245)

Control-Connector Input 1-4 /Output 5-8

PIN	SIGNAL	SIGNAL	PIN
20	GND	GND	19
18	OUT8-	GND	17
16	OUT7-	GND	15
14	OUT6-	GND	13
12	OUT5-	GND	11
10	GND	GND	9
8	IN4 -	GND	7
6	IN3 -	GND	5
4	IN2 -	GND	3
2	IN1 -	GND	1

Front view

INx - = TTL Low active (74F245)

OUTx - = TTL Low active (74F244)

19.4 List of Jumpers


Find below a list of the jumpers and jumper arrays.

Jumper Name	Array/Single	Function
J101	Single	Input Termination Control Input 1
J102	Single	Input Termination Control Input 2
J103	Single	Input Termination Control Input 3
J104	Single	Input Termination Control Input 4
J105	Single	Input Termination Control Input 5
J106	Single	Input Termination Control Input 6
J107	Single	Input Termination Control Input 7
J108	Single	Input Termination Control Input 8
J115	Single	Level Configuration (not for end user)
J500	Array	Boot File Selection
J520	Single	VME SYSRESET Behaviour
EN_A16	Single	Enable A16 addressing
EN_A24	Single	Enable A24 addressing
EN_A32	Single	Enable A32 addressing
J_A11	Single	Address Bit 11 Selection

19.5 Jumper and rotary switch locations


19.5.1 Addressing mode and base address selection

The EN_A32, EN_A24, EN_A16, A_11 and the 5 rotary switches are located in the middle of the upper section of the board close to the DC/DC converter, the corresponding section of the PCB is shown below.

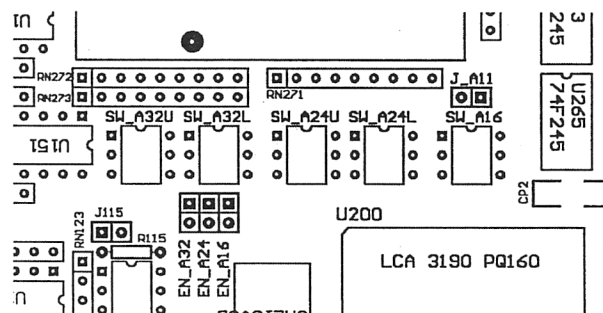


19.5.2 J500 (Bootfile Selection) and J520 (SYSRESET Behaviour)

The jumper array J500 is located between the P1 and the P2 connector. An open position in J500 defines a one (see also chapter 4), the lowest bit is next to the P2 connector.. J520 is located to the left of J500 and closer to the DC-DC converter. With jumper J520 closed the SIS3800 executes a key reset upon the VME SYSRESET signal. The section of the board with the jumper array and the SYSRESET jumper is shown below.

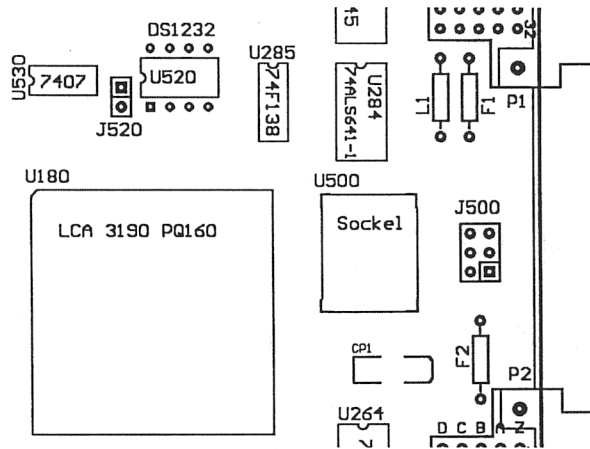

19.6 Board Layout

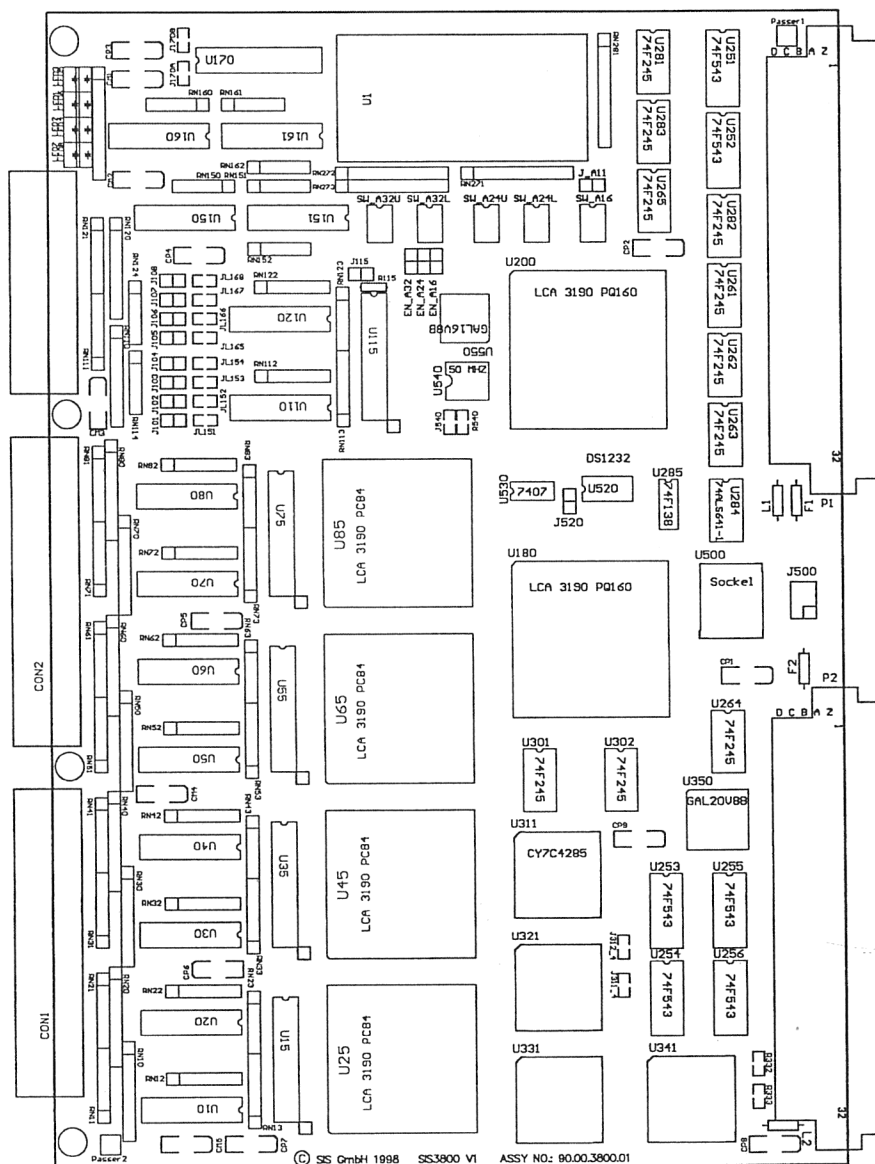

19.7 FLASHROM Versions

A list of available FLASHROMs can be obtained from <http://www.struck.de/sis3638firm.htm>. Please note, that a special hardware configuration may be necessary for the firmware design of interest (the SIS3801 design requires the installation of a FIFO e.g.).

The table on the web is of the format shown below:

SIS36/38xx FLASHROM table

Design Name	Design	Boot File (s)
SIS3800_201098	0	SIS3800 Version 1
SIS3801_201098	0	SIS3800 Version 1
	1	SIS3800 Version 2
	2	SIS3801 Version 1 (32-bit Design)
	3	SIS3801 Version 2 (24-bit Design)
SIS3803_131198	0	SIS3803 Version 1

19.8 Row d and z Pin Assignments

The SIS3800 is prepared for the use with VME64x and VME64xP backplanes. Foreseen features include geographical addressing and live insertion (hot swap). The prepared pins on the d and z rows of the P1 and P2 connectors are listed below.

Position	P1/J1		P2/J2	
	Row z	Row d	Row z	Row d
1		VPC (1)		
2	GND	GND (1)	GND	
3				
4	GND		GND	
5				
6	GND		GND	
7				
8	GND		GND	
9		GAP*		
10	GND	GA0*	GND	
11	RESP*	GA1*		
12	GND		GND	
13		GA2*		
14	GND		GND	
15		GA3*		
16	GND		GND	
17		GA4*		
18	GND		GND	
19				
20	GND		GND	
21				
22	GND		GND	
23				
24	GND		GND	
25				
26	GND		GND	
27				
28	GND		GND	
29				
30	GND		GND	
31		GND (1)		GND (1)
32	GND	VPC (1)	GND	VPC (1)

Note: Pins designated with (1) are so called MFBL (mate first-break last) pins on the installed 160 pin connectors, VPC(1) pins are connected via inductors.

19.9 Geographical Address Pin Assignments

The SIS38xx board series is prepared for geographical addressing via the geographical address pins GA0*, GA1*, GA2*, GA3*, GA4* and GAP*. The address pins are left open or tied to ground by the backplane as listed in the following table:

Slot Number	GAP* Pin	GA4* Pin	GA3* Pin	GA2* Pin	GA1* Pin	GA0* Pin
1	Open	Open	Open	Open	Open	GND
2	Open	Open	Open	Open	GND	Open
3	GND	Open	Open	Open	GND	GND
4	Open	Open	Open	GND	Open	Open
5	GND	Open	Open	GND	Open	GND
6	GND	Open	Open	GND	GND	Open
7	Open	Open	Open	GND	GND	GND
8	Open	Open	GND	Open	Open	Open
9	GND	Open	GND	Open	Open	GND
10	GND	Open	GND	Open	GND	Open
11	Open	Open	GND	Open	GND	GND
12	GND	Open	GND	GND	Open	Open
13	Open	Open	GND	GND	Open	GND
14	Open	Open	GND	GND	GND	Open
15	GND	Open	GND	GND	GND	GND
16	Open	GND	Open	Open	Open	Open
17	GND	GND	Open	Open	Open	GND
18	GND	GND	Open	Open	GND	Open
19	Open	GND	Open	Open	GND	GND
20	GND	GND	Open	GND	Open	Open
21	Open	GND	Open	GND	Open	GND

19.10 Additional Information on VME

The VME bus has become a popular platform for many realtime applications over the last decade. Information on VME can be obtained in printed form, via the web or from newsgroups. Among the sources are the VMEbus handbook, <http://www.vita.com> (the home page of the VME international trade association (VITA)) and comp.bus.arch.vmebus. In addition you will find useful links on many high energy physics labs like CERN or FNAL

20 Index

- 24-bit mode 17
- 25 MHz Pulser 26
- 25 MHz test pulses 15
- 32-bit mode 17
- A_11 9, 32
- A16 9
- A24 9
- A24 Broadcast Example** 18
- A32 9
- A32 Broadcast Example** 18
- Address Map 13
- Address Modifier Overview 28
- address modifiers 28
- Address Space 12
- addressing
 - A16, A24, A32 32
- addressing mode 28
- Addressing mode 32
- addressing modes 12
- Addressing 9
- Base address 9
- Base Address 12, 32
- block diagram 6
- BLT 28
- Board Layout 34
- Boot File Selection 32
- Bootfile Selection 33
- Broadcast Addressing 17
- broadcast handshake controller 17
- broadcast mode 15
- broadcast mode handshake controller 15
- broadcast time jitter 17
- CBLT 28
- CERN 37
- Clear Logic 8
- Connector Specification 23
- Control and Status register 13
- Control Input 32
- Control Input Modes 24
- Control Register 15
- Cooling 25
- Count disable register 17
- Count Enable 8
- custom firmware 6
- CVI 27
 - call back routines 27
 - project file 27
- D08(O) 16
- D16 20
- D32 20
- Data Format 20
- DC/DC converter 32
- drivers 27
- ECL 5, 21, 30
- En_A16 9
- EN_A16 12, 32
- En_A24 9
- EN_A24 12, 32
- En_A32 9
- EN_A32 12, 32
- External Latch Shadow Input 19
- Factory Default Settings 9
- firmware 5
 - firmware design 9, 16
 - Firmware Design 9
 - Firmware Selection 10
 - Bootfile 10
 - Examples 10
 - FLASHPROM 5, 6, 9, 10
 - FLASHPROM Versions 35
 - flat cable 5
 - Floppy 27
 - FNAL 37
 - Front Panel
 - LED 11
 - Front Panel Layout 29
 - GA0* 37
 - GA1* 37
 - GA2* 37
 - GA3* 37
 - GA4* 37
 - GAP* 37
 - geographical address
 - pins 37
 - Geographical Address 37
 - geographical addressing 36
 - Getting Started 9
 - hot swap 25, 36
 - http
 - //www.vita.com 37
 - Input Configuration 21
 - input mode 15
 - Input Priority 26
 - input test mode 15, 26
 - Insertion/Removal 25
 - interrupt acknowledge cycle 16
 - interrupt condition 19
 - interrupt control 16
 - interrupt level 16, 19
 - interrupt logic 19
 - interrupt vector 16, 19
 - interrupter type 16
 - IRQ source 15
 - J_A11 12, 32
 - J101-J108 32
 - J115 32
 - J500 9, 32, 33
 - J520 9, 32, 33
 - jumper
 - firmware selection 10
 - VME addressing mode 12
 - Jumper
 - overview 32
 - Jumper and rotary switch locations 32
 - key address 13
 - LED 11
 - Access 11
 - Color 11
 - Power 11
 - Ready 11
 - user 9
 - LEMO 5
 - live insertion 25, 36
 - Module Identification and IRQ control register 13, 16
 - module number 16
 - monostable 11

NIM	5, 22	SYSRESET Behaviour	33
Operating Conditions	25	System Reset	10
OR VP6	27	Technical Properties/Features	6
Overflow	19	Test Interrupt	19
Overflow registers	17	TTL	5, 23, 31
PCB	6	version number	16
Pentium II	27	VIPA	25
Pin Assignments	30	addressing	5
Power Consumption	25	base address	12
Read and Clear Counter	20	extractor handles	5
Read Counter	20	LED set	5
read on the fly	7	VITA	37
Read Shadow Register	20	VME	25, 37
Readout Schemes	20	addressing mode	12
Reference pulser channel 1	26	Base Address	12
rotary switch	32	CPU	27
shadow register	7	SYSRESET	33
Signal Specification	25	SYSRESET Behaviour	32
Control	25	VME addressing	12
Inputs	25	VME control register	19
Single Pulse	26	VME Interrupts	19
SIS360x/38xx	5	VME IRQ and version register	19
Software Support	27	VME64x	12, 36
Status Register	14	connector	5
SW_A16	9, 12	VME64xP	5, 12, 36
SW_A24L	9, 12	Voltage requirement	25
SW_A24U	9, 12	VxWorks	27
SW_A32L	9, 12	Windows 95	27
SW_A32U	9, 12	XILINX	7

SIS3801 is different
from SIS3800
The 3801 has a FIFO, etc.

SIS3801 VME Multiscaler User Manual

SIS GmbH
Moorhof 2d
22399 Hamburg
Germany

Phone: ++49 (0) 40 60 87 305 0
Fax: ++49 (0) 40 60 87 305 20

email: info@struck.de
<http://www.struck.de>

Version: 1.3 as of 13.01.99

Revision Table:

Revision	Date	Modification
1.0		Generation
1.1		
1.2	17.11.98	Firmware Version 3 and 4
1.3	13.01.99	Revision Table Input/Output pinout

Table of contents

Table of contents.....	3
1 Introduction.....	5
2 Technical Properties/Features.....	6
2.1 Board Layout.....	6
2.2 Counter Design and Modus Operandi.....	7
2.3 Minimum Dwell Time.....	8
2.4 Future Designs.....	8
2.5 Readout Considerations.....	9
2.6 Count Enable Logic.....	9
3 Getting Started.....	10
3.1 Factory Default Settings.....	10
3.1.1 Addressing.....	10
3.1.2 System Reset Behaviour.....	10
4 Firmware Selection.....	11
4.1 Examples.....	11
Front Panel LEDs.....	12
5 VME addressing.....	13
5.1 Address Space.....	13
5.2 Base Address.....	13
5.2.1 VME.....	13
5.2.2 VIPA/VME64x.....	13
5.3 Address Map.....	14
6 Register Description.....	15
6.1 Status Register (0x0).....	15
6.2 Control Register (0x0).....	16
6.3 Module Identification and IRQ control register (0x4).....	17
6.4 Copy disable register 0xC.....	18
6.4.1 Early Implementation (Version 1+2).....	18
6.4.2 New Implementation (Version 3+4).....	18
6.5 FIFO (0x100-0x1FC).....	18
7 Broadcast Addressing.....	18
8 VME Interrupts.....	20
9 Data Format.....	21
9.1 32-bit Mode (Version 1+3).....	21
9.1.1 D16.....	21
9.1.2 D32.....	21
9.2 24-bit Mode (Version 2+4).....	21
9.2.1 D16.....	21
9.2.2 D32.....	21
10 Input Configuration.....	22
10.1 ECL.....	22
10.2 NIM.....	23
10.3 TTL.....	24
10.3.1 TTL/LEMO.....	24
10.3.2 TTL/Flat Cable.....	24
11 Connector Specification.....	24
12 Control Input Modes.....	25
12.1 Inputs.....	25
12.2 Outputs.....	25
13 Signal Specification.....	26
13.1 Control Signals.....	26
13.2 Inputs.....	26
13.3 User Bits.....	26
14 Operating conditions.....	27
14.1 Power Consumption/Voltage requirement.....	27
14.2 Cooling.....	27
14.3 Insertion/Removal.....	27

15	Test	28
15.1	LED (selftest).....	28
15.2	Internal pulser tests	28
15.2.1	Single Pulse.....	28
15.2.2	25 MHz Pulser	28
15.3	Reference pulser channel 1	28
15.4	Signal-Input Priority	28
15.5	FIFO Test.....	29
16	Software Support	30
16.1	Contents of the included Floppy	30
17	Appendix.....	31
17.1	Address Modifier Overview.....	31
17.2	Front Panel Layout.....	32
17.3	Flat cable Input/Output Pin Assignments	33
17.3.1	ECL.....	33
17.3.2	TTL	34
17.4	List of Jumpers.....	35
17.5	Jumper and rotary switch locations.....	35
17.5.1	Addressing mode and base address selection.....	35
17.5.2	J500 (Bootfile Selection) and J520 (SYSRESET Behaviour).....	36
17.6	Board Layout	37
17.7	Cascaded FIFOs	38
17.8	FLASHROM Versions	38
17.9	Row d and z Pin Assignments.....	39
17.10	Geographical Address Pin Assignments	40
17.11	Additional Information on VME.....	40
18	Index	41

1 Introduction

The SIS3801 is one of the multi channel scaler (multiscaler) boards of the SIS360x/38xx VMEboard family. The SIS3801 is a single width (4 TE) 6U (double euro form factor) card. It was designed with applications at neutron sources and synchrotrons in mind, but due to the units flexible design it (or other members of the family) can be used in many particle physics and related applications as well as in applied research. Possible applications include:

- Beam loss monitor readout
- Luminosity monitor readout
- Electron Microscope readout
- Polarimeter Applications
- Time resolved counter acquisition
- „Deadtimeless“ scaler readout

This document was written with the focus on the user of the unit, who wants to integrate the board into a data acquisition system and interested parties who consider the module for future use in their setup and would like to get an overview on the designs capabilities.

The SIS360x/38xx card is a flexible concept to implement a variety of latch and counter firmware designs. The flexibility is based on two to six Xilinx FPGAs in conjunction with a FLASHROM from which the firmware files are loaded into the FPGAs. Depending on the stuffing options of the printed circuit board, the user has the possibility to cover several purposes with the same card, hence the manual is a combination of firmware and hardware description .

All cards of the family are equipped with the 5 row VME64x VME connectors, a side cover and EMC front panel, as well as the VIPA LED set. For users with VME64xP subracks VIPA extractor handles can be installed. The base board is prepared for VIPA style addressing, the current first version of the SIS3801 firmware does not feature VIPA modes yet however.

As we are aware, that no manual is perfect, we appreciate your feedback and will try to incorporate proposed changes and corrections as quickly as possible. The most recent version of this manual can be obtained by email from info@struck.de, the revision dates are online under <http://www.struck.de/manuals.htm>. A list of available firmware designs can be retrieved from <http://www.struck.de/sis3638firm.htm>

2 Technical Properties/Features


The SIS3801 is rather a firmware design in combination with given board stuffing options, than a name for the board (this is the reason, why the modules are named SIS360x/38xx on the front panel and the distinction of the units is made by the module identifier register). The firmware makes use of part of the possibilities of the SIS360x/38xx PCB, if the SIS3801 or other firmware designs of the family come close to what you need, but something is missing, a custom firmware design may be an option to consider.

Find below a list of key features of the SIS3801.

- 32 channels
- 200 MHz counting rate (ECL and NIM), 100 MHz for TTL
- 24/32-bit channel depth
- NIM/TTL/ECL versions
- flat cable (TTL/ECL) and LEMO (TTL/NIM) versions
- 64K FIFO (256 K available on request)
- A16/A24/A32 D16/D32/BLT32 (CBLT32 prepared)
- Base address settable via 5 rotary switches (A32-A12) and one jumper (A11)
- VME interrupt capability
- VIPA geographical addressing prepared
- VIPA LED set
- 3.8 μ s minimum dwell time (with all channels active)
- 2 external user bits (in 24-bit mode)
- Reference Pulser capability
- Up to eight firmware files
- single supply (+5 V)

2.1 Board Layout

Xilinx FPGAs are the working horses of the SIS360x/38xx board series. The counter (prescaler, latch, ...) logic is implemented in one to four chips, each chip handles eight front end channels. The VME interface and the input and output control logic reside in two Xilinx chips also. The actual firmware is loaded into the FPGAs upon power up from a FLASHROM under jumper control. The user can select among up to eight different boot files by the means of a 3-bit jumper array. The counter inputs, the control inputs and the outputs can be factory configured for ECL, NIM and TTL levels. The front panel is available as flat cable (ECL and TTL) or LEMO (NIM and TTL) version. The board layout is illustrated with the block diagram below:

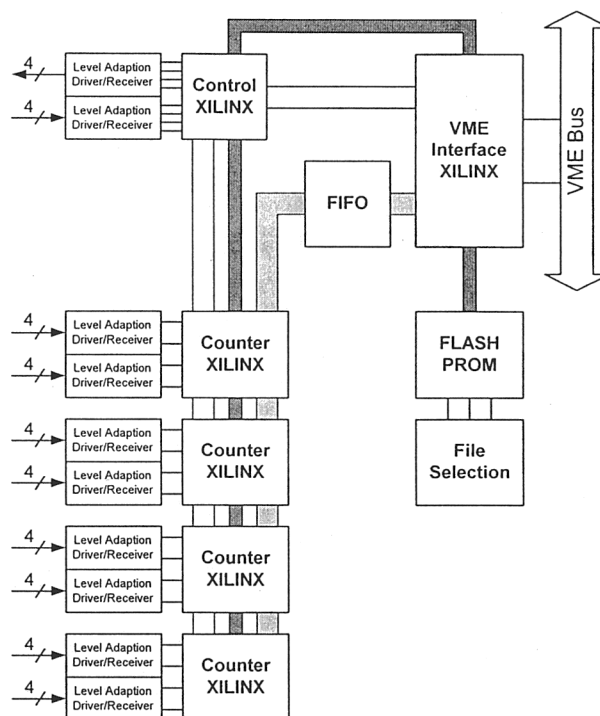


SIS3801 Block Diagram

2.2 Counter Design and Modus Operandi

The counters are implemented in XILINX FPGAs. One of the counter FPGAs holds 8 32-bit or 24-bit deep counter channels. Two counter banks are implemented, the actual multiscaling mechanism is implemented as bank switching between the two counter banks and copying the data of the inactive bank to the FIFO. Bank switching can be initiated via an external pulse or a VME command. A sketch of the bank mechanism can be found below.

In nuclear physics one refers to the time slice length (i.e. the period during which counts are acquired into the same bank) as dwell time. In many cases the dwell time will be constant, but the user is free to use varying time intervals, as long as the minimum time between two next event pulses is smaller than the minimum dwell time with the given number of active channels. An approach to measure the length of the time slices is the readout of a fixed frequency clock on one of the counter channels, the accuracy of the measurement is defined by the frequency stability of the clock and the interval length.

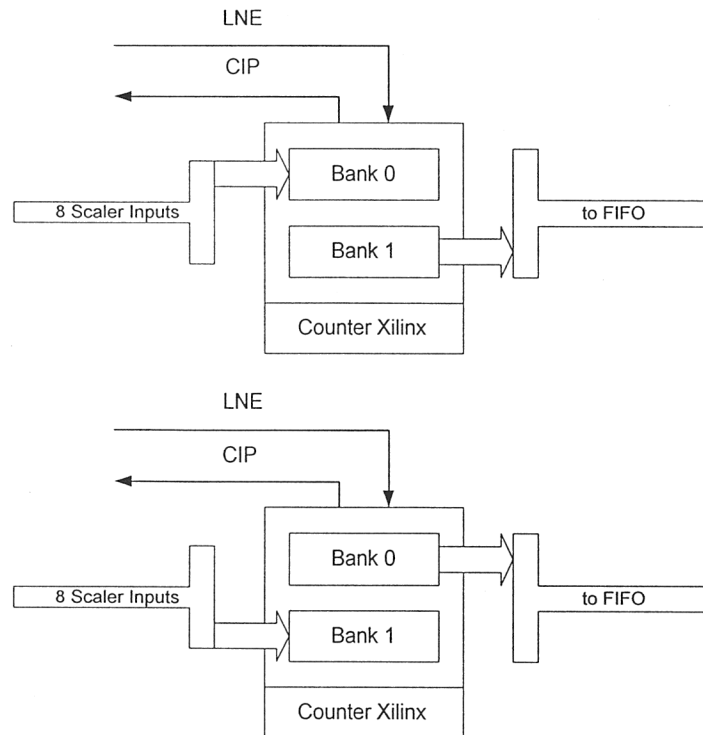

2.3 Minimum Dwell Time

The minimum dwell time on the SIS3801 is defined by the time which is needed to copy the data from the idle scaler bank to the FIFO. The time required to copy one 32-bit data word from the counter Xilinx chips to the FIFO is 120 ns. The overhead is 260 ns, thus the minimum dwell time is 4.0 μ s with all 32 scaler channels active. The firmware designs 3 and 4 have a channel count dependent dwell time. Via the copy disable register the number of active channels can be reduced if lower dwell times are of interest. The time, which is needed for the copy progress can be measured on the copy in progress (CIP) output, the output is active for the duration of the process, the signal can also be of help to control or synchronise external components.

As the maximum number of counts the unit can acquire within microsecond time frames is in the order of a couple of hundred, one may consider to go for a 16-bit counter design if shorter dwell times are envisaged, the readout time is reduced to 50 ns/16-bit word in such a design (the FIFO is of 18-bit synchronous type).

2.4 Future Designs

For a range of HEP applications non clearing multiscaler designs (32-bits and 48-bits) are in preparation. These are kind of a combination of the SIS3800 and the SIS3801. Instead of bank switching (which does not make sense in this mode, as the counts would be scattered over the two banks) a shadow register is clocked with every next pulse and the data are transferred to the FIFO. No counts are lost in such a design, but the accuracy of the lowest 6 bits is not given at full counting speed, i.e. the read out counter value is exact modulo 64.

2.5 Readout Considerations


One of the major advantages of a FIFO based counter/multiscaler is the decoupling of the time slice/bank switching and the actual VME readout of the data. Depending on the application the FIFO may be used to buffer one or two reads only, before a DSP processes the data on the fly, in this case the FIFO is used to establish readout pipelining, in other cases the maximum possible FIFO size is of interest to store a complete set of data points for a pulsed or non continuous measurement. Continuous multiscaling can be established as long as the VME master can cope with the amount of data generated by the scaler, i.e. the FIFO is never allowed to run into the FIFO full condition. The 64K default FIFO size of the SIS3801 V2 (4K on V1 boards) is considered to be a save value for most applications, for more demanding applications the FIFO size can be increased up to 256K as a stuffing option in steps of 64K. One as to keep in mind, that two FIFO words are needed to hold one 32-bit scaler value, i.e. a 64K FIFO can hold 32K scaler words or 1K events (time slices) with all 32 channels enabled. The packing of the FIFO data into VME D32 words is handled without user intervention upon VME read cycles from the FIFO. In high data rate applications, the readout scheme will make use of the FIFO half full flag via a VME interrupt or polling in most cases, as a minimum known number of 32K longwords can be read out (being blocked into smaller chunks by VME) with a block transfer.

Example: Assume 32 channels are read out with a dwell time of 10 μ s (i.e. at a rate of 100 KHz). The data rate is 32 channels x 4 bytes x 100 KHz corresponding to some 12 MB/s. The FIFO half full interrupt or flag will be asserted for the first time after 0.5 ms of data acquisition, the VME master has to digest 64Kbytes within less than 0.5 ms (including IRQ handling or polling) to prevent the FIFO from overflow.

Note: No new data can be acquired before a FIFO reset if the FIFO full condition has occurred (i.e. the FIFO full condition is considered an error condition, which should not occur in standard operation).

2.6 Count Enable Logic

A channel acquires input or test counts, if the count enable and the global count enable conditions are true. Via the test enable toggle bits in the control register the input of the counter is switched to test pulses or front panel signals.

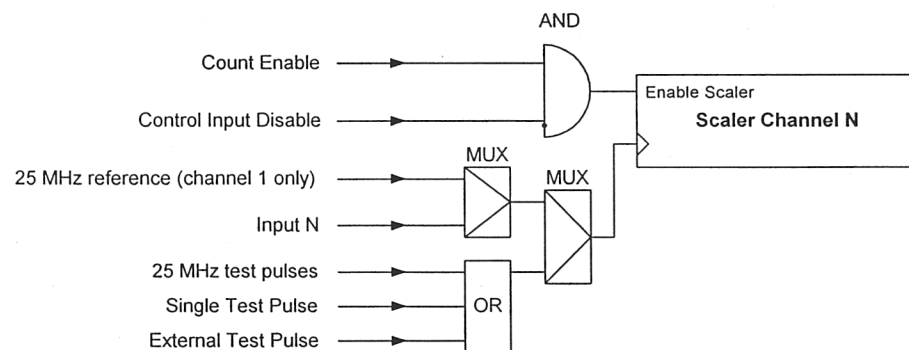

3 Getting Started

The minimum setup to operate the SIS3801 requires the following steps:

- Check the proper firmware design is selected (should be design zero, i.e. all jumpers of jumper array J500 set).
- Select the VME base address for the desired addressing mode
- Select the VME SYSRESET behaviour via J520
- turn the VME crate power off
- install the scaler in the VME crate
- connect your signals to the counter
- turn crate power back on
- issue a key reset by writing to 0x60
- issue FIFO clear by writing to 0x20
- enable next logic by writing to 0x28
- issue first next clock pulse to start counting by soft- or hardware
- after one or more subsequent next clock pulses data can be read from the FIFO from the addresses 0x100 through 0x1FC.

A good way of checking first time communication with the SIS3801 consists of switching on the user LED by a write to the control register at offset address 0x0 with data word 0x1 (the LED can be switched back off by writing 0x100 to the control register)..

3.1 Factory Default Settings

3.1.1 Addressing

SIS3801 boards are shipped with the En_A32, the En_A24 and the En_A16 jumpers installed and the rotary switches set to:

Switch	SW A32U	SW A32L	SW A24U	SW A24L	SW A16	J A 11	Bits 7-4	Bits 3-0
Setting	3	8	3	8	3	8	0	0

Jumper A_11 is open (bit 11 set).

Hence the unit will respond to the following base addresses:

Mode	Base address
A32	0x38383800
A24	0x383800
A16	0x3800

Firmware Design

Design 2 (SIS3801, Version 1) of the FLASHROM is selected (middle jumper of jumper array J500 open, other jumpers set).

3.1.2 System Reset Behaviour

J520 is set, i.e. the SIS3801 is reset upon VME reset.

4 Firmware Selection


The FLASH PROM of a SIS360x/38xx board can contain several boot files. A list of available FLASHPROM versions can be found on our web site <http://www.struck.de> in the manuals page. If your FLASHPROM has more than one firmware design, you can select the desired firmware via the firmware selection jumper array J500. You have to make sure, that the input/output configuration and FIFO configuration of your board are in compliance with the requirements of the selected firmware design (a base board without FIFO can not be operated as multi channel scaler e.g.). A total of 8 boot files from the FLASHPROM can be selected via the three bits of the jumper array. The array is located towards the rear of the card between the VME P1 and P2 connectors. The lowest bit sits towards the bottom of the card, a closed jumper represents a zero, an open jumper a one.

4.1 Examples


The figures below show jumper array 500 with the soldering side of the board facing the user and the VME connectors pointing to the right hand side.

Bootfile 0 selected

With all jumpers closed boot file 0 is selected

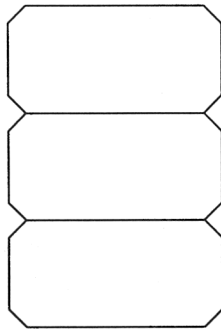

Bootfile 3 selected

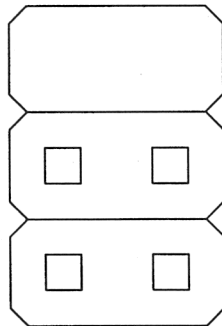


With the lowest two jumpers open bit 0 and bit 1 are set to 1 and hence boot file 3 is selected

Front Panel LEDs

The SIS3801 has 8 front panel LEDs to visualise part of the units status. Three LEDs according to the VME64xP standard (Power, Access and Ready) plus 5 additional LEDs (VME user LED, Clear, Copy in Progress, Scaler enable and VIPA user LED).

Designation	LED	Color	Function
A	Access	yellow	Signals VME access to the unit
P	Power	red	Flags presence of VME power
R	Ready	green	Signals configured logic
U	VME user LED	green	To be switched on/off under user program control
CLR	Clear	yellow	Signals bank clear
OVL (CIP)	Copy in Progress	red	Signals copy in progress
S	Scaler Enable	green	Signals one or more enabled channels
VU	VIPA user LED	green	for future use

The LED locations are shown in the portion of the front panel drawing below.

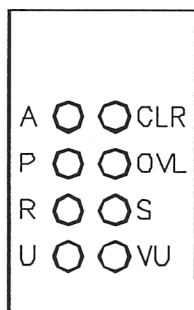

The VME Access, the Clear and the Scaler enable LED are monostable (i.e. the duration of the on phase is stretched for better visibility), the other LEDs reflect the current status. An LED test cycle is performed upon power up (refer to the chapter 15.1).

5 VME addressing

5.1 Address Space

As bit 11 is the lowest settable bit on the 360x/38xx board, an address space of 2 Kbytes (Offset plus 0x000 to 0x7ff) is occupied by the module.

5.2 Base Address

5.2.1 VME

The VME addressing mode (A16/A24/A32) is selected via the jumpers EN_A16, EN_A24 and EN_A32. The mode is selected by closing the corresponding jumper, it is possible to enable two or all three addressing modes simultaneously.

The base address is set via the five rotary switches SW_A32U, SW_A32L, SW_A24U, SW_A24L and SW_A16 and the jumper J_A11. The table below lists the switches and jumpers and their corresponding address bits.

Switch/Jumper	Affected Bits
SW_A32U	31-28
SW_A32L	27-24
SW_A24U	23-20
SW_A24L	19-16
SW_A16	15-12
J_A11	11

In the table below you can see, which jumpers and switches are used for address decoding in the three different addressing modes (fields marked with an x are used).

	SW_A32U	SW_A32L	SW_A24U	SW_A24L	SW_A16	J_A11
A32	x	x	x	x	x	x
A24			x	x	x	x
A16					x	x

Note: J_A11 closed represents a 0, J_A11 open a one

5.2.2 VIPA/VME64x

As the VME64x and the VME64xP (VIPA) standard are not yet standards to refer to and to declare conformity with, addressing modes (like geographical addressing e.g.) according to these standards are prepared but not yet implemented in the current firmware revisions.

5.3 Address Map

The SIS360x/38xx boards are operated via VME registers, VME key addresses and the FIFO (where installed). The following table gives an overview on all SIS3801 addresses and their offset from the base address, a closer description of the registers and their function is given in the following subsections.

Offset	Key	Access	Type	Function
0x000		R/W	D16/D32	Control and Status register
0x004		R/W	D16/D32	Module Identification and IRQ control register
0x00C		W	D16/D32	Copy disable register
0x010		W	D16/D32	Write to FIFO (in FIFO test mode)
0x020	KA	W	D16/D32	clear FIFO, logic and counters
0x024	KA	W	D16/D32	VME next clock
0x028	KA	W	D16/D32	Enable next clock logic
0x02C	KA	W	D16/D32	Disable next clock logic
0x030	KA	W	D16/D32	Broadcast, clear FIFO, logic and counters
0x034	KA	W	D16/D32	Broadcast; VME next clock
0x038	KA	W	D16/D32	Broadcast; Enable next clock logic
0x03C	KA	W	D16/D32	Broadcast; Disable next clock logic
0x050	KA	W	D16/D32	enable reference pulser channel 1
0x054	KA	W	D16/D32	disable reference pulser channel 1
0x060	KA	W	D16/D32	reset register (global reset)
0x068	KA	W	D16/D32	Test pulse (generate a single pulse)
0x100- 0x1FC		R/(W)	D16/D32/ BLT32	read FIFO

Note: D08 is not supported by the SIS38xx boards

The shorthand KA stands for key address. Write access with arbitrary data to a key address initiates the specified function

6 Register Description

6.1 Status Register (0x0)

The status register reflects the current settings of most of the SIS3801 parameters in read access, in write access it functions as the control register.

Bit	Function
31	Status VME IRQ source 3 (FIFO full)
30	Status VME IRQ source 2 (FIFO half full)
29	Status VME IRQ source 1 (FIFO almost empty)
28	Status VME IRQ source 0 (start of CIP)
27	VME IRQ
26	internal VME IRQ
25	0
24	0
23	Status VME IRQ Enable Bit Source 3
22	Status VME IRQ Enable Bit Source 2
21	Status VME IRQ Enable Bit Source 1
20	Status VME IRQ Enable Bit Source 0
19	software disable counting bit
18	Status external disable
17	Status enable external clear
16	Status enable external next
15	Status Enable next logic
14	0
13	Status enable reference pulser channel 1
12	FIFO flag full
11	FIFO flag almost full0
10	FIFO flag half full
9	FIFO flag almost empty
8	FIFO flag empty
7	Status broadcast mode handshake controller
6	Status broadcast mode
5	Status input test mode
4	Status 25 MHz test pulses
3	Status input mode bit 1
2	Status input mode bit 0
1	Status FIFO test mode
0	Status user LED

The reading of the status register after power up or key reset is 0x300 (see default settings of control register).

6.2 Control Register (0x0)

The control register is in charge of the control of most of the basic properties of the SIS3801 board in write access. It is implemented via a selective J/K register, a specific function is enabled by writing a 1 into the set/enable bit, the function is disabled by writing a 1 into the clear/disable bit (which has a different location within the register). An undefined toggle status will result from setting both the enable and disable bits for a specific function at the same time.

On read access the same register represents the status register.

Bit	Function
31	disable IRQ source 3 (*)
30	disable IRQ source 2 (*)
29	disable IRQ source 1 (*)
28	disable IRQ source 0 (*)
27	clear software disable counting bit (*)
26	disable external disable (*)
25	disable external clear (*)
24	disable external next (*)
23	enable IRQ source 3
22	enable IRQ source 2
21	enable IRQ source 1
20	enable IRQ source 0
19	set software disable counting bit (*)
18	enable external disable (*)
17	enable external clear (*)
16	enable external next (*)
15	disable broadcast mode handshake controller (*)
14	disable broadcast mode (*)
13	disable input test mode (*)
12	disable 25 MHz test pulses (*)
11	clear input mode bit 1 (*)
10	clear input mode bit 0 (*)
9	disable FIFO test mode
8	switch off user LED (*)
7	enable handshake controller for broadcast mode
6	enable broadcast mode
5	enable input test mode
4	enable 25 MHz test pulses
3	set input mode bit 1
2	set input mode bit 0
1	enable FIFO test mode
0	switch on user LED

(*) denotes the default power up or key reset state

6.3 Module Identification and IRQ control register (0x4)

This register has two basic functions. The first is to give information on the active firmware design. This function is implemented via the read only upper 20 bits of the register. Bits 16-31 hold the four digits of the SIS module number (like 3801 or 3600 e.g.), bits 12-15 hold the version number. The version number allows a distinction between different implementations of the same module number, the SIS3801 for example has the 24-bit mode with user bits and the straight 32-bit mode as versions.

Bit	Read/Write access	Function
31	read only	Module Identification Bit 15
30	read only	Module Identification Bit 14
29	read only	Module Identification Bit 13
28	read only	Module Identification Bit 12
27	Read only	Module Identification Bit 11
26	read only	Module Identification Bit 10
25	read only	Module Identification Bit 9
24	read only	Module Identification Bit 8
23	read only	Module Identification Bit 7
22	read only	Module Identification Bit 6
21	read only	Module Identification Bit 5
20	read only	Module Identification Bit 4
19	read only	Module Identification Bit 3
18	read only	Module Identification Bit 2
17	read only	Module Identification Bit 1
16	read only	Module Identification Bit 0
15	read only	Version Bit 3
14	read only	Version Bit 2
13	read only	Version Bit 1
12	read only	Version Bit 0
11	read/write	VME IRQ Enable (0=IRQ disabled, 1=IRQ enabled)
10	read/write	VME IRQ Level Bit 2
9	read/write	VME IRQ Level Bit 1
8	read/write	VME IRQ Level Bit 0
7	read/write	IRQ Vector Bit 7; placed on D7 during VME IRQ ACK cycle
6	read/write	IRQ Vector Bit 6; placed on D6 during VME IRQ ACK cycle
5	read/write	IRQ Vector Bit 5; placed on D5 during VME IRQ ACK cycle
4	read/write	IRQ Vector Bit 4; placed on D4 during VME IRQ ACK cycle
3	read/write	IRQ Vector Bit 3; placed on D3 during VME IRQ ACK cycle
2	read/write	IRQ Vector Bit 2; placed on D2 during VME IRQ ACK cycle
1	read/write	IRQ Vector Bit 1; placed on D1 during VME IRQ ACK cycle
0	read/write	IRQ Vector Bit 0; placed on D0 during VME IRQ ACK cycle

The second function of the register is interrupt control. The interrupter type of the SIS3801 is D08(O). Via bits 0-7 of the module identifier and interrupt control register you can define the interrupt vector, which is placed on the VME bus during the interrupt acknowledge cycle. Bits 8 through 10 define the VME interrupt level, bit 11 is used to enable (bit set to 1) or disable (bit set to 0) interrupting.

Module identification and version example:

The register for a SIS3801 in straight 32-bit mode (version 1) reads 0x38011nnn, for a SIS3801 in 24-bit mode (version 2) it reads 0x38012nnn. (the status of the lower 3 nibbles is denoted with n in the example).

6.4 Copy disable register 0xC

6.4.1 Early Implementation (Version 1+2)

The copy disable register can be used to exclude single channels or arbitrary groups of channels. The value from the copy disable register is used from the following next pulse on, i.e. the user has the possibility to change the readout pattern in a dynamic fashion. In the current implementation the copy in progress time is not depending on the number of active channels, it was measured to be 4.0 μ s.

If bit N of the register is set, channel N+1 is excluded from the copy process..

Example: If 0x5 is written to the copy disable register, the data of channel 1 and 3 are not copied into the FIFO.

6.4.2 New Implementation (Version 3+4)

In the new firmware implementations the first set bit (counting from zero) will define the end of the copy process loop and the duration of the copy in progress and hence the minimum dwell time depends on the number of enabled channels. The copy time was measured to be some 120 ns/channel, an overall overhead in the order of 260 ns. This allows you to make measurements with very short dwell times with a limited number of channels.

Example: If 0x10 is written to the copy disable register, the data of channels 1 through 4 are copied into the FIFO, all other channels are disabled. The minimum dwell time is in the order of 750 ns (4 channels x 120 ns+260 ns overhead, exact value can be measured on the CIP output) for this example.

6.5 FIFO (0x100-0x1FC)

The FIFO can be accessed from addresses 0x100 through 0x1FC to facilitate the readout with different types of CPUs. For masters with block transfer capability without address increment its most convenient to read all data from address 0x100. For masters with block transfer address auto increment it is straightforward to set up repeated block reads with a length of 256 Bytes (the maximum VME block transfer size) from address 0x100 (and the autoincrement uses the addresses 0x100 through 0x1FC for the transfer).

If FIFO test mode is enabled data can be written to the FIFOs addresses.

7 Broadcast Addressing

Broadcast addressing is an efficient way to issue the same command to a number of modules. It can be used in A24 and A32 mode on SIS360x/38xx boards. The higher address bits are used to define the broadcast class, the distinction of the modules is done via the A16 rotary switch and the A_11 jumper. If broadcast addressing is used, the A32_U, the A_32_L, the A24_U and the A24_L rotary switches must have the same setting in A32 mode, in A24 mode the A24_U and A24_L setting must be the same on all participating units. One of the participating units must be configured as broadcast handshake controller by setting bit 7 in the units control register. All of the participating units must have set bit 6 (enable broadcast) in the control register. The broadcast time jitter was measured to be less than 40 ns within a VME crate, i.e. you have the possibility issue commands under software control with a maximum uncertainty of 40 ns (like clear all counters), what sure is worse, than a hard wired front panel clear, but is much better than a VME single cycle loop over a number of units. The four broadcast commands are executed via the VME key addresses at offset 0x030 through 0x3C.

A32 Broadcast Example:

Let four SIS3801 participate by setting the A_32 jumper and setting the base address of the units to:

Unit 1: 0x32001000

Unit 2: 0x32001800

Unit 3: 0x32002000

Unit 4: 0x32002800

Switch on enable broadcast by setting bit 6 in the control register of the four units.

Enable broadcast handshake controller on unit 4 by setting bit 7 of its control register.

An A232 write to address 0x32000034 will issue one software next clock on units 1 through 4.

A24 Broadcast Example:

Let three SIS3801 participate by setting the A_24 jumper and setting the base address of the units to:

Unit 1: 0x541000

Unit 2: 0x542000

Unit 3: 0x543000

Switch on enable broadcast by setting bit 6 in the control register of the three units.

Enable broadcast handshake controller on unit 1 by setting bit 7 of its control register.

An A24 write to address 0x540030 will clear the counters, FIFOs and the logic on units 1 through 3.

8 VME Interrupts

Four VME interrupt sources are implemented in the SIS3801 firmware design:

- start of CIP
- FIFO half full
- FIFO almost full
- FIFO full (error condition)


The interrupter is of type D8(O).

The interrupt logic is shown below. For VME interrupt generation the corresponding interrupt source has to be enabled by setting the respective bit in the VME control register (disabling is done with the sources J/K bit). Interrupt generation has to be enabled by setting bit 11 in the IRQ and version register. The internal VME interrupt flag can be used to check on an IRQ condition without actually making use of interrupts on the bus.

The VME interrupt level (1-7) is defined by bits 8 through 10, and the VME interrupt vector (0-255) by bits 0 through 7 of the VME IRQ and version register.

In general an interrupt condition is cleared by disabling the corresponding interrupt, clearing the interrupt condition (i.e. clear overflow) and enabling the IRQ again.

Note: In most cases your experiment may not require interrupt driven scaler readout, but the interrupt capability of the SIS3801 provides a way to overcome the problem of missing front panel inputs on most commercial VME CPUs.

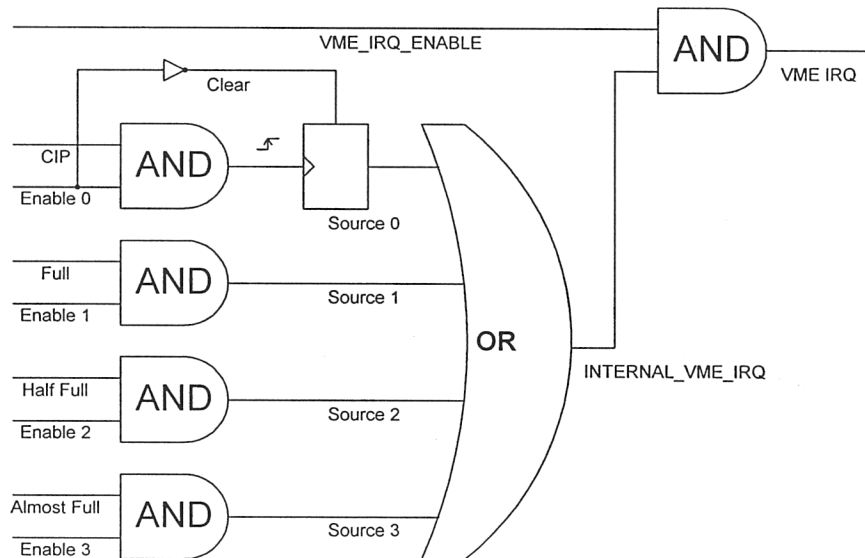

9 Data Format

The data format of the actual counter values is described for the two operating modes (24/32-bit) and the two possible data word widths (D16/D32) in this section.

9.1 32-bit Mode (Version 1+3)

In these modes the data word contains the straight scaler contents.

9.1.1 D16

	high Byte	low Byte
first read	Data Bits 31-24	Data Bits 23-16
second read	Data Bits 15-8	Data Bits 7-0

9.1.2 D32

Data Bits 31-24	Data Bits 23-16	Data Bits 15-8	Data Bits 7-0
-----------------	-----------------	----------------	---------------

9.2 24-bit Mode (Version 2+4)

In these modes the lower 24 bits hold the scaler value, the upper eight data bits contain the latched status of the two user bits and the bank and channel information. The bit names and their function are listed in the table below.

Bit	Contents
U1	User Bit 1
U0	User Bit 0
B	Bank number (0/1)
C4	Channel number Bit 4
C3	Channel number Bit 3
C2	Channel number Bit 2
C1	Channel number Bit 1
C0	Channel number Bit 0

9.2.1 D16

	high Byte	low Byte
first read	U1 U0 B C4 C3 C2 C1 C0	Data Bits 23-16
second read	Data Bits 15-8	Data Bits 7-0

9.2.2 D32

U1	U0	B	C4	C3	C2	C1	C0	Data Bits 23-16	Data Bits 15-8	Data Bits 7-0
----	----	---	----	----	----	----	----	-----------------	----------------	---------------

10 Input Configuration


SIS36/38xx boards are available for NIM, TTL and ECL input levels and in LEMO and flat cable versions. The boards are factory configured for the specified input level and connector type, input termination is installed.

10.1 ECL

The 100 Ω input termination can be removed in groups of four channels by removing the corresponding resistor networks. The termination of single control inputs can be disabled with jumpers J101 through J108, an open jumper disables the termination of the corresponding channel.

Network	Channels	1 K Networks
RN10	1-4	RN11/12
RN20	5-8	RN21/22
RN30	9-12	RN31/32
RN40	13-16	RN41/41
RN50	17-20	RN51/52
RN60	21-24	RN61/62
RN70	25-28	RN71/72
RN80	29-32	RN81/82
RN110	Control 1-4	RN111/RN112
RN120	Control 5-8	RN121/RN122

The schematics of the ECL input circuitry is shown below.

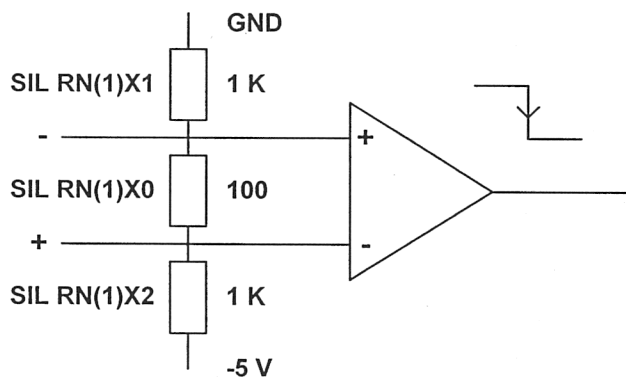


10.2 NIM

The 50 Ω input termination can be removed in groups of four channels by removing the corresponding resistor networks. The termination of single control inputs can be disabled with jumpers J101 through J108, an open jumper disables the termination of the corresponding channel.

Network	Channels
U15 (Pins <u>10</u> to 6)	1-4
U15 (Pins <u>1</u> to 5)	5-8
U35 (Pins <u>10</u> to 6)	9-12
U35 (Pins <u>1</u> to 5)	13-16
U55 (Pins <u>10</u> to 6)	17-20
U55 (Pins <u>1</u> to 5)	21-24
U75 (Pins <u>10</u> to 6)	25-28
U75 (Pins <u>1</u> to 5)	29-32
U115 (Pins <u>10</u> to 6)	Control 1-4
U115 (Pins <u>1</u> to 5)	Control 5-8

The schematics of the NIM input circuitry is shown below.

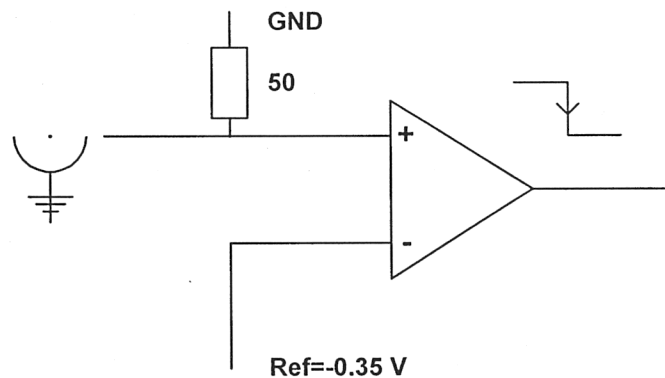


10.3 TTL

The TTL input level option is possible with LEMO and flat cable connectors.


10.3.1 TTL/LEMO

The (low active) TTL/LEMO input circuitry is sketched below. A high active version can be implemented by replacing the 74F245 with a 74F640

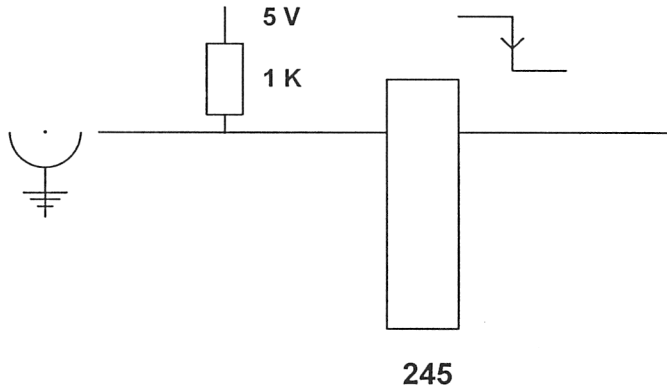

10.3.2 TTL/Flat Cable

In the flat cable TTL version the positive (right hand side) of the connector is tied to ground.

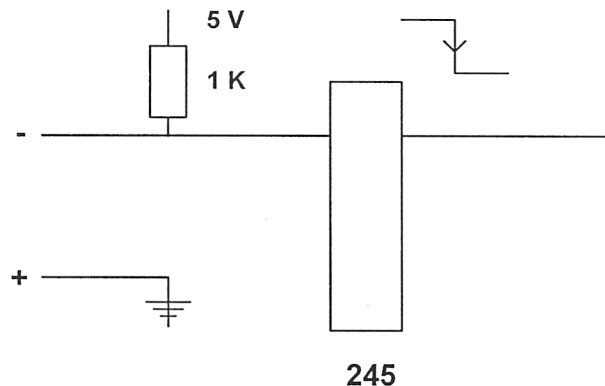

11 Connector Specification

The four different types of front panel and VME connectors used on the SIS360x and SIS38xx boards are:

Connector	Purpose	Part Number
160 pin zabcd	VME P1/P2	Harting 02 01 160 2101
20 pin header	Control (flat cable versions)	DIN41651 20 Pin (AMP e.g.)
34 pin header	Inputs (flat cable versions)	DIN41651 34 Pin (AMP e.g.)
LEMO	Control and Input (LEMO versions)	LEMO ERN.00.250.CTL

12 Control Input Modes

The assignment of the control inputs can be controlled via the input mode bits in the control register. While the standard SIS3800 firmware design (design 3800 version 1) has inputs only, design 3800 version 2 is compatible with boards, where control lines 5 to 8 are configured as outputs (what is the case for SIS3801 multiscaler boards).

12.1 Inputs

Control Input Modes

Mode 0 (bit1=0, bit0=0):
input 1 -> external next pulse
input 2 -> external user bit 1
input 3 -> external user bit 2
input 4 -> reset

Mode 1 (bit1=0, bit0=1):
input 1 -> external next pulse
input 2 -> external user bit 1
input 3 -> disable counting
input 4 -> reset

Mode 2 (bit1=1, bit0=0):
input 1 -> external next pulse
input 2 -> external user bit 1
input 3 -> external user bit 2
input 4 -> disable counting

Mode 3 (bit1=1, bit0=1):
input 4 -> external test

12.2 Outputs

Four output signals are defined on the SIS3801 board. They are copy in progress (CIP), FIFO empty, FIFO half full and FIFO full (ERROR). Their assignments to the control lines are listed in the table below.

Signal	Control Signal
CIP	5
FIFO empty	6
FIFO half full	7
FIFO full	8

13 Signal Specification

13.1 Control Signals

The width of the clear and external next pulse has to be greater or equal 10 ns, an external inhibit (disable counting) has to be present for the period you desire to disable counting. An internal delay of some 15 ns has to be taken into account for all external signals.

13.2 Inputs

The SIS3801 is specified for counting rates of 200 MHz for ECL and NIM signals and 100 MHz for the TTL case. Thus the minimum high and low level duration is 2.5 ns (5 ns respective). Signal deterioration over long cables has to be taken into account.

13.3 User Bits

The status of the user bits (Version 2 and 4) is latched with the leading edge of the external next pulse. A setup time of greater equal 10 ns and a hold time of 25 ns is required, i.e. the signal should have a length of greater 35 ns and has to be valid 10 ns before the leading edge of the next clock pulse arrives.

14 Operating conditions

14.1 Power Consumption/Voltage requirement

Although the SIS3801 is prepared for a number of VIPA features, it was decided to use an on-board DC/DC converter to generate the -5 V , which are needed for driver and receiver chips, to allow for the use of the module in all 6U VME environments. The power consumption is counting rate dependent, it varies from the idle value of $+5\text{ V } 3,3\text{ A}$ to $+5\text{ V } 4,5\text{ A}$ with all channels counting at 200 MHz (i.e. the power consumption is $< 23\text{ W}$).

14.2 Cooling

Forced air flow is required for the operation of the SIS3801 board.

14.3 Insertion/Removal

Please note, that the VME standard does not support live insertion (hot swap). Hence crate power has to be turned off for installation and removal of SIS3801 scalars.

The leading pins on the SIS3801 VME64x VME connectors and connected on board circuitry are designed for hot swap in conjunction with a VME64x backplane (a VME64x backplane can be recognised by the 5 row VME connectors, while the standard VME backplane has three row connectors only).

15 Test

The SIS380x scaler series provides the user with a number of test features, which allow for debugging of the unit as well as for overall system setups.

15.1 LED (selftest)

During power up self test and LCA configuration all LEDs except the Ready (R) LED are on. After the initialisation phase is completed, all LEDs except the Ready (R) LED and the Power (P) have to go off. Differing behaviour indicates either a problem with the download of the firmware boot file or one or more LCA and/or the download logic.

15.2 Internal pulser tests

15.2.1 Single Pulse

A single pulse into all channels can be generated with a write to the key address 0x68 if test mode is enabled via the control register. In conjunction with the count enable register more complex count patterns, like increment patterns e.g., can be generated before readout.

15.2.2 25 MHz Pulser

Simultaneous pulsing at 25 MHz into all channels can be used to test the complete readout chain and internal counter logic of the SIS3801. The feature is activated by enabling input test mode and 25 MHz test pulses via the corresponding bits in the control register.

The 25 MHz test pulser gives easy access to your VME CPUs readout timing. By making subsequent reads to the same counter and multiplying the difference in counts with 40 ns you can measure the single word access time.

15.3 Reference pulser channel 1

The reference pulser for channel 1 can be seen rather as a monitoring feature than a test feature. It sets the counting rate of channel 1 to 25 MHz (note, that a simultaneous front panel signal on channel 1 is ignored).

15.4 Signal-Input Priority

If the user happens to enable more than one input option (enable test mode, enable reference pulser, scaler enable) at the same time, the priority is as show in the table below:

Priority	Feature
1	Test mode
2	Reference Pulser (channel 1 only)
3	Front Panel Inputs

Example: If test mode and reference pulser are enabled at the same time, channel one will count test pulses (i.e. will count synchronous with the test pulser).

15.5 FIFO Test

FIFO tests via the VME bus are helpful to debug the FIFO on the SIS38xx in case of spurious data and to debug an overall VME system with driver problems on the CPU side or flaky VME termination e.g.. In FIFO test mode the user can write defined data into the units FIFO via the VME bus and to compare them with the read back result.

FIFO test mode is enabled by setting bit one of the control register and disabled by setting bit 9 of the control register. With FIFO test mode enabled data can be written to the FIFO at the address offset +0x100 (through 0x1FC). Writing to the location with FIFO mode

16 Software Support

VME multiscaler boards are tested at SIS with an OR VP6 VME CPU (Pentium II based) under Windows 95 and a National Instruments CVI user interface. The actual VME C code makes use of the OR Windows 95 DLL, which has straightforward to read and understand routines like:

```
VMEA24StdWriteWord(a32address + KEY_RESET, 0x0);    /* Key Reset */  
rdata = VMEA24StdReadWord(a32address + STAT_REG);
```

In most cases the user setup will be using different hardware, a full fleshed real time operating system like VxWorks, and a different user interface. We still believe, that it is helpful to have a look at the code which is used to test the units and to take it as an example for the implementation of the actual scaler readout application. A floppy with our test software is enclosed with SIS3801 shipments.

Depending on the user feedback and co-operation we expect, that we will have drivers or at least example routines for the commonly used VME CPU operating systems at hand in the mid term.

16.1 Contents of the included Floppy

The Floppy contains a readme.txt file with the most up to date information, the CVI project file and all home made files from the project. The important part of the code for the implementation of your own program is sitting in the CVI call back routines.

17 Appendix

17.1 Address Modifier Overview

Find below the table of address modifiers, which can be used with the SIS360x/38xx (with the corresponding addressing mode enabled).


AM code	Mode
0x3F	A24 supervisory block transfer (BLT)
0x3D	A24 supervisory data access
0x3B	A24 non-privileged block transfer (BLT)
0x39	A24 non-privileged data access
0x2D	A16 supervisory access
0x29	A16 non-privileged access
0x0F	A32 supervisory block transfer (BLT)
0x0D	A32 supervisory data access
0x0B	A32 non-privileged block transfer (BLT)
0x09	A32 non privileged data access
	Future option: CBLT

17.2 Front Panel Layout

The front panel of the SIS3801 is equipped with 8 LEDs, 8 control in- and outputs and 32 counter inputs. On flat cable units (ECL and TTL) the control connector is a 20 pin header flat cable connector and the channel inputs are fed via two 34-pin headers. On LEMO (NIM and TTL) units the control in- and outputs are grouped to one 8 channel block and the counter inputs are grouped into 2 blocks of 16 channels. The units are 4 TE (one VME slot) wide, the front panel is of EMC shielding type. VIPA extractor handles are available on request or can be retrofitted by the user, if he wants to change to a VIPA crate at a later point in time.

In the drawing below you can find the flat cable (left hand side) and Lemo front panel layouts.

Note: Only the aluminium portion without the extractor handle mounting fixtures is shown

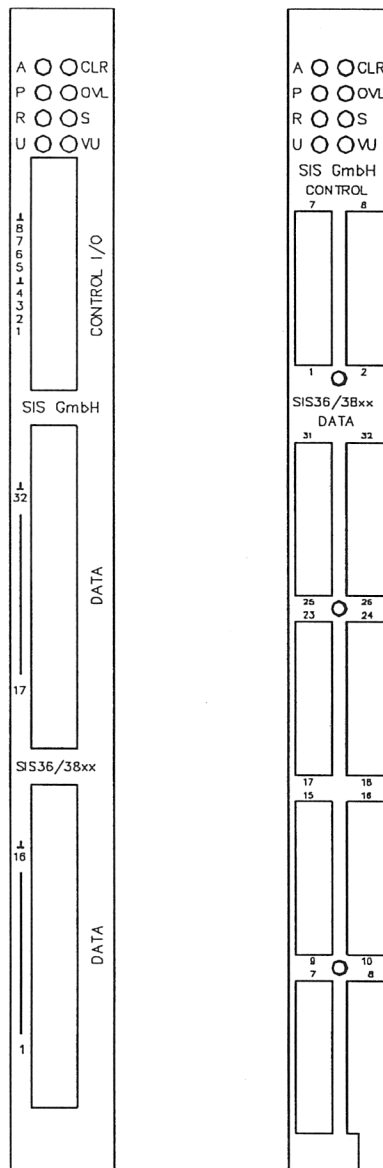

17.3 Flat cable Input/Output Pin Assignments**17.3.1 ECL**

Data-Connector Channel 1-16

PIN	SIGNAL	SIGNAL	PIN
32	IN16 -	IN16 +	31
30	IN15 -	IN15 +	29
28	IN14 -	IN14 +	27
26	IN13 -	IN13 +	25
24	IN12 -	IN12 +	23
22	IN11 -	IN11 +	21
20	IN10 -	IN10 +	19
18	IN9 -	IN9 +	17
16	IN8 -	IN8 +	15
14	IN7 -	IN7 +	13
12	IN6 -	IN6 +	11
10	IN5 -	IN5 +	9
8	IN4 -	IN4 +	7
6	IN3 -	IN3 +	5
4	IN2 -	IN2 +	3
2	IN1 -	IN1 +	1

Front view

INx + = ECL High active
INx - = ECL Low active

Data-Connector Channel 17-32

PIN	SIGNAL	SIGNAL	PIN
32	IN32 -	IN32 +	31
30	IN31 -	IN31 +	29
28	IN30 -	IN30 +	27
26	IN29 -	IN29 +	25
24	IN28 -	IN28 +	23
22	IN27 -	IN27 +	21
20	IN26 -	IN26 +	19
18	IN25 -	IN25 +	17
16	IN24 -	IN24 +	15
14	IN23 -	IN23 +	13
12	IN22 -	IN22 +	11
10	IN21 -	IN21 +	9
8	IN20 -	IN20 +	7
6	IN19 -	IN19 +	5
4	IN18 -	IN18 +	3
2	IN17 -	IN17 +	1

Front view

INx + = ECL High active
INx - = ECL Low active

Control-Connector Input 1-4 /Output 5-8

PIN	SIGNAL	SIGNAL	PIN
20	GND	GND	19
18	OUT8-	OUT8+	17
16	OUT7-	OUT7+	15
14	OUT6-	OUT6+	13
12	OUT5-	OUT5+	11
10	GND	GND	9
8	IN4 -	IN4 +	7
6	IN3 -	IN3 +	5
4	IN2 -	IN2 +	3
2	IN1 -	IN1 +	1

Front view

INx + = ECL High active
INx - = ECL Low active

OUTx + = ECL High active
OUTx - = ECL Low active

17.3.2 TTL

Data-Connector Channel 1-16

PIN	SIGNAL	SIGNAL	PIN
32	IN16 -	GND	31
30	IN15 -	GND	29
28	IN14 -	GND	27
26	IN13 -	GND	25
24	IN12 -	GND	23
22	IN11 -	GND	21
20	IN10 -	GND	19
18	IN9 -	GND	17
16	IN8 -	GND	15
14	IN7 -	GND	13
12	IN6 -	GND	11
10	IN5 -	GND	9
8	IN4 -	GND	7
6	IN3 -	GND	5
4	IN2 -	GND	3
2	IN1 -	GND	1

Front view

Data-Connector Channel 17-32

PIN	SIGNAL	SIGNAL	PIN
32	IN32 -	GND	31
30	IN31 -	GND	29
28	IN30 -	GND	27
26	IN29 -	GND	25
24	IN28 -	GND	23
22	IN27 -	GND	21
20	IN26 -	GND	19
18	IN25 -	GND	17
16	IN24 -	GND	15
14	IN23 -	GND	13
12	IN22 -	GND	11
10	IN21 -	GND	9
8	IN20 -	GND	7
6	IN19 -	GND	5
4	IN18 -	GND	3
2	IN17 -	GND	1

Front view

INx - = TTL Low active (74F245)

INx - = TTL Low active (74F245)

Control-Connector Input 1-4 /Output 5-8

PIN	SIGNAL	SIGNAL	PIN
20	GND	GND	19
18	OUT8-	GND	17
16	OUT7-	GND	15
14	OUT6-	GND	13
12	OUT5-	GND	11
10	GND	GND	9
8	IN4 -	GND	7
6	IN3 -	GND	5
4	IN2 -	GND	3
2	IN1 -	GND	1

Front view

INx - = TTL Low active (74F245)

OUTx - = TTL Low active (74F244)

17.4 List of Jumpers


Find below a list of the jumpers and jumper arrays.

Jumper Name	Array/Single	Function
J101	Single	Input Termination Control Input 1
J102	Single	Input Termination Control Input 2
J103	Single	Input Termination Control Input 3
J104	Single	Input Termination Control Input 4
J105	Single	Input Termination Control Input 5
J106	Single	Input Termination Control Input 6
J107	Single	Input Termination Control Input 7
J108	Single	Input Termination Control Input 8
J115	Single	Level Configuration (not for end user)
J500	Array	Boot File Selection
J520	Single	VME SYSRESET Behaviour
EN_A16	Single	Enable A16 addressing
EN_A24	Single	Enable A24 addressing
EN_A32	Single	Enable A32 addressing
J_A11	Single	Address Bit 11 Selection

17.5 Jumper and rotary switch locations


17.5.1 Addressing mode and base address selection

The EN_A32, EN_A24, EN_A16, A_11 and the 5 rotary switches are located in the middle of the upper section of the board close to the DC/DC converter, the corresponding section of the PCB is shown below.

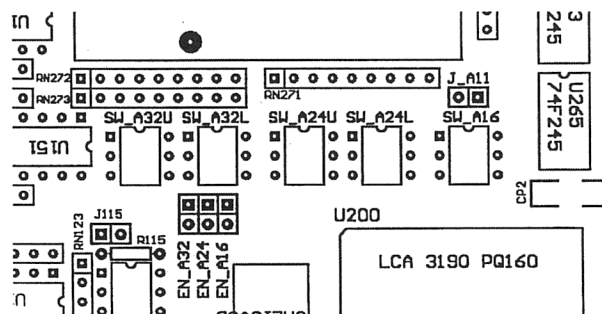


17.5.2 J500 (Bootfile Selection) and J520 (SYSRESET Behaviour)

The jumper array J500 is located between the P1 and the P2 connector. An open position in J500 defines a one (see also chapter 3), the lowest bit is next to the P2 connector.. J520 is located to the left of J500 and closer to the DC-DC converter. With jumper J520 closed the SIS3801 executes a key reset upon the VME SYSRESET signal. The section of the board with the jumper array and the SYSRESET jumper is shown below.

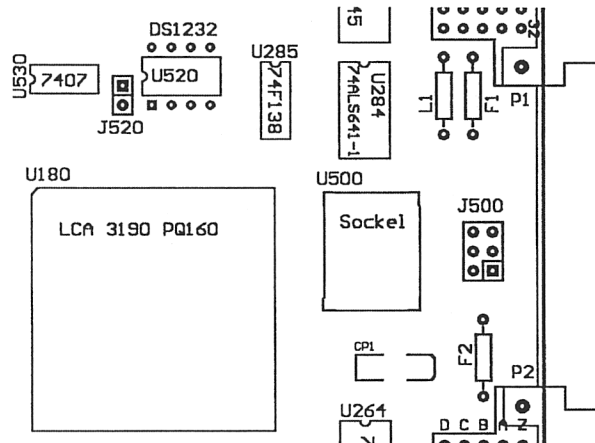

17.6 Board Layout

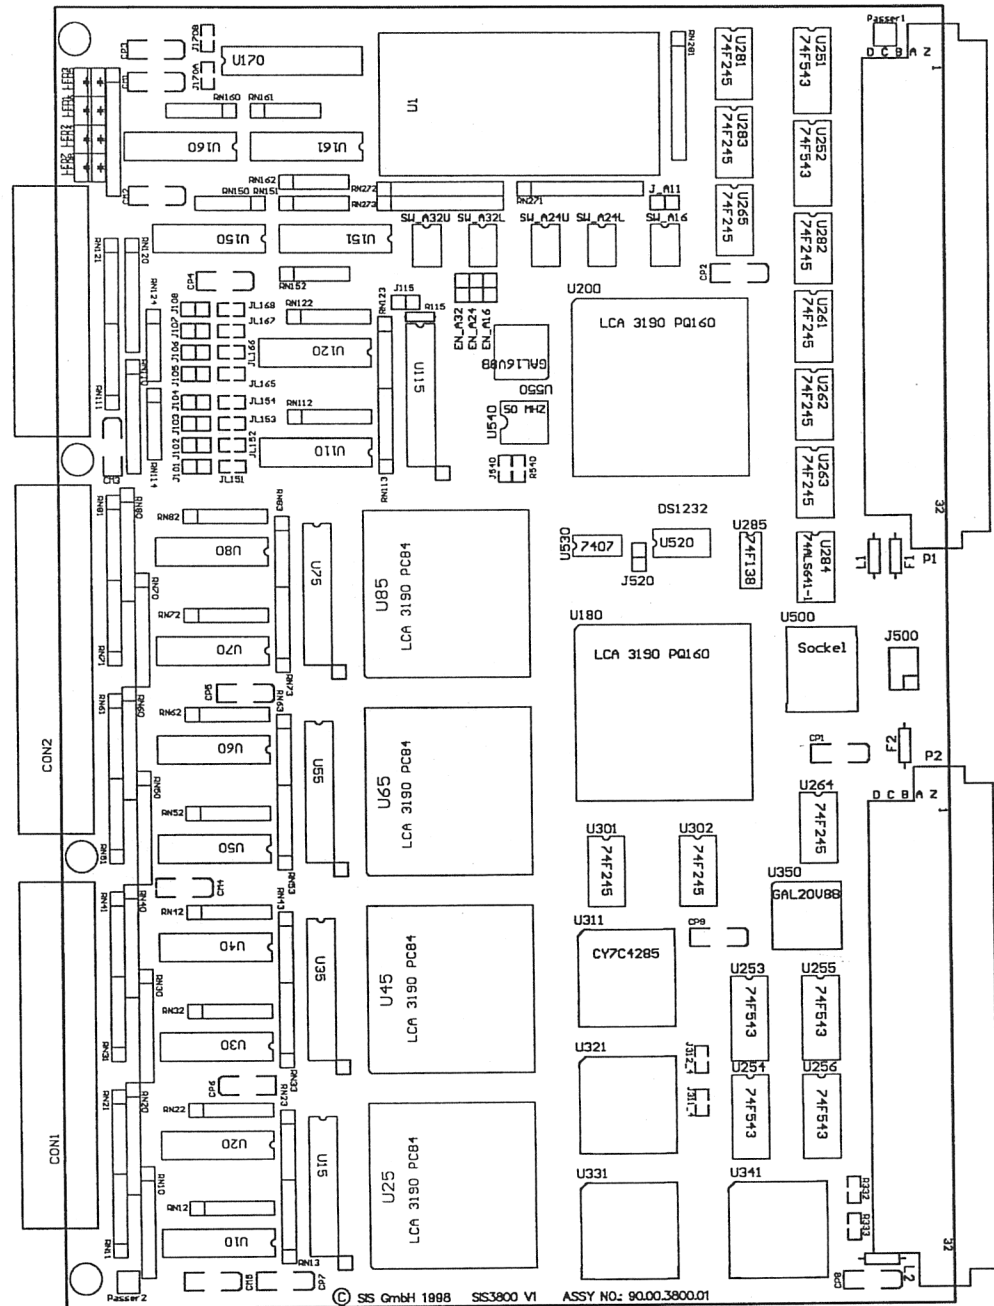

17.7 Cascaded FIFOs

The SIS3801 board can be stuffed with up to four synchronous FIFO chips, the standard unit comes with one FIFO chip (the current V1 board can be stuffed with 4 K, 8 K and 16 K chips, the V2 board will have one 64 K chip as default, i.e. up to a total of 256 K). The FIFO flags are handled by a GAL, which is in the vicinity of the FIFO pads and the actual FIFO flag implementation for cascaded FIFOs will be described here in a later version of the manual.

17.8 FLASHPROM Versions

A list of available FLASHPROMs can be obtained from <http://www.struck.de/sis3638firm.htm>. Please note, that a special hardware configuration may be necessary for the firmware design of interest (the SIS3801 design requires the installation of a FIFO e.g.).

The table on the web is of the format shown below:

SIS36/38xx FLASHPROM table

The table below is an excerpt form the full table, which is on the web, only.

Design Name	Design	Boot File (s)
SIS3800_201098	0	SIS3800 Version 1
SIS3801_201098	0	SIS3800 Version 1
	1	SIS3800 Version 2
	2	SIS3801 Version 1 (32-bit Design)
	3	SIS3801 Version 2 (24-bit Design)
SIS3803_280798	0	SIS3803 Version 1
SIS3801_120199	0	SIS3801 Version 1 (32-bit Design)
	1	SIS3801 Version 2 (24-bit Design)
	2	SIS3801 Version 3 (32-bit Design)
	3	SIS3801 Version 4 (24-bit Design)
	4	SIS3800 Version 2

17.9 Row d and z Pin Assignments

The SIS3801 is prepared for the use with VME64x and VME64xP backplanes. Foreseen features include geographical addressing and live insertion (hot swap). The prepared pins on the d and z rows of the P1 and P2 connectors are listed below.

Position	P1/J1		P2/J2	
	Row z	Row d	Row z	Row d
1		VPC (1)		
2	GND	GND (1)	GND	
3				
4	GND		GND	
5				
6	GND		GND	
7				
8	GND		GND	
9		GAP*		
10	GND	GA0*	GND	
11	RESP*	GA1*		
12	GND		GND	
13		GA2*		
14	GND		GND	
15		GA3*		
16	GND		GND	
17		GA4*		
18	GND		GND	
19				
20	GND		GND	
21				
22	GND		GND	
23				
24	GND		GND	
25				
26	GND		GND	
27				
28	GND		GND	
29				
30	GND		GND	
31		GND (1)		GND (1)
32	GND	VPC (1)	GND	VPC (1)

Note: Pins designated with (1) are so called MFBL (mate first-break last) pins on the installed 160 pin connectors, VPC(1) pins are connected via inductors.

17.10 Geographical Address Pin Assignments

The SIS38xx board series is prepared for geographical addressing via the geographical address pins GA0*, GA1*, GA2*, GA3*, GA4* and GAP*. The address pins are left open or tied to ground by the backplane as listed in the following table:

Slot Number	GAP* Pin	GA4* Pin	GA3* Pin	GA2* Pin	GA1* Pin	GA0* Pin
1	Open	Open	Open	Open	Open	GND
2	Open	Open	Open	Open	GND	Open
3	GND	Open	Open	Open	GND	GND
4	Open	Open	Open	GND	Open	Open
5	GND	Open	Open	GND	Open	GND
6	GND	Open	Open	GND	GND	Open
7	Open	Open	Open	GND	GND	GND
8	Open	Open	GND	Open	Open	Open
9	GND	Open	GND	Open	Open	GND
10	GND	Open	GND	Open	GND	Open
11	Open	Open	GND	Open	GND	GND
12	GND	Open	GND	GND	Open	Open
13	Open	Open	GND	GND	Open	GND
14	Open	Open	GND	GND	GND	Open
15	GND	Open	GND	GND	GND	GND
16	Open	GND	Open	Open	Open	Open
17	GND	GND	Open	Open	Open	GND
18	GND	GND	Open	Open	GND	Open
19	Open	GND	Open	Open	GND	GND
20	GND	GND	Open	GND	Open	Open
21	Open	GND	Open	GND	Open	GND

17.11 Additional Information on VME

The VME bus has become a popular platform for many realtime applications over the last decade. Information on VME can be obtained in printed form, via the web or from newsgroups. Among the sources are the VMEbus handbook, <http://www.vita.com> (the home page of the VME international trade association (VITA)) and comp.bus.arch.vmebus. In addition you will find useful links on many high energy physics labs like CERN or FNAL

18 Index

24-bit mode	19, 22	En_A16	10
25 MHz Pulser	29	EN_A16	14, 36
25 MHz test pulses	17	En_A24	10
32-bit mode	19, 22	EN_A24	14, 36
48-bit	8	En_A32	10
A_11	10, 36	EN_A32	14, 36
A16	10	Factory Default Settings	10
A24	10	FIFO	6, 19
A24 Broadcast Example	20	almost empty	16
A32	10	cascaded	39
A32 Broadcast Example	20	full	16
Address Map	15	half full	16
Address Modifier Overview	32	half full flag	9
address modifiers	32	test mode	16
Address Space	14	firmware	5
addressing		firmware design	10, 18
A16, A24, A32	36	Firmware Design	10
addressing mode	32	Firmware Selection	11
Addressing mode	36	Bootfile	11
addressing modes	14	Examples	11
Addressing	10	FLASHPROM	5, 6, 11
bank	22	FLASHPROM Versions	39
Bank number	22	Floppy	31
Base address	10	FNAL	41
Base Address	14, 36	Front Panel	
BLT	32	LED	13
Board Layout	38	Front Panel Layout	33
Boot File Selection	36	Future Designs	8
Bootfile Selection	37	GA0*	41
Broadcast Addressing	19	GA1*	41
broadcast handshake controller	19	GA2*	41
broadcast mode	17	GA3*	41
broadcast mode handshake controller	17	GA4*	41
broadcast time jitter	19	GAP*	41
CBLT	32	geographical address	
CERN	41	pins	41
channel	22	Geographical Address	41
CIP	8, 16, 26	geographical addressing	40
Connector Specification	25	Getting Started	10
Control and Status register	15	hot swap	28, 40
Control Input	36	http	
Control Input Modes	26	//www.vita.com	41
Control Register	17	Input Configuration	23
Cooling	28	input mode	17
copy disable register	8	Input Priority	29
Copy disable register	19	input test mode	17, 29
copy in progress	8	Insertion/Removal	28
Count Enable	9	interrupt acknowledge cycle	18
custom firmware	6	interrupt condition	21
CVI	31	interrupt control	18
call back routines	31	interrupt level	18, 21
project file	31	interrupt logic	21
D08(O)	18	interrupt vector	18, 21
D16	22	interrupter type	18
D32	22	IRQ source	17
Data Format	22	J_A11	14, 36
DC/DC converter	36	J101-J108	36
design		J115	36
non clearing	8	J500	10, 36, 37
drivers	31	J520	10, 36, 37
dwell time	6, 19	jumper	
Dwell Time	8	firmware selection	11
ECL	23, 34	VME addressing mode	14

Jumper		SW_A32L	10, 14
overview	36	SW_A32U	10, 14
Jumper and rotary switch locations	36	SYSRESET Behaviour	37
key address	15	System Reset	11
LED	13	Technical Properties/Features	6
Access	13	TTL	25, 35
Color	13	user bit	22
Power	13	User Bit	27
Ready	13	User Bit 1	22
user	10	version number	18
live insertion	28, 40	VIPA	28
Module Identification and IRQ control register	15, 18	addressing	5
module number	18	base address	14
monostable	13	extractor handles	5
NIM	24	LED set	5
Operating conditions	28	VITA	41
OR VP6	31	VME	28, 41
PCB	6	addressing mode	14
Pentium II	31	Base Address	14
Pin Assignments	34	CPU	31
polling	9	SYSRESET	37
Power Consumption	28	SYSRESET Behaviour	36
Readout Considerations	9	VME addressing	14
Reference pulser channel 1	29	VME control register	21
rotary switch	36	VME interrupt	9
shadow register	8	VME Interrupts	21
Signal Specification	27	VME IRQ and version register	21
Control	27	VME64x	14, 40
Inputs	27	connector	5
Single Pulse	29	VME64xP	5, 14, 40
Software Support	31	Voltage requirement	28
Status Register	16	VxWorks	31
SW_A16	10, 14	Windows 95	31
SW_A24L	10, 14	Xilinx	7, 8
SW_A24U	10, 14		