
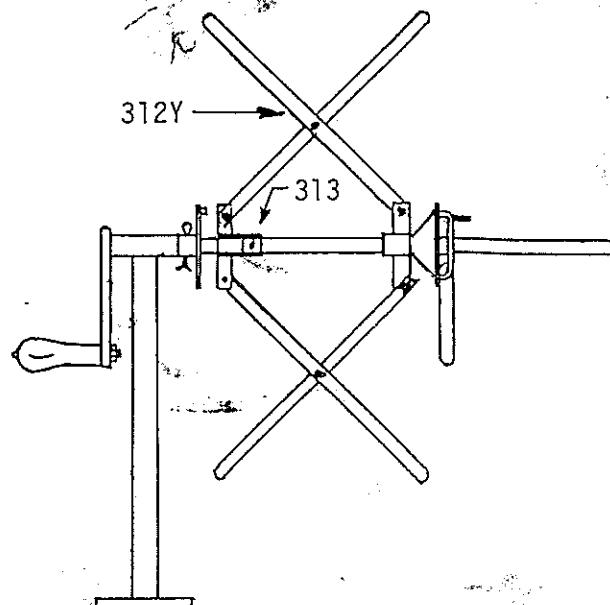


ASSEMBLY INSTRUCTIONS and PARTS LIST
NO. 300 LIGHT DUTY COLLAPSIBLE REEL, SPOOL WINDER and STAND

NO. 318 LIGHT DUTY SPOOL WINDER and STAND
(less 312Y Reel)

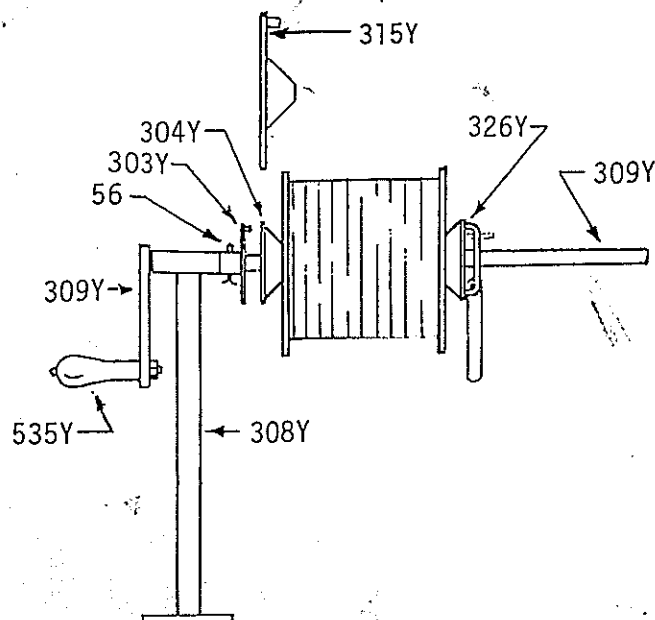


PART NO.	DESCRIPTION	QTY.
56	Cotter Pin, 1/8 x 1", plated	1
303Y	Drive Plate Assembly	1
304Y	Cone; for small spools	1
308Y	Stand	1
309Y	Shaft & Crank Arm	1
312Y	Collapsible Reel Assembly	1
313	Collar, 1/2"	1
315Y	Cone; for larger spools	1
326Y	Locking Cone Assembly	1
535Y	Handle/Pin Assembly	1
	#310 Keps Nut, 10-32	
	#535 Wood Handle	
	#539 Pin	

NOTE: The part of the 309Y Shaft which rides in the sleeve of the 308Y Stand should be lightly lubed periodically to extend life of Shaft.

#600 METER PARTS LIST

- A 601 Side Plate
- B 602 Knurled Wheel
- C 603 Arm
- D 604 Idler Wheel
- E 605 Shaft
- F 606 Spacer
- G 607 Spacer
- H 622 Counter
- *Standard
- *Metric

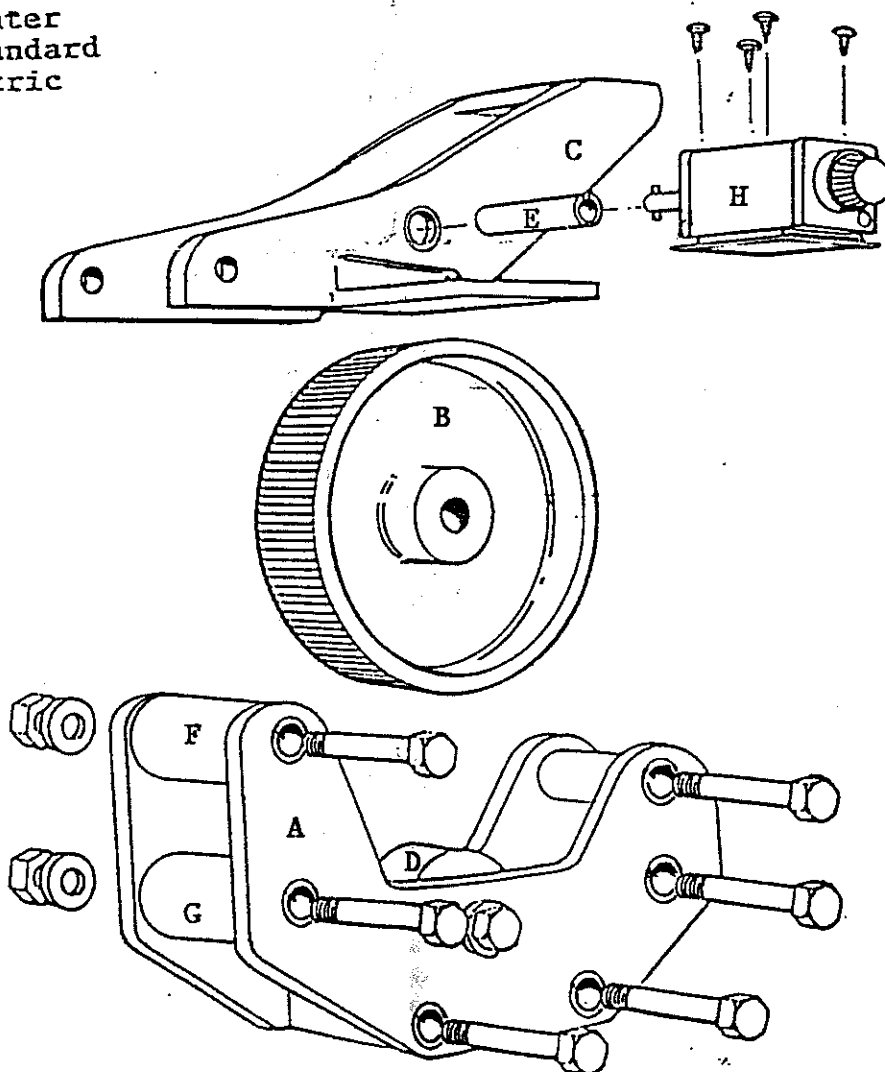

Start with Quality . . . Grow with Quality at

P.O. Box 80709 • 11 C. W. Jones, MI 48080-0709 • (313) 777-4200 • 1-800-289-3626 • Fax (313) 777-7390

