

INSTRUCTIONS FOR THE WAHL A.C. TRIMMER

1. Do not attempt to adjust this Clipper before oiling.
2. For best results put a drop of Wahl Clipper oil, when necessary, **on the blades only**.
3. Due to the high speed of this clipper the correct type of oil must be used. Wahl Clipper Oil is preferred. Do not ever use hair oil, grease or any oil mixed with kerosene or any solvent as the solvent will evaporate and leave the thick gummy oil to slow down the blades. Wahl Clipper Oil is a very thin natural oil which will not evaporate and will not slow down the power.
4. Streaks and missing hair are caused by a gummy sticky surface on the blades, so keep your clipper clean and the blades well oiled.
5. The "power screw" (large plastic screw on opposite side of the power switch) has been reset at the factory. If your voltage is lower, the "power screw" may have to be reset to get maximum power.

To adjust power or stroke turn the power screw in until clipper makes a noise caused by the arm hitting the coil. Then, gradually turn screw out until the clipper runs noiselessly. While the clipper is running, check to make certain that the moving (smaller) blade teeth are covering the stationary (larger) blade teeth.
6. Trimmer blades have very precise hardened, ground, and lapped cutting teeth. **Blades should be handled carefully and never bumped or used to cut dirty or abrasive materials.**
7. **Blades should be sharpened or changed in sets only.** Normal service of the unit does not require disassembly of the clipper unit. If major repair is necessary return the unit directly to the Wahl factory.
8. The cord should not be used to pull the clipper.
9. Freedom of movement needs to be maintained. Care should be used to keep the cord untwisted and unobstructed. When stored the cord should be coiled and the unit placed in its original box.
10. This clipper has been designed for commercial use.


Form No. 1447C

OPERATING INSTRUCTIONS

WAHL®

A C TRIMMER INSTRUCTION BOOKLET

Cat. #
8040
8045
8050

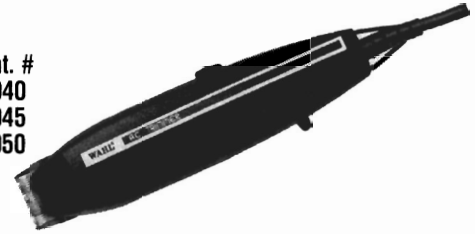

LIMITED WARRANTY

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as a gift, Wahl will at our option repair or replace it and return it to you FREE OF CHARGE. Our warranty does not cover blades which are wear out parts. Please mail your product prepaid to Wahl Clipper Corporation, Sterling, Illinois 61081, Attention: Repair Department, with a note describing the defect and the date of original purchase or receipt as gift (if in warranty). Products out of warranty will be repaired at our standard repair charges.

This warranty is void and no repair or replacement will be made under this warranty or otherwise if:

- 1) The product is modified in any manner.
- 2) The product is repaired by anyone other than Wahl Clipper Corporation.
- 3) The product has been subject to unreasonable use.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty including any warranty of merchantability, which may arise from purchase or use is limited to the one-year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you.

WAHL®

WAHL CLIPPER CORPORATION

2900 Locust Street • Sterling, Illinois 61081 • (815) 625-6525