

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS AND SAFEGUARDS
BEFORE USING THIS APPLIANCE.**

DANGER

To reduce the risk of death or injury by electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet. Note: Some electrical parts inside the appliance are electrically live, even with the switch "off."
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance before cleaning.

For an appliance that has a permanently attached cord:

5. Always unplug this appliance from the electrical outlet immediately after using.

For an appliance that has a rechargeable battery:

6. Always unplug the charger from the electrical outlet immediately after use or after charging the battery.
7. (Rechargeable Unit Only) Unplug the charger before using appliance.

WARNING

To reduce the risk of burns, electrical shock or injury to persons:

1. This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards

involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never operate the appliance with the air openings blocked or while on a soft combustible surface, such as a bed or couch, where air openings may be blocked. Keep the air openings (if any) free from lint, hair or the like.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Never drop or insert any object into any opening.
8. Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly. (See Clipper Maintenance Instructions. May not be applicable for all appliances.)
9. During use, do not place or leave the appliance where it is expected to be subject to damage by an animal, or exposed to weather.
10. To disconnect, turn all controls to "OFF," then remove plug or charger from outlet.
11. Turn all controls to "OFF" before placing on or removing blades or attachments.
12. An appliance with a permanently attached cord should never be left unattended when plugged in.
13. Keep this appliance dry.

For an appliance that has a rechargeable battery:

14. Do not crush, disassemble, heat above 100°C (212°F), or incinerate the appliance, due to risk of fire, explosion, or burns.
15. Use only the charger supplied by the manufacturer to recharge.
16. This charger is intended to be correctly orientated in a vertical or floor mount position.
17. Always attach plug to appliance first, then to outlet.

SAVE THESE INSTRUCTIONS For Household Use Only

For Alkaline Battery Units:

1. When discarding an old battery, do not throw it into fire where heat could cause it to rupture or explode. Also, do not attempt to recharge alkaline, heavy-duty, or lithium batteries in a battery charger. Dispose batteries properly.
2. Risk of fire and burns. Do not recharge, disassemble, or incinerate. Keep battery out of reach of children. Dispose of used batteries promptly.