Carries All TM

2 N 1 UNIVERSAL BASKET RACK™

Golf Cart Assembly

Model 200


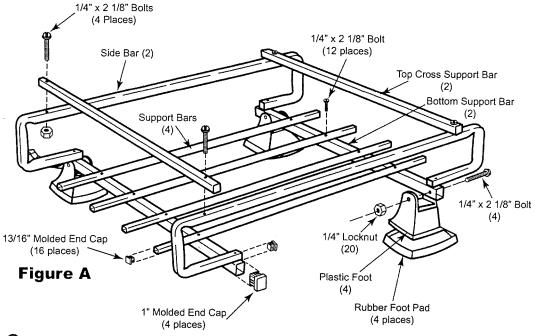




Figure B

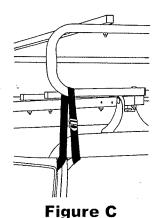

Golf Cart Assembly Instructions and Diagrams

- 1. Insert the 20 molded End Caps into open ends of the tubes. Use small light rubber or metal hammer. Tap lightly to seat the end caps.
- 2. Tighten the nuts and bolts so they are snug. If to tight the rack will not fold easily for storage.
- 3. Attach the two Side Bars to the two 1" Bottom Support Bars. See Figure A.
- 4. Attach the four 3/4" Support Bars to the Bottom Support Bars. See Figure A.
- 5. Attach the two Top Cross Support Bars to the two Side Bars. See Figure A.
- 6. Place rack on the Golf Cart Top and locate the best mounting holes for each Foot allowing them to rest flat on the Roof Top at the widest point.
- 7. Remove Rack from Top, and attach the four plastic Feet with the angle side outwards. See Figure A.
- 8. Clean the roof surface area where each Foot Pad will rest. Next, place a Rubber Foot Pad onto the bottom of each Foot Support, and place the rack onto the Cart Top and center.
- Loop strap around the far ends of the four Sidebars of the rack, and then around the Cart Top Support Bracket keeping the Buckle near the Side Bar. See Figure C. Careful not to twist strap.
- 10. Thread end of strap through the Double Buckle. See Figure B.
- 11. Alternately tighten each strap until rack is secure to the top. The Rack should not move in any direction when secured properly!

SAFETY PRECAUTION RECOMMENDATION

After traveling a short distance, stop and check to see that all the straps are secure.

WARNING

Golf Cart Tops cargo not to exceed distributed weight of 50 lbs. Coolers not recommended.

The attachment of this product is extremely important and beyond the control of $CarriesAll^{TM}$ Corporation. Carries All^{TM} is not in any way responsible for or neither guarantees, or will it be liable for any damage resulting from the assembly, its attachment or the installation, or improper use. The complete liability of this product is limited to its purchase price if it proves to be defective in material and/ or workmanship.


For Additional Products and Information • Patent Pending

Carries All TM

2 N 1 UNIVERSAL BASKET RACK™

Automobile Assembly

Model 100

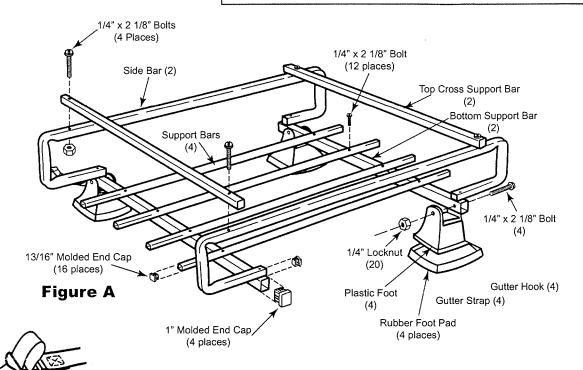



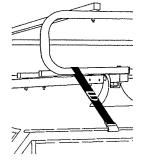


Figure C

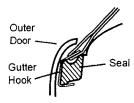


Figure D

Automobile Assembly Instructions and Diagrams

- 1. Insert the 20 molded End Caps into open ends of the tubes. Use small light rubber or metal hammer. Tap lightly to seat the end caps.
- 2. Tighten the nuts and bolts so they are snug. If to tight the rack will not fold easily for storage.
- 3. Attach the two Side Bars to the two 1" Bottom Support Bars. See Figure A.
- 4. Attach the two Top Cross Bars to the two Sidebars. See Figure A.
- 5. Attach the four 3/4" Support Bars to the Bottom Support Bars. See Figure A.

Note: This Rack comes with 3 different sets of auto gutter hooks for attaching the Rack to your vehicle's roof. Carefully select the set of hooks that best fits your vehicle. See Figure C and D for example.

- 6. Thread end of strap through the front of the Side Bar, and selected Gutter Hook as shown in Figure C or D. Thread the Strap through the Double Buckle as shown in Figure B.
- 7. Attach Plastic Feet to the Bottom Bars making sure the Foot with the angle side outerwards and using the holes closest to the outside. See Figure A.
- 8. Alternately tighten each strap until rack is secure to the Top. The Rack should not move in any direction when secured properly!

SAFETY PRECAUTION RECOMMENDATION

After traveling a short distance, stop and check to see that all the straps are secure.

WARNING

Automobile cargo not to exceed distributed weight of 150 lbs.

The attachment of this product is extremely important and beyond the control of CarriesAll™ Corporation. CarriesAll™ is not in any way responsible for or neither guarantees, or will it be liable for any damage resulting from the assembly, its attachment or the installation, or improper use. The complete liability of this product is limited to its purchase price if it proves to be defective in material and/ or workmanship.


For Additional Products and Information • Patent Pending



2 N 1 UNIVERSAL BASKET RACK™

Automobile Assembly

Model 100 - Parts Diagram

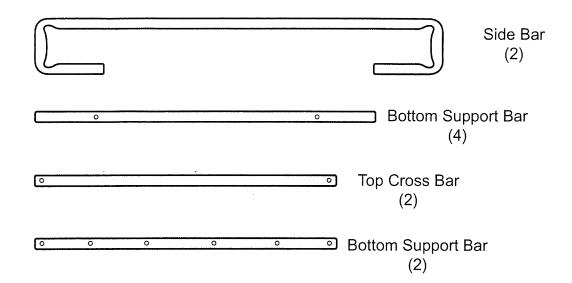



1" Molded End Cap (4)




13/16" Molded End Cap (16)



1/4" x 2-1/8" Bolt (20)




1/4" Lock Nut (20)

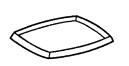

Rubber Foot Pad (4)



Plastic Foot (4)



Straps (4)

CarriesAll [™] Corporation For Additional Products & Information Patent Pending

> P.O. Box 7035 Myrtle Beach, S.C. 29572 843.839.2929 www.carriesall.com







Gutter Hooks (4 each)


Gutter Hooks for Automobile Use Only




2 N 1 UNIVERSAL BASKET RACK™

Golf Cart Assembly

Model 200 - Parts Diagram

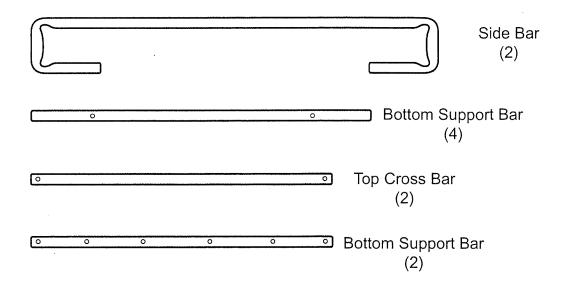






13/16" Molded End Cap (16)



1/4" x 2-1/8" Bolt (20)



1/4" Lock Nut (20)

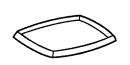

Rubber Foot Pad (4)



Plastic Foot (4)



Straps (4)

CarriesAll [™] Corporation

For Additional Products & Information • Patent Pending
Post Office Box 7035 • Myrtle Beach, South Carolina 29572
843.839.2929 • www.carriesall.com