



© 2004 Americair Corporation, Mississauga, Ontario, Canada

AIR CLEANERS/ FILTERS

AMAIRCARE HEPA BYPASS AIR FILTRATION SYSTEM

HOMEOWNERS MANUAL & DEALER INSTALLATION INSTRUCTIONS FOR MODELS AWW-350, AWW-675, 8500 & 10000

Rules for Safe Installation and Operation

READ AND SAVE THESE INSTRUCTIONS!

Please read instructions before installing and using the HEPA Bypass Air Filtration System (HEPA system). This will help you obtain the full benefit of the HEPA system you have selected. It will also help you to avoid needless service costs.

1. Read this manual carefully. Failure to follow these rules and instructions could cause a malfunction of the air filter or unsatisfactory service and could void your warranty.
2. Follow a regular service and maintenance schedule to ensure efficient operation.
3. For safety and optimized performance of your HEPA system, all installation and maintenance must be performed by a professional heating and ventilation contractor. The installer should be made aware of your indoor air quality situation and be familiar with your heating, ventilation and air conditioning equipment.
4. High particulate distribution may occur during initial start-up of this product after installation or after scheduled filter changes. Individuals who are highly sensitive to airborne particulates should not be in the building and allow 24 hours of operation for removal of particulates from occupied spaces before re-entry.

⚠ WARNING

Risk of property damage, injury or death.

Installation, adjustments, alterations, service and maintenance must be performed by a qualified technician.

⚠ WARNING

Risk of Carbon Monoxide Poisoning.

Can cause injury or death.

Do not operate equipment without access panel in place. Operation of this equipment without all access panels in place may cause gas fumes from the heating system to be drawn into occupied spaces.

Shipping and Packing List

Package 1 of 1 contains:

- 1 - HEPA System
- 1 - Complete Filter Set (Packed inside Unit)
- 1 - Installation Instructions (this manual)
- 1 - Registration Card
- 1 - Filter Changes Reminder Label
- 4 - Self Adhesive Rubber Feet (AWW Models only)

HEPA System Models

Model Airwash Whisper-350 (AWW-350) is designed to filter air up to a rate of 350 cfm.

Model Airwash Whisper-675 (AWW-675) is designed to filter air up to a rate of 675 cfm.

Model 8500 is designed to filter air up to a rate of 850 cfm.

Model 10000 is designed to filter air up to a rate of 1000 cfm.



⚠ WARNING

Electrical Shock Hazard.

Can cause injury or death.

Disconnect all electrical power supplies before servicing.

Do not operate equipment without access panels in place

Table of Contents

Rules for Safe Installation and Operation	1	Operation	11
Shipping and Packing List.....	1	Maintenance	12
Specifications	2	Filter Change Schedule	12
Introduction	2	Filter Changing Guidelines	12
General Information.....	3	Dealer Filter Change Instructions	13-14
Product Application Guidelines	3	Dealer Motor Assembly Replacement Instructions	15
Parts Identification	4-5	Electrical Diagrams	16-17
Physical Dimensions of Units	6-7	Replacement Parts	18
Dealer Installation Instructions	8-10		

Specifications

	AWW-350	AWW-675	8500	10000
Nom. Air Flow @ 120VAC @ 0.0" E.S.P.	350 cfm	675 cfm	850 cfm	1000 cfm
Weight (max - unpackaged)	30 lbs.	33 lbs.	125 lbs.	130 lbs.
Supply Voltage	120 VAC	120 VAC	120 VAC	120 VAC
Nom. Measured Power Consumption	125 Watts	225 Watts	360 Watts	600 Watts
Motor Current Draw - Total	1.0 amps	1.8 amps	3.6 amps	4.8 amps
Air Intake Collar (max)	8"-round	10"-round	10"x12"	10"x12"
Air Outflow Collar (max)	6"-round	8"-round	10"x12"	10"x12"
Operating Temp. Range - Return air (°F)	30 to 95	30 to 95	30 to 95	30 to 95

HEPA filter efficiency = 99.97% @ 0.3 micron particles
Ambient temperature range: -40°F to 130°F

For 220 VAC Units (only sold outside N. America)

Nom. Measured Power Consumption	75 Watts	150 Watts	255 Watts	300 Watts
Motor Current Draw - Total	.34 amps	.7 amps	2.0 amps	1.2 amps

Introduction

Congratulations! You will quickly realize that you have purchased a very effective air cleaning system. It incorporates state of the art HEPA (High Efficiency Particulate Air) technology.

Your Amaircare HEPA system comes with a limited warranty. With proper attention to its care and maintenance, you will receive optimum performance.

If your indoor air has abnormally high concentrations of particulates, the life span of the filter media may be shortened. Excessive particulates in the air will reduce the expected life of the HEPA filter. Under normal conditions the HEPA filter will last from two to five years.

The optional activated carbon canister has a finite limit as to the amount of odor or other gaseous volatile organic compounds (V.O.C.'s) that it can adsorb. The higher the concentrations, the shorter the expected life. Higher humidity may shorten the life of the carbon canister. Under normal conditions, the carbon canister should last up to 12 months.

Initially, the HEPA filter's particulate removal efficiency improves with use. However, the air flow through the HEPA filter media will decrease, as dust builds up on the filter, thus lowering its ability to circulate and clean as much air as when it was new. If the air flow through your unit is noticeably reduced, you can inspect the pre-filter and HEPA filter to see if they should be replaced. Replacement (or washing if foam) of the pre-filter every 3 months will help extend the life of the HEPA filter.

Please contact your local Amaircare dealer regarding replacement of filter media, warranty information or if you have any questions or concerns about the performance of your HEPA system.

NOTE: This filtration system is an ADDITIONAL filter, and does NOT replace the existing air handler/furnace system filter.

General Information

Media Filters

Media filters strain particulates from the air. The filter media needs to have tiny holes to allow air to pass through, but not particulates. Filter types vary for all sorts of purposes. The most effective and proven filter media is HEPA. HEPA filter media is 99.97% efficient at capturing particles which are 0.3 micron in size or larger.

Carbon Filters

Carbon media is used to capture chemicals and odors, also referred to as V.O.C.'s. Chemicals and odors cannot be captured with media type filters. Activated carbon collects chemicals and odors in a process called adsorption. If air passes through the carbon filter before particulates are removed, the surface of the carbon quickly gets covered with particulates, rendering it ineffective at capturing chemicals and odors. If particulates are removed from the air with a HEPA filter, virtually the entire surface area of the carbon can be used to capture chemicals and odors. This increases the efficiency and filter life of the carbon filter.

Separate HEPA and Carbon Filters

HEPA and carbon filters have different life spans. It is important for a filtration system to keep the filter components independent from each other, so that the filter

that is dirty/saturated can be changed. This is more economical than a system where you need to throw out two or three filters when only one needs changing.

The HEPA System's 3 Stage Filtration Process

The 3 stage filtration process is used to create a very effective filtration system. Each filter is independent and can be changed individually.

- **Stage 1:** Pre-filter - The inexpensive pre-filter (foam or carbon) removes larger particulates from the air, thus prolonging the life of the HEPA filter.
- **Stage 2:** HEPA - The HEPA filter removes 99.97% of particulates 0.3 micron and larger. The cleaned air then passes through the third stage filter.
- **Stage 3:** Carbon - The carbon filter is about 1/2 an inch thick to give it plenty of surface area for removing chemicals and odors from the air. This filter may be replaced by an optional heavy duty granular carbon canister available for maximum removal of chemicals and odors. The clean air is then reintroduced into the air you breathe.

Product Application Guidelines

Size of House vs. Air Changes per Hour

Model Unit	Size of House*							
	1,000 ft ² (8,000 ft ³)	1,200 ft ² (9,600 ft ³)	1,500 ft ² (12,00 ft ³)	1,800 ft ² (14,400 ft ³)	2,000 ft ² (16,000 ft ³)	2,500 ft ² (20,000 ft ³)	3,000 ft ² (24,000 ft ³)	3,500 ft ² (28,000 ft ³)
Model AWW-350	2.4	2.0	1.6	1.4	1.2	1.0	0.8	0.7
Model AWW-675	5.0	4.2	3.4	2.8	2.5	2.0	1.7	1.5
Model 8500	6.38	5.31	4.25	3.54	3.19	2.55	2.13	1.82
Model 10000	7.5	6.25	5	4.17	3.75	3	2.5	2.14

* Chart based on homes with 8 ft. ceilings.

Notes:

- Industry experience indicates that one (1) air change per hour generally provides adequate air cleaning. Actual results will depend on multiple factors such as outdoor particulate levels, infiltration rate, indoor activities etc.
- Generally speaking, the more air changes per hour provided, the more effective a HEPA system will be. People with sensitivities may desire a higher number of air changes per hour for cleaner air.

Parts Identification AWW-350 & AWW-675

Cabinet Parts

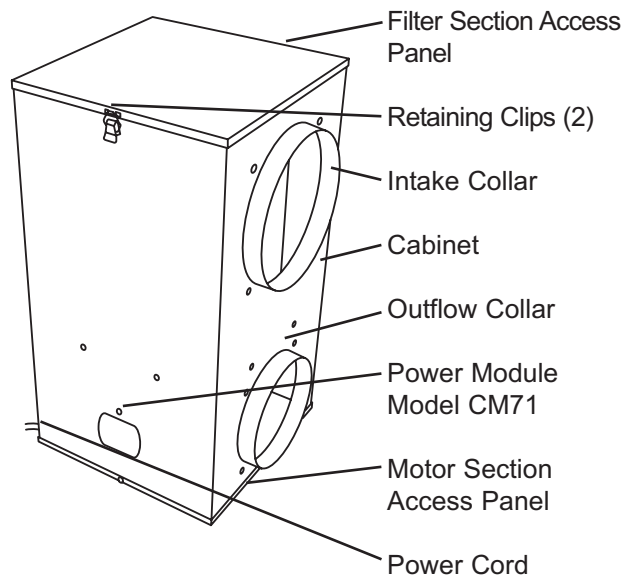


figure 1.

Inside Cabinet (Filter Section)

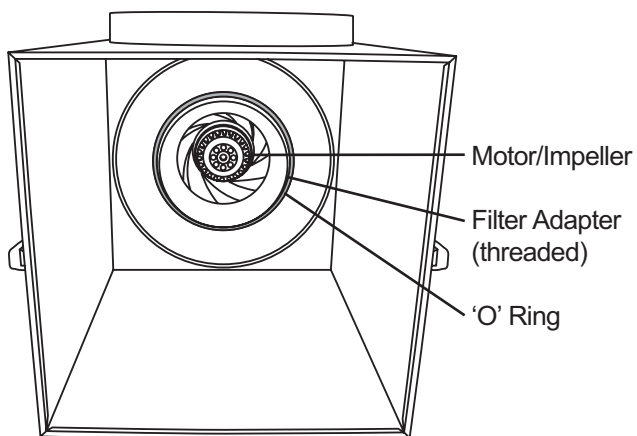


figure 2.

Parts Identification 8500 & 10000

Cabinet Parts

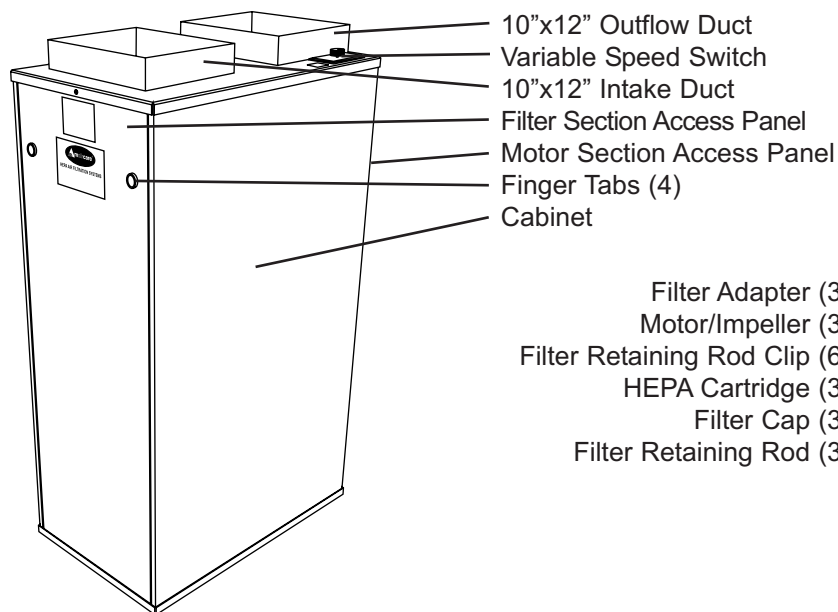


figure 3.

Inside Cabinet (Filter Section)

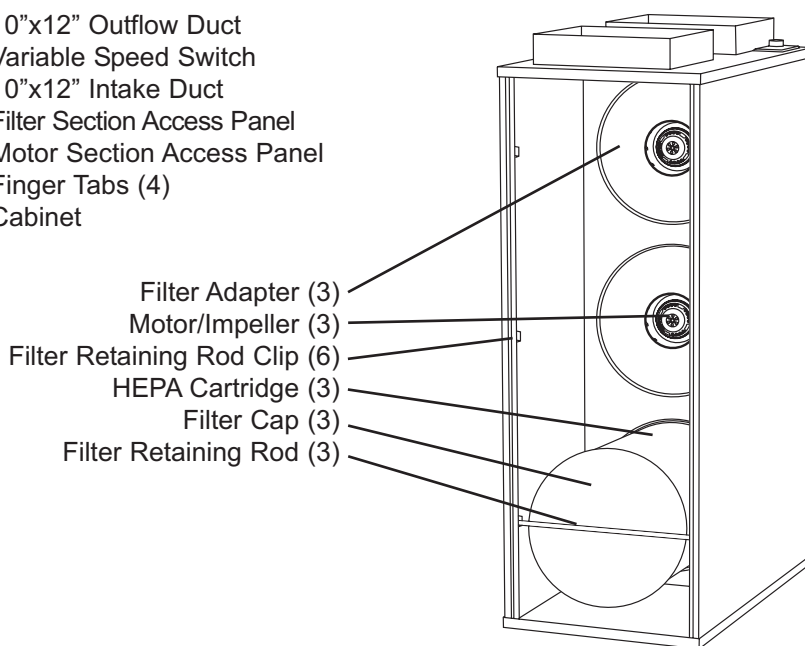


figure 4.

Filter Parts Identification

HEPA Cartridge Parts - AWW-350 & AWW-675

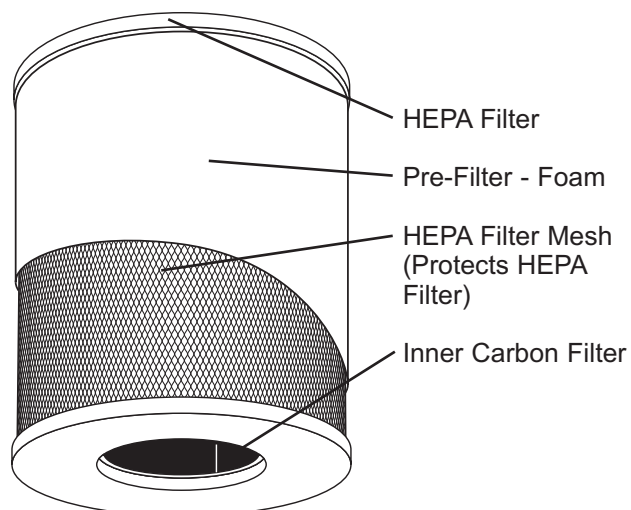


figure 5.

Optional Carbon Canister - AWW-350 & AWW-675

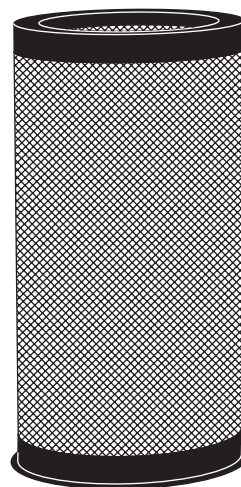


figure 6.

For third stage increased removal of chemicals and odors.

Located inside the HEPA filter.

Discard inner carbon filter when using the optional carbon canister.

HEPA Cartridge Parts - 8500 & 10000

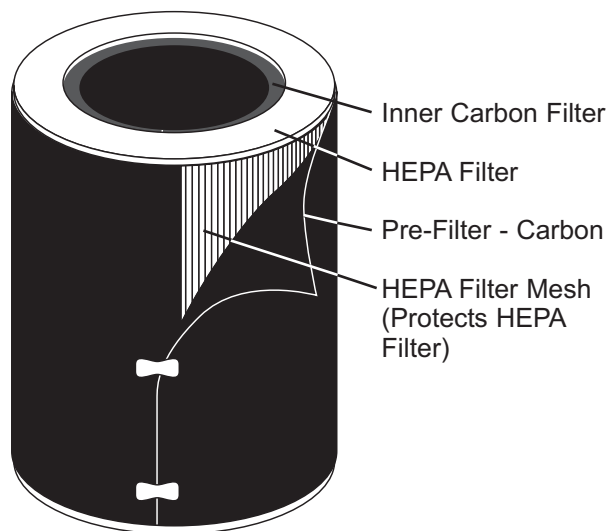


figure 7.

Optional Carbon Canister - 8500 & 10000

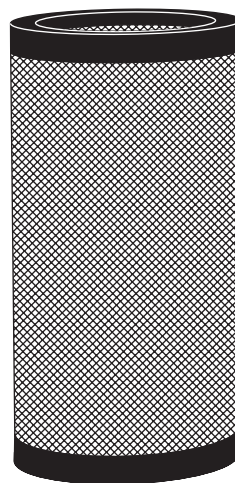


figure 8.

For third stage increased removal of chemicals and odors.

Located inside the HEPA filter.

Discard inner carbon filter when using the optional carbon canister.

Physical Dimensions of Unit

Model AWW-350 & AWW-675:

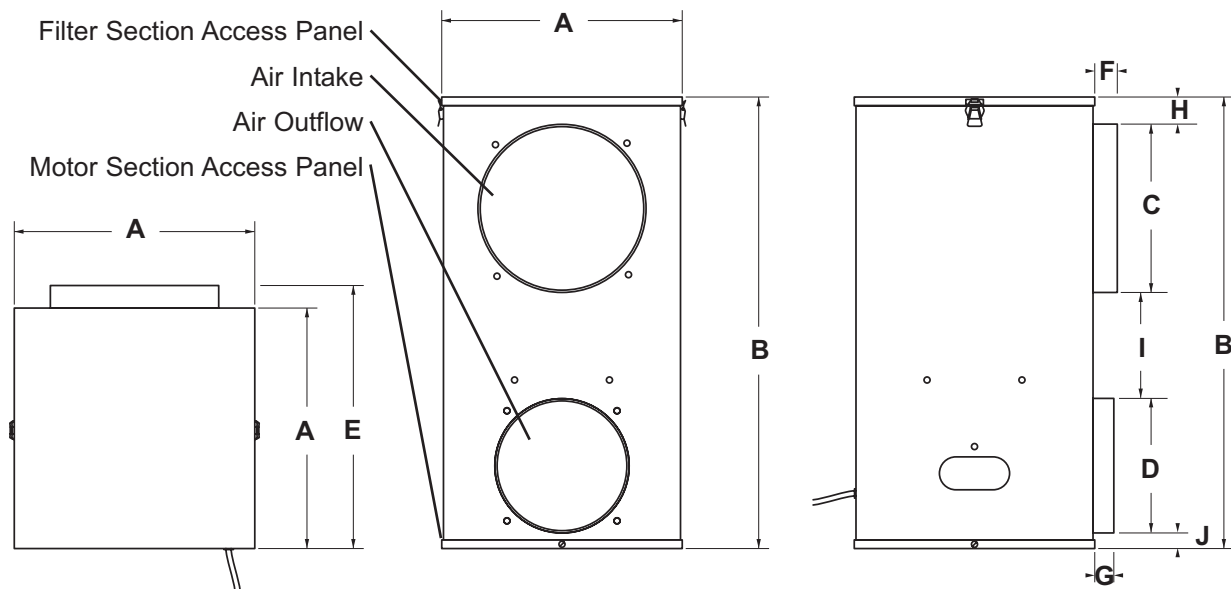


figure 9.

MODEL NO.	A	B	C	D	E	F	G	H	I	J
Model AWW-350	14.5 (368)	27.25 (692)	7.875 (200)	5.875 (149)	16 (406)	1.25 (32)	1.25 (32)	3 (76)	8.5 (216)	2 (51)
Model AWW-675	14.5 (368)	27.25 (692)	9.875 (251)	7.875 (200)	16 (406)	1.25 (32)	1.25 (32)	2 (51)	6.5 (165)	1 (25)

Dimensions in inches (mm)

Physical Dimensions of Unit

Models 8500 & 10000:

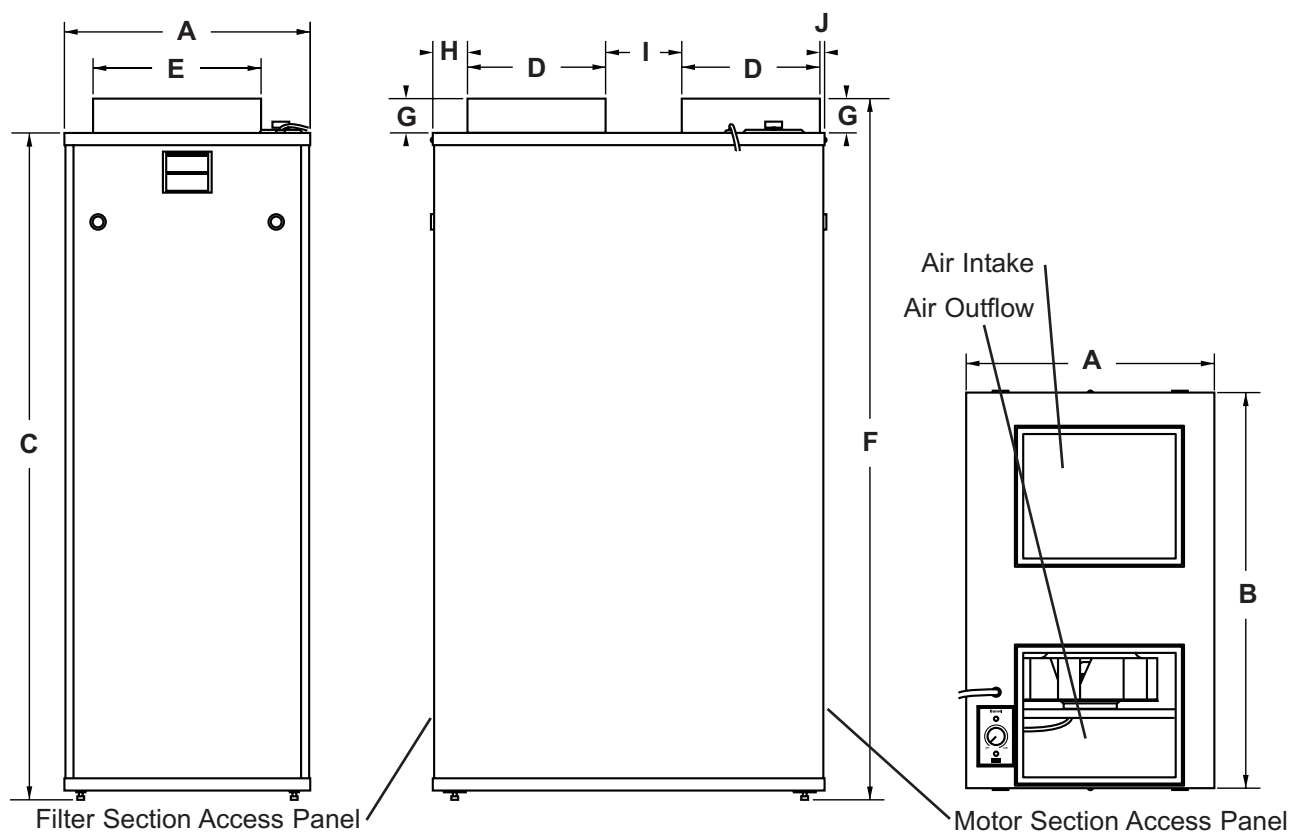


figure 10.

MODEL NO.	A	B	C	D	E	F	G	H	I	J
Models 8500 & 10000	17.25	28	47.75	10	12	50.25	2.5	2.6	5.3	0.1
	(438)	(711)	(1213)	(254)	(254)	(1276)	(64)	(66)	(135)	(3)

Dimensions in inches (mm)

Dealer Installation Instructions

Forced air handler/furnace systems:

The HEPA system should be installed as a bypass system, with part of the return ducted into the HEPA system. The filtered air is then rerouted back into the return air, and continues through the system to be heated/cooled.

Typical Return to Return Application

For homes with upflow forced air handler/furnace systems. (Air handler/furnace is shown in a typical basement. See Figure 6.)

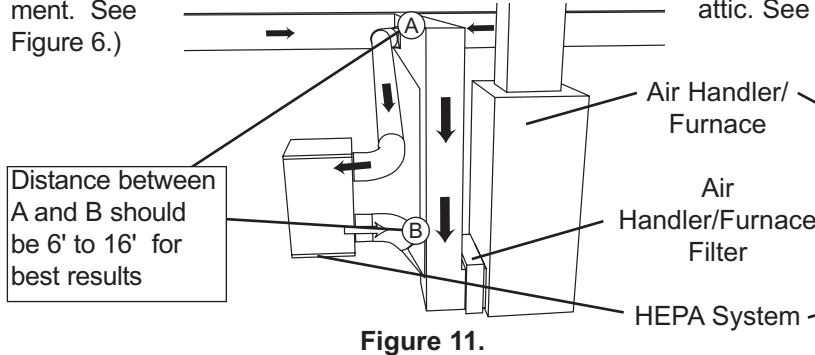


Figure 11.

Typical Return to Return Application

For homes with horizontal forced air handler/furnace systems. (Air handler/furnace is shown in an typical attic. See figure 7.)

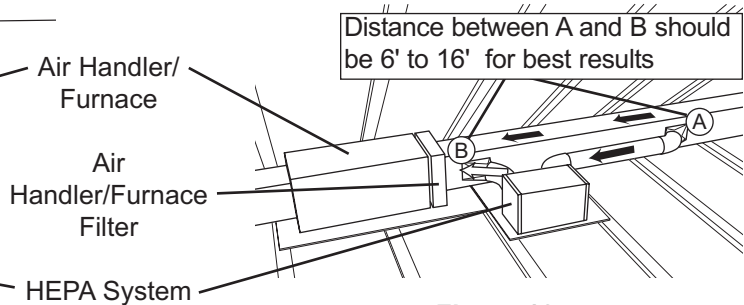


Figure 12.

NOTE: This filtration system is an **ADDITIONAL** filter, and does **NOT** replace the existing air handler/furnace system filter.

Preparation:

Here are some things to consider as you decide where to install the HEPA system.

Location:

- Make sure there is room to open the HEPA filter access panel for filter changes/inspections.
- Keep the HEPA system in a location where you can still access the air handler/furnace filter.
- Keep the HEPA system away from possible water damage.
- Vibration pads will reduce vibration for installations where the unit is placed on the floor.
- Install HEPA System on floor or suspended platform. If the unit is suspended, screws must not penetrate through the cabinet. Make sure that you have the proper chains/straps/joists and equipment to keep unit secure.

Intake (Marked as 'Air In' on unit):

- Intake ducts should be installed upstream of any humidifiers and be installed on the main return.
- Intake duct should be installed at least 6 ft. away from the outflow duct on the main return.

Outflow (Marked as 'Clean Air Out' on unit):

- Outflow duct should be installed as close to the air handler/furnace inlet as possible but not directly into the return air elbow of the main return.
- If the unit is being installed independently of any other system, room diffusers are recommended to help distribute airflow evenly in the occupied space.

Ducting:

- If HEPA system is installed where inlet and outflow collars face down, metal elbows must be connected to both inlet and outflow collars.
- Each connection must be sealed with aluminum tape or mastic, including all take offs.
- Installed duct runs should be as straight as possi-

ble (if the duct runs are too long, reduced CFM may result).

- If duct is exposed to unconditioned air, externally insulated flex duct is highly recommended.
- Externally insulated flex duct can also be used for noise reduction purposes.
- For best indoor air quality, do not use ductboard or fiberglass inside of ducts.

Electricity:

- The unit must be plugged into a grounded 120V, 60Hz outlet.

Required Materials for Installation of Unit:

Items for AWW-350

Flex or rigid duct (length as required)	8" round & 6" round
Takeoffs	One 8" & One 6"

Items for AWW-675

Flex or rigid duct (length as required)	10" round & 8" round
Takeoffs	One 10" & One 8"

Items for 8500 & 10000

Flex or rigid duct (length as required)	10" x 12"
Takeoffs	Two 10"x12"

All Models

Aluminum tape or mastic as required
Misc. hanging materials - field provided

NOTE: Be sure to review 'Rules for Safe Installation and Operation' on page 1 of this document before start-up of this unit.

Dealer Installation Instructions

Forced air handler/furnace system with an HRV/ERV

This application provides filtration of all Outdoor Air (OA) that is brought into the home through the HRV/ERV, thus reducing the introduction of dust, pollen and mold from the outdoor air. For systems that have HRV/ERV units installed, we recommend ducting the 'fresh air' outflow from the HRV/ERV into the HEPA system. If the HRV/ERV CFM (cubic feet per minute) rating is lower than that of the HEPA system, an additional return needs to be installed into the HEPA system (See figure 8.) The outflow air from the HEPA system then needs to be installed into the main return of the air handler/furnace system. Ensure that you follow the proper installation instructions as outlined in the HRV/ERV Installation manual(s).

Preparation:

Here are some things to consider as you decide where to install the HEPA system with an HRV/ERV.

Location:

- Make sure there is room to open the HEPA filter access panel for filter changes/inspections.
- Keep the HEPA system in a location where you can still access the air handler/furnace filter.
- Keep the HEPA system away from possible water damage
- Vibration pads will reduce vibration for installations where the unit is placed on the floor.
- Install HEPA System on floor or suspended platform. If the unit is suspended, screws must not penetrate through the cabinet. Make sure that you have the proper chains/straps/joists and equipment to keep unit secure.

Intake (Marked as 'Air In' on unit):

- Most HRV/ERV systems will not move as much air as the HEPA system. For these systems, install an additional return from another treated air source into the HEPA system.
- If using an additional return duct, it should be installed upstream of any humidifiers. The fresh air outflow of the HRV/ERV should be "Y" connected to the additional return duct then connected to the inlet of the HEPA system.
- The additional return duct (if any) should be installed at least 6 ft. away from the outflow duct on the main return.
- Duct both the HRV/ERV and the additional return into the intake of the HEPA system.

Outflow (Marked as 'Clean Air Out' on unit):

- Outflow duct should be installed as close to the air handler/furnace inlet as possible but not directly into the return air elbow of the main return.

Ducting:

- If HEPA system is installed where inlet and outflow collars face down, metal elbows must be connected to both inlet and outflow collars.
- Each connection must be sealed with aluminum tape or mastic, including all take offs.
- Installed duct runs should be as straight as possible (if the duct runs are too long, reduced CFM may result).

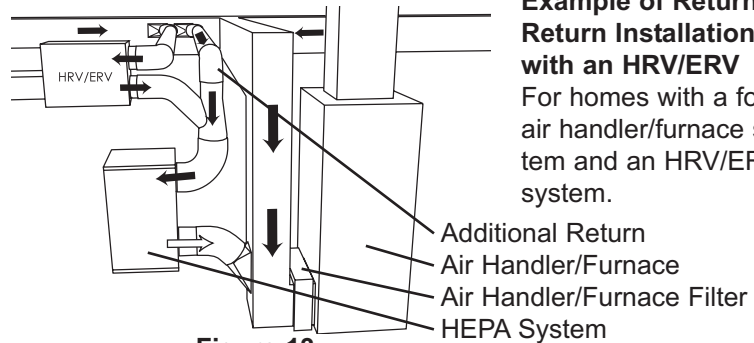


Figure 13.

Example of Return to Return Installation with an HRV/ERV

For homes with a forced air handler/furnace system and an HRV/ERV system.

NOTE: This filtration system is an **ADDITIONAL** filter, and does **NOT** replace the existing air handler/furnace system filter.

- If duct is exposed to unconditioned air, externally insulated flex duct is highly recommended.
- Externally insulated flex duct can also be used for noise reduction purposes.
- For best indoor air quality, do not use ductboard or fiberglass inside of ducts.

Electricity:

- The unit must be plugged into a grounded 120V, 60Hz outlet.

Required Materials for Installation of Unit:

Items for AWW-350

Flex or rigid duct (length as required)	8" round & 6" round
Takeoffs	One 8" & One 6"

Items for AWW-675

Flex or rigid duct (length as required)	10" round & 8" round
Takeoffs	One 10" & One 8"

Items for 8500 & 10000

Flex or rigid duct (length as required)	12" round or 10" x 12"
Takeoffs	Two 10"x12"

All Models

Aluminum tape or mastic as required
Misc. hanging materials - field provided

NOTE: Be sure to review 'Rules for Safe Installation and Operation' on page 1 of this document before start-up of this unit.

Dealer Installation Instructions

Independent Operation:

The HEPA systems can be used independently of any other equipment! The intake and outflow of the filtration system can be ducted into the same room to create a cleaner environment almost anywhere. The intake or outflow can also be ducted elsewhere. The intake and outflow should be installed on opposite sides of the room; however, this varies according to your specific needs.

Preparation:

Here are some things to consider as you decide where to install the HEPA system independently of other systems.

Location:

- Make sure there is room to open the HEPA filter access panel for filter changes/inspections.
- Keep the HEPA system away from possible water damage
- Vibration pads will reduce vibration for installations where the unit is placed on the floor.
- Install HEPA System on floor or suspended platform. If the unit is suspended, screws must not penetrate through the cabinet. Make sure that you have the proper chains/straps/joists and equipment to keep unit secure.

Intake (Marked as 'Air In' on unit):

- Intake ducts should be installed near the floor for optimum airflow (see figure 11). If space does not allow, then the inlet can be installed in the ceiling.
- Intake duct should be installed at least 6 ft. away from the outflow duct.
- Intake duct should be installed at opposite end of the room from the outflow duct(s) if in the same room.
- Diffusers are recommended to help distribute airflow evenly.

Outflow (Marked as 'Clean Air Out' on unit):

- Outflow(s) should be installed in the ceiling away from any other air inlet(s)
- Room diffusers are recommended to help distribute airflow evenly in the occupied space.

Ducting:

- If HEPA system is installed where inlet and outflow collars face down, metal elbows must be connected to both inlet and outflow collars.
- Each connection must be sealed with aluminum tape or mastic, including all vent connections.
- Installed duct runs should be as straight as possible (if the duct runs are too long, reduced CFM may result).
- If duct is exposed to unconditioned air, insulated flex duct is highly recommended.
- Externally insulated flex duct can also be used for noise reduction purposes.
- For best indoor air quality, do not use ductboard or fiberglass inside of ducts.

Example of Single Room Stand Alone System Installation

For single rooms where increased filtration is desired such as a dedicated 'smoking room'.

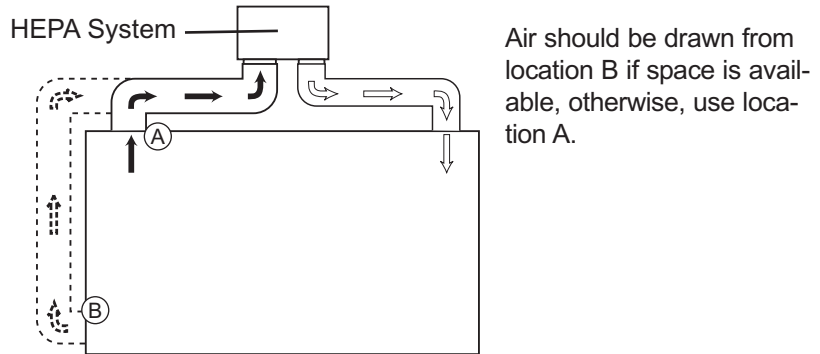


Figure 14.

Electricity:

- The unit must be plugged into a grounded 120V, 60Hz. outlet.

Required Materials for Installation of Unit:

Items for AWW-350

Flex or rigid duct 8" round & 6" round
(length as required)

Takeoffs One 8" & One 6"

Diffusers One 8" & One 6"

Items for AWW-675

Flex or rigid duct 10" round & 8" round
(length as required)

Takeoffs One 10" & One 8"

Diffusers One 10" & One 8"

Items for 8500 & 10000

Flex or rigid duct 10" x 12"
(length as required)

Takeoffs Two 10"x12"

All Models

Aluminum tape or mastic as required

Misc. hanging materials - field provided

NOTE: Be sure to review 'Rules for Safe Installation and Operation' on page 1 of this document before start-up of this unit.

Operation (8500, 10,000 & AWW Units with on/off toggle switch)

1. Make sure that the unit is plugged into a grounded outflow (120 Volt, 60 Hz).
2. For optimum performance, the HEPA system should operate when the indoor air handler/furnace blower is on.
3. Turn the unit on by rotating the variable speed dial clockwise. The unit starts in High speed, turn all the way clockwise for low speed.
For units with a n on/off toggle switch, press the switch to the 'on' (1) position.
4. To turn the unit off, rotate the variable speed dial counter-clockwise until you feel or hear it click into the 'off' position.
For units with an on/off toggle switch, press the switch to the 'off' (0) position.

Operation (AWW-350 & AWW-675)

1. Make sure that the unit is plugged into a grounded power source (120 Volt, 60 Hz).
2. For optimum performance, the HEPA system should operate with the indoor air handler/furnace blower on.
3. Turn the unit on by pressing the on/off button and the green power light will illuminate.
For units with a n on/off toggle switch, press the switch to the 'on' (1) position.
4. To turn the unit off, press the on/off button and the power indicator light will go out.
For units with an on/off toggle switch, press the switch to the 'off' (0) position.

Filter Light Indicators

Your HEPA system is equipped with an electronic filter timer. This timer monitors the life expectancy of each filter in the unit.

By default, the Pre-Filter, HEPA Filter and VOC Blanket lights will turn on when the unit is powered on.

5. If you have upgraded your VOC Blanket to a VOC Canister, you must activate the corresponding timer. Press and hold the VOC Canister button until the light comes on. The VOC Blanket light will automatically go off. The control panel will now monitor the life expectancy of the VOC Canister.
6. If you are switching your VOC Canister to a VOC Blanket, you must activate the corresponding timer. Press and hold the VOC Blanket button until the light comes on. The VOC Canister light will automatically go off. The control panel will now monitor the life expectancy of the VOC Blanket.

When a filter indicator light flashes, it is time to check and replace that filter.

7. Turn the unit off and see instructions for "filter removal" on pg. 14. to determine if filter replacement is needed. See 'Maintenance' on next page.
8. Once the filters have been checked or replaced, turn the unit back on and reset the control panel. To reset, press and hold the flashing filter button until the light is constant.

Maintenance

Proper care and maintenance of your HEPA system will ensure years of service. The unit must be turned off during service/maintenance or when filters are being changed.

It is recommended that gloves and a filtered breathing mask be worn during filter replacement.

	⚠ WARNING
	Electrical Shock Hazard.
	Can cause injury or death.
	Disconnect all electrical power supplies before servicing.

	Do not operate equipment without access panels in place
--	---

⚠ CAUTION
Risk of Sharp Edges Hazard.
Equipment sharp edges can cause injuries.
Avoid grasping equipment edges without protective gloves.

Filter Change Schedule

Note: Note: Failure to properly maintain your HEPA system will decrease the efficiency and air flow.

Pre-Filter: 3 to 4 months*

HEPA Filter: 2 to 5 years

Inner Carbon Filter: 6 months

Optional Carbon Canister: 12 months

* Foam pre-filters (AWW-350 & AWW-675) can be washed and reused

NOTE: Filter life is based on average air content. Some filters may need to be changed more often due to higher amounts of dust, humidity, or chemicals found in your ambient air. Additionally, people who are more sensitive to these airborne contaminants may desire more frequent filter changes.

Filter Changing Guidelines

Pre-Filter:

Dust and other large particles will collect on the pre-filter over time. The color of the filter will change as particulates build up on the pre-filter. Change the pre-filter when you can see the particulate build up start to clog up the pre-filter.

HEPA Filter:

As the HEPA filter captures particulates, it will darken over time. Replace the HEPA filter when it darkens to the level seen in example D.

A. New



B. Used



C. Used



D. Replace



Inner Carbon Filter:

The inner carbon filter will rarely look used. This filter captures odors and gasses, yet the filter's appearance will not change. When this filter has reached its maximum adsorbancy of odors and gasses, it will no longer work. Replace this filter when it no longer seems to capture odors, or every 3 months (12 months for optional Carbon Canister), which ever occurs first.

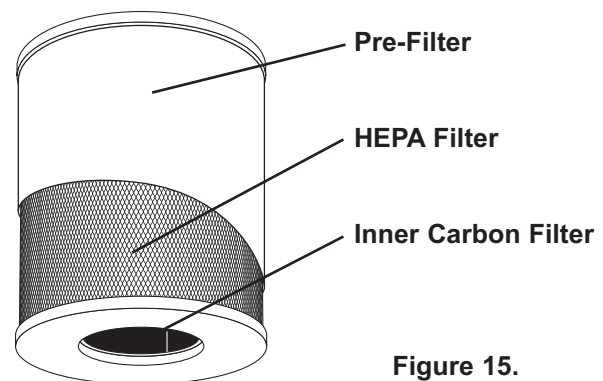


Figure 15.

Dealer Filter Change Instructions - AWW-350 & AWW-675



⚠ WARNING

Electrical Shock Hazard.

Can cause injury or death.

Disconnect all electrical power supplies before servicing.

Do not operate equipment without access panels in place

⚠ CAUTION

Risk of Sharp Edges Hazard.

Equipment sharp edges can cause injuries.

Avoid grasping equipment edges without protective gloves.

It is recommended that gloves and a filtered breathing mask be worn during filter replacement to avoid breathing particulates (dust, mold, pollen, etc.) captured on the filter that become airborne during the filter(s) changeout.

The old filters should be wrapped and sealed in plastic bags immediately upon removal from the unit to avoid distributing particles throughout the house during the process of disposal.

1. Accessing the filters

- Remove safety screw(s) from HEPA filter access panel.
- Unlatch the two retaining clips and lift off HEPA filter access panel.
- Bracing the unit so it does not move, turn the HEPA cartridge counter-clockwise and lift/pull out.

2. Pre-filter Replacement

- Pull the pre-filter up and off the unit.
NOTE: The pre-filter may contain contaminants, remove it slowly to avoid releasing particles back into the air.
- Foam pre-filters can be washed several times, wash by hand in warm water. Let it dry completely before placing it back onto the HEPA cartridge.
- If replacing the filter, remove plastic shrink wrap from the new pre-filter.
- Stretch the new/washed filter around the top of the HEPA cartridge and slide it down into place

3. Inner Carbon Filter Replacement

- Look inside the HEPA cartridge to locate the two ends of the inner carbon filter.
- Pull one end of the old inner carbon filter in and bend it into a loose roll so it can be removed.
- Remove the inner carbon filter from the HEPA cartridge.
- Remove plastic shrink wrap from the new inner

carbon filter.

- Unroll the inner carbon filter and roll it up in the opposite direction (this makes the filter follow a more contoured profile against the inner HEPA filter surfaces and helps keep it in place), place the rolled inner carbon filter inside the HEPA cartridge and gently unroll it until the ends 'butt' together and the filter is snug against the HEPA filter.

4. HEPA Filter Replacement

- If replacing the HEPA filter with a new filter, discard old HEPA filter and use new when replacing the HEPA filter into the unit.
- With each annual filter replacement kit, a new 'o' ring is provided. The old one is removed by pinching it between two fingers and pulling it off the collar on the blower deck.
- Discard old 'o' ring.
- Place the new 'o' ring onto the collar and slide it down to the base of the blower deck.

5. Optional Carbon Canister

- Remove old carbon canister (if installed) by pulling it out from the inside of the HEPA filter.
- If replacing an inner carbon filter with the carbon canister, remove inner carbon filter by following the steps a. to c. in section 3.
- Remove the plastic shrink wrap from the new carbon canister.
- Slide the carbon canister into the HEPA cartridge, smaller end first. The carbon canister should slide all the way in until the metal edges at the base meet the HEPA filter.
- Support the carbon canister with your fingers so it does not slide out when replacing the HEPA cartridge assembly into the unit.

7. Installing the HEPA Filter Cartridge

- With the filters changed or inspected, all 3 filters are ready to be placed back into the unit. Place the HEPA cartridge gently into the unit (if a carbon canister is being used, take care not to let it slide out as it is heavy and could damage the unit)
- When the HEPA cartridge is in place, brace the unit, press down and gently turn it clockwise to lock it into place. If too much force is used, the cartridge may be difficult to remove!
- Replace the HEPA filter access panel.
For AWW-350 & AWW-675, latch it with the two retaining clips.
- Re-install safety screw(s) into HEPA filter access panel.
- Plug the unit back into a power outlet and turn it on.



⚠ WARNING

Electrical Shock Hazard.

Can cause injury or death.

Disconnect all electrical power supplies before servicing.

Do not operate equipment without access panels in place

⚠ CAUTION

Risk of Sharp Edges Hazard.

Equipment sharp edges can cause injuries.

Avoid grasping equipment edges without protective gloves.

It is recommended that gloves and a filtered breathing mask be worn during filter replacement to avoid breathing particulates (dust, mold, pollen, etc.) captured on the filter that become airborne during the filter(s) changeout.

The old filters should be wrapped and sealed in plastic bags immediately upon removal from the unit to avoid distributing particles throughout the house during the process of disposal.

1. Accessing the filters

- Remove safety screw(s) from HEPA filter access panel.
- Pull the HEPA filter access panel up by the finger tabs and lift out to remove.
- Lift the filter retaining rod out from the two clips holding it into position (some force may be necessary as it is a tight fit to ensure complete seal), ensure that pressure is kept on the filter cap as it is the only thing keeping the HEPA cartridge in place.
- With the retaining rod removed, pull the HEPA cartridge and filter cap out of the unit.

2. Pre-filter Replacement

- Locate the clips holding the pre-filter in place. Remove them and pull the pre-filter off.
NOTE: The pre-filter may contain contaminants, remove it slowly to avoid releasing particles back into the air.
- Remove plastic shrink wrap from the new pre-filter.
- Wrap the new pre-filter around the HEPA filter, making sure that the ends overlap.
- With the clips provided with the new pre-filter, secure the pre-filter ends together tightly so it keeps the pre-filter secure against to the HEPA filter.
- Be sure that all clips are in place.

3. Inner Carbon Filter Replacement

- Look inside the HEPA cartridge to locate the two ends of the inner carbon filter.
- Pull one end of the old inner carbon filter in and bend it into a loose roll so it can be removed.
- Remove the inner carbon filter from the HEPA cartridge.
- Remove plastic shrink wrap from the new inner carbon filter.
- Unroll the inner carbon filter and roll it up in the opposite direction (this makes the filter follow a more contoured profile against the inner HEPA filter surfaces and helps keep it in place), place the rolled inner carbon filter inside the HEPA cartridge and gently unroll it until the ends 'butt' together and the filter is snug against the HEPA filter screen.

4. HEPA Filter Replacement

- If replacing the HEPA filter with a new filter, discard old HEPA filter and use new when replacing the HEPA filter into the unit.

5. Optional Carbon Canister

- Remove old carbon canister (if installed) by pulling it out from the inside of the HEPA filter.
- If replacing an inner carbon filter with the carbon canister, remove inner carbon filter by following the steps a. to c. in section 3.
- Remove the plastic shrink wrap from the new carbon canister.
- Slide the carbon canister into the HEPA cartridge. The carbon canister should slide all the way in meeting the edges of the HEPA cartridge evenly on both ends.
- Keep the HEPA cartridge horizontal and support it with your fingers to keep it from sliding out when replacing the HEPA cartridge back into the unit.

7. Installing the HEPA Filter Cartridge

- With the filters changed or inspected, all 3 filters are ready to be placed back into the unit. Place the HEPA cartridge gently into the unit (if a carbon canister is being used, take care not to let it slide out as it is heavy and could damage the unit)
- When the HEPA cartridge is in place, place the filter cap onto the HEPA cartridge and replace the filter retaining rod by sliding it into its two clips. (some force may be necessary as it is a tight fit to ensure complete seal)
- Replace the HEPA filter access panel.
- Re-install safety screw(s) into HEPA filter access panel.
- Plug the unit back into a power outflow and turn it on.

Dealer Motor Assembly Replacement Instructions

! WARNING

Electrical Shock Hazard.

Can cause injury or death.

Disconnect all electrical power supplies before servicing.

Do not operate equipment without access panels in place

Do not use this fan with any solid-state speed control device



! CAUTION

Risk of Sharp Edges Hazard.

Equipment sharp edges can cause injuries.

Avoid grasping equipment edges without protective gloves.

1. Accessing the motor assembly

- Turn the unit off and unplug it from any electrical source before opening the cabinet.
- Remove the safety screw(s) from the motor section access panel.
- Lift the door up by the finger tabs and pull out to remove it from the unit.

2. Removing the old motor assembly

- Disconnect all four motor wires from switch, ground post and capacitor.
- Disconnect the two white wires from the capacitor.
- Separate the motor from the motor mount by removing the four screws found in figure 19.
- Slide the motor out from under the motor mount to remove it from the unit.

3. Installing the new motor assembly

- Slide the new motor into the motor mount making sure that the wires go through the smaller hole off-set from the center of the bracket.
- Secure the new motor to the motor mount with the four screws removed in step 2c.
- Connect the wires as follows:
 - Blue wire from motor to the on/off switch.
 - Yellow/green wire from motor to the ground post.
 - Brown wire from the motor to a capacitor post.
 - Black wire from the motor to the other capacitor post.
 - White wire from the on/off switch to the capacitor via the black wire piggyback post.
 - White wire from the power cord to the capacitor via the other white wire's piggyback post.

4. Closing the unit

- Replace the motor section access panel and secure it with the screws removed in step 1b.
- Plug the unit into it's electrical source and turn it on.



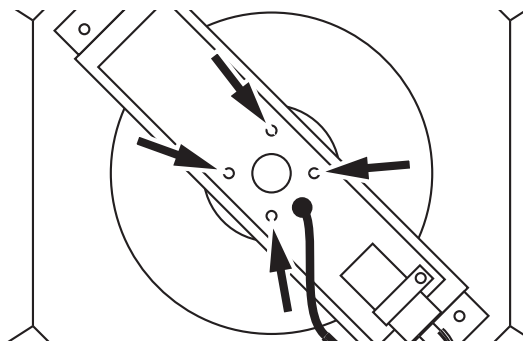


Figure 16.

Electrical Diagram (AWW-350 & AWW-675)

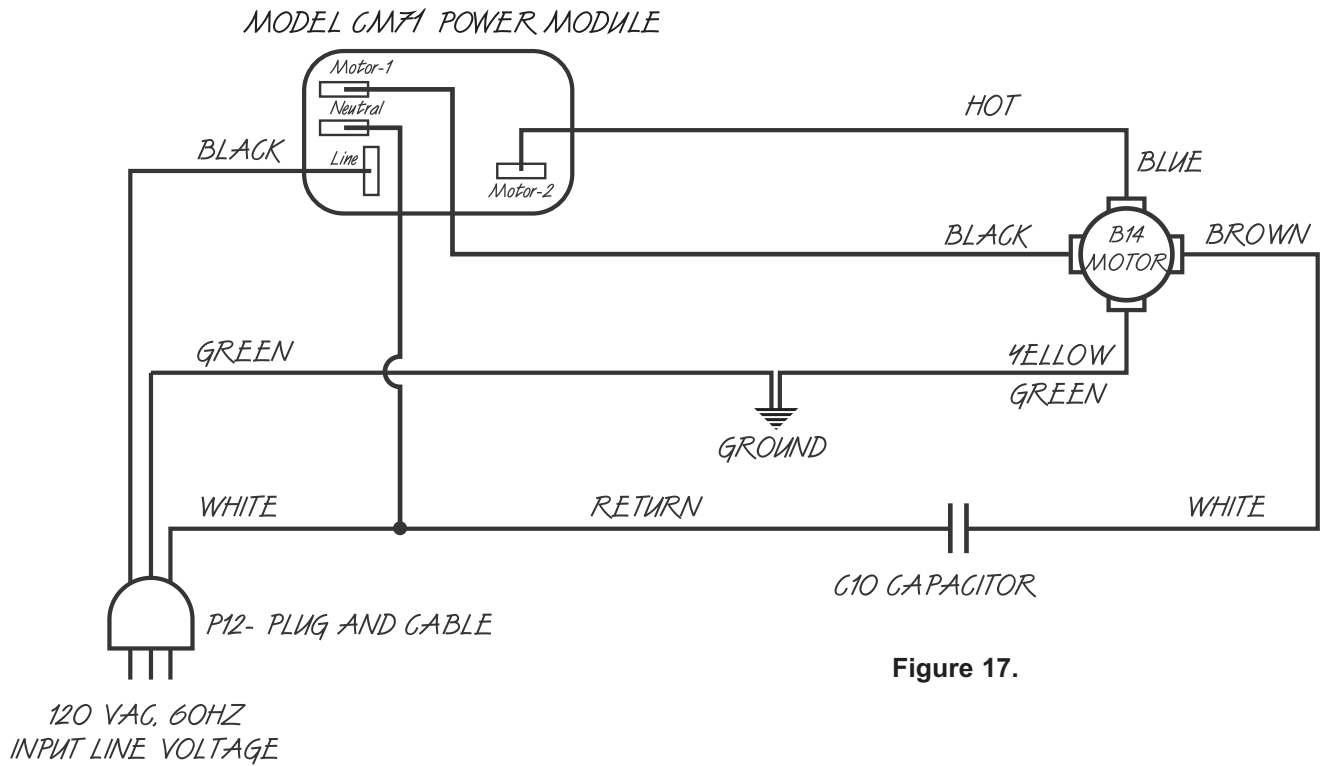

Electrical Diagram (AWW-350 & AWW-675 with on/off toggle switch)

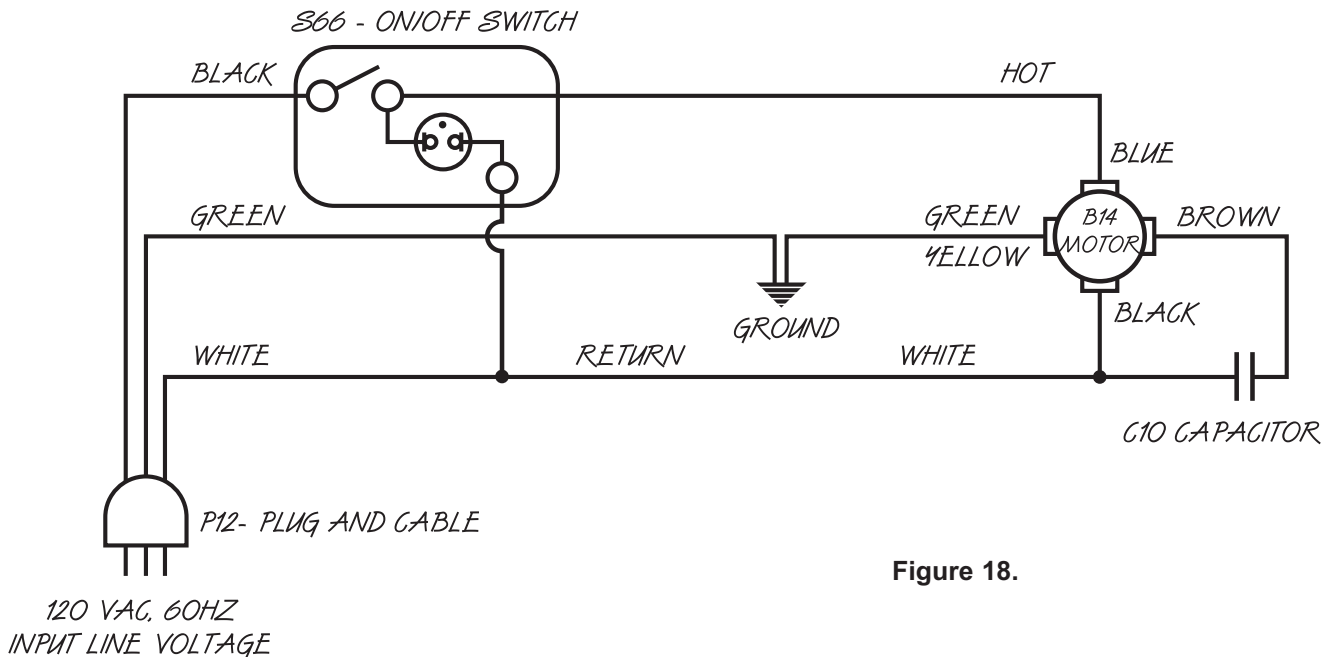

Electrical Diagram (8500 & 10,000)

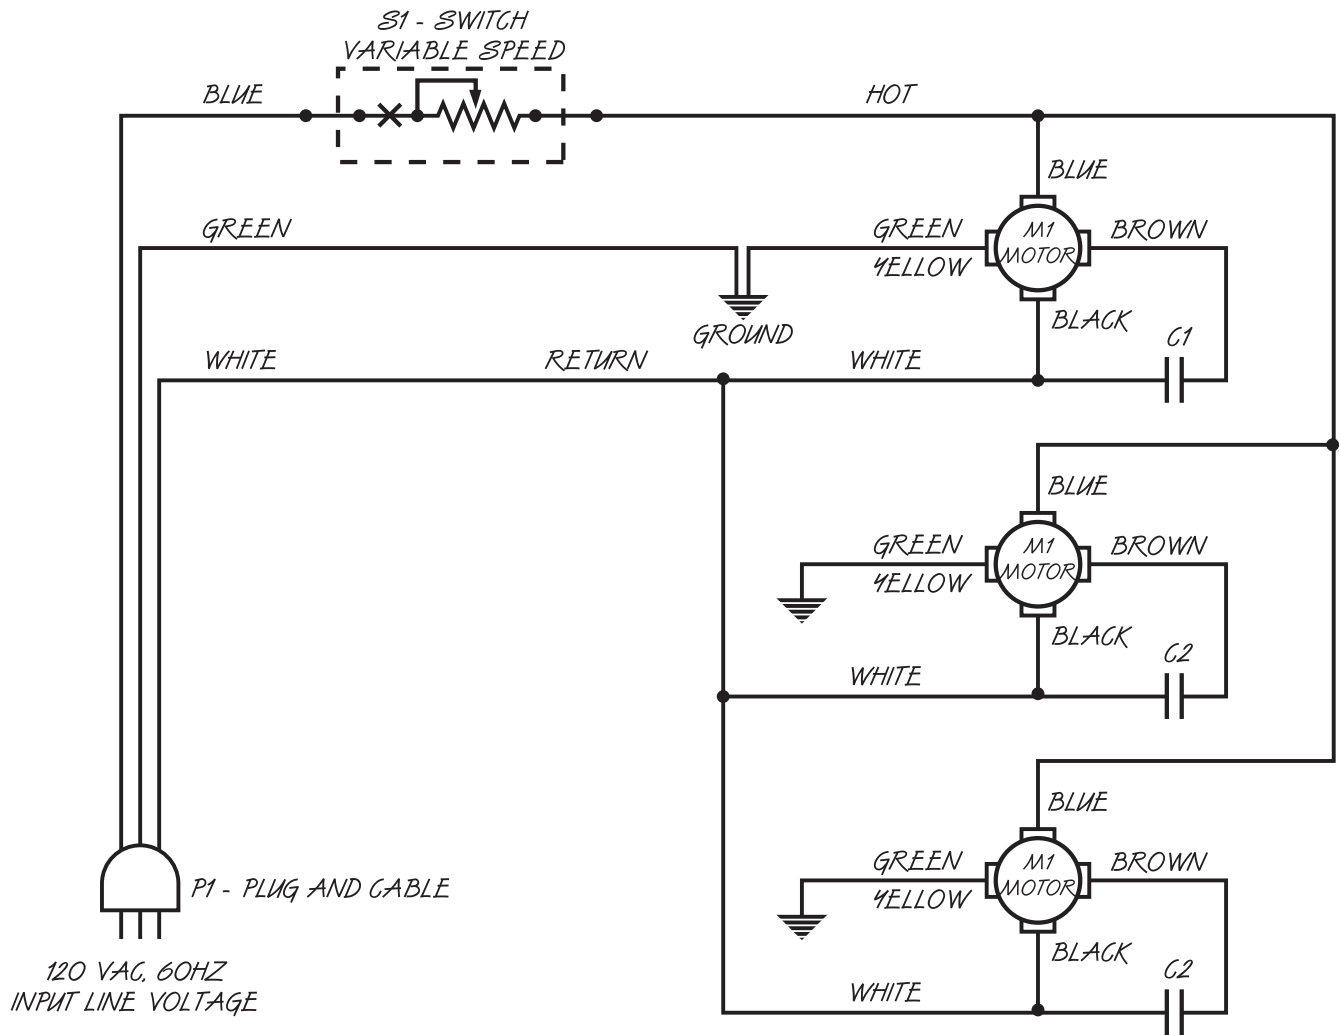


Figure 19.

Replacement Parts

Replacement Parts for AWW-350 & AWW-675 (Qty.)	Canadian	U.S.	International
Standard Annual Filter Kit (1 Pre-filter, 2 Carbon)	94004061	94014061	94014061
Plus Annual Filter Kit (1 Pre-filter, 1 VOC Canister)	94004181	94014181	94014181
HEPA, Easy Twist Filter	90004437	90014437	90014437
Motor Assembly - AWW-350 (120V)	99001200	99011200	99011200
Motor Assembly - AWW-350 (220V)	99002800	99012800	99012800
Motor Assembly - AWW-675 (120V)	99002400	99012400	99012400
Motor Assembly - AWW-675 (220V)	99003000	99013000	99013000

Replacement Parts for 8500 & 10,000 (Qty.)	Canadian	U.S.	International
Standard Annual Filter Kit (9 Pre-filters, 6 Carbon)	94006221	94016221	94016221
Plus Annual Filter Kit (9 Pre-filters, 3 VOC Canisters)	94006231	94016231	94016231
HEPA, Moulded Filter (1)	90006406	90016406	90016406
Motor Assembly - 8500 (120V) (1)	99002600	99012600	99012600
Motor Assembly - 8500 (220V) (1)	99003200	99013200	99013200
Motor Assembly - 10,000 (120V) (1)	99002700	99012700	99012700
Motor Assembly - 10,000 (220V) (1)	99003300	99013300	99013300

Use this unit only in the manner intended by the manufacturer. If you have questions, contact Amaircare.

Contact your local Amaircare dealer to order replacement parts.

For the Amaircare dealer near you, dial 1-800-268-7732 or visit us at www.amaircare.com