

photomultiplier HV Base

HV3020CN series data sheet (provisional)

1 description

The HV3020CN is a compact photomultiplier negative polarity HV Base operating from a low voltage supply (+5 to +15 V). It incorporates a CW multiplier that directly supplies voltages to the photomultiplier electrodes. The HV Base is suitable for most 11-stage, 30 mm, hardpin photomultipliers for applications requiring up to -2000 volts and ac or dc coupling.

The unit is housed in a screened cylindrical metal enclosure of the same diameter as the photomultiplier (30 mm). Threaded mounting bushes are provided. The anode output is via a 0.5 m length of shielded RG174U cable and can be ac or dc coupled.

The photomultiplier operating voltage is set by using any one of three programming options as shown in section 8. The anode is at ground potential in the HV3020CN but for applications requiring grounded cathode operation, a positive polarity version is available, which is the HV3020CP.

2 applications

The HV3020CN is designed for use in the following operating modes:

- current measurement (analogue)
- pulsed light
- photon counting

3 features

- compact
- no high voltage cables
- low noise
- dc linearity limited only by photomultiplier performance
- significantly less power and heat dissipation than a conventional HV power supply and resistive divider

4 specifications

at HV = 1000V	unit	min	typ	max
supply voltage	V	+5		+15
control voltage	V	+0.1		+2.0
output high voltage	V	-100		-2000
output (anode) current	µA			200*
supply current at +5 V; for anode current = 0 µA	mA		1.5	
for anode current = 100 µA	mA		6.5	
supply current at +12 V: for anode current = 0 µA	mA		1	
for anode current = 100 µA	mA		5	
line regulation	%/V			0.01
anode load regulation: for anode current 0 - 100 µA	%			0.01
temperature coefficient	%/°C			0.02
switch-on time (10-90%)	s			<0.1
switch-off time (10-90%)	s			<30
anode ripple: for anode load = 10 kΩ 22pF	mV(p-p)		2	
weight	g		60	


*subject to photomultiplier limit



5 ratings


	unit	min	typ	max
supply voltage	V	4.5		18
control voltage	V	0		3
temperature (operating): at 93% RH, non-condensing	°C	-40		60

6 schematic diagram

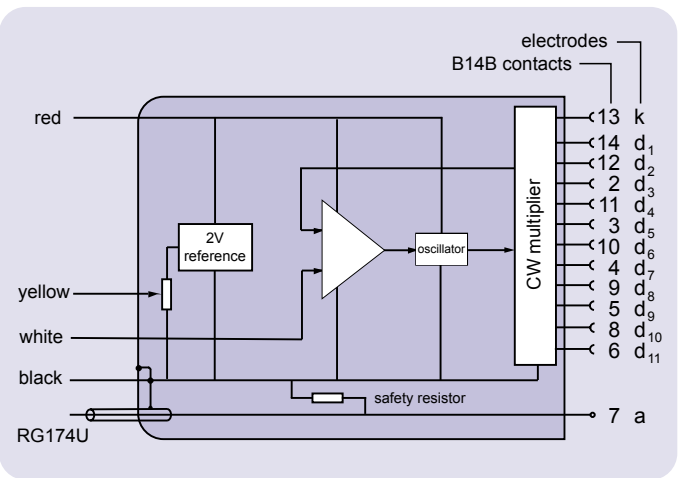




7 voltage distribution

The required photomultiplier pin configuration for this HV Base and a B14B socket is given below. The voltage distribution for an applied hv of V volts is shown in the table. An anode load resistor is not included but a 10MΩ safety resistor is connected between anode and ground to ensure that the output is kept at 0V.

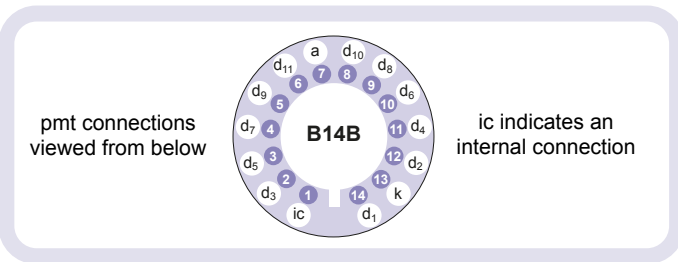

k	d ₁	d ₂	...	d ₁₀	d ₁₁	a
2/13V	1/13V	1/13V	1/13V	

8 programming options

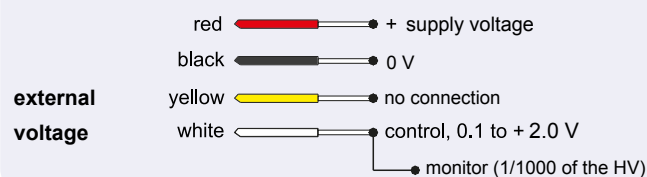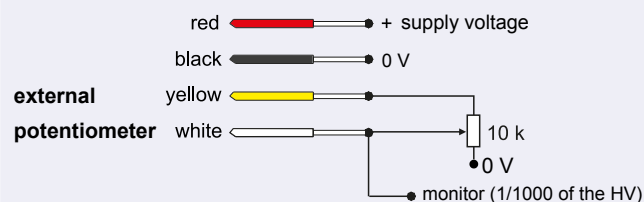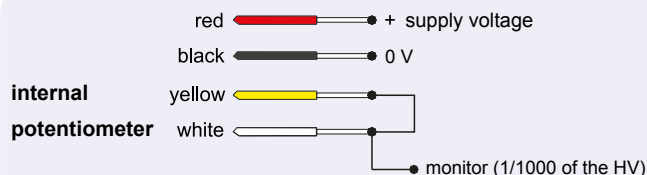


9 dimensions and photomultiplier options

The HV3020CN HV Base can be used with the following photomultipliers:

9107B, 9108B, 9124B, 9125B, 9128B, 9129B, 9130/100B, 9130/350B, 9131/100B, 9136B, 9406B, 9407B, 9408B, 9798B, 9828B, 9878B, 9888B 9900B and 9924B

all dimensions in mm

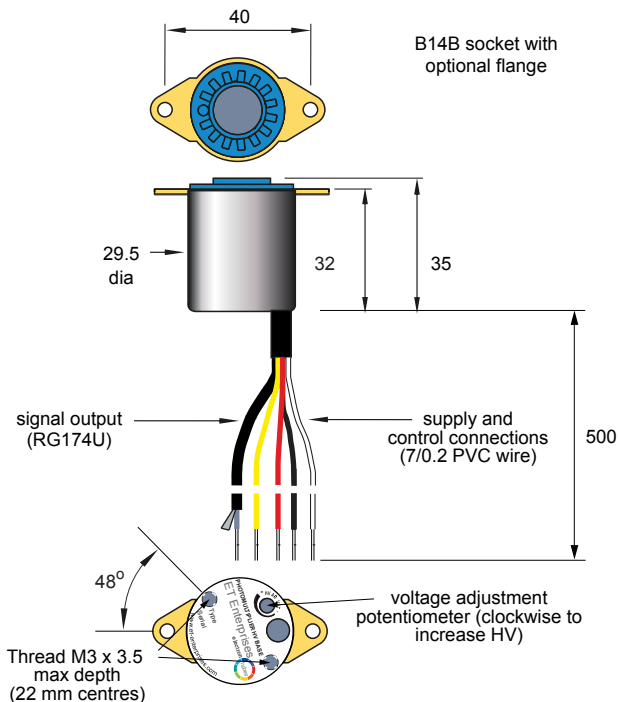

10 linearity


Linearity performance is dependent on the particular photomultiplier being used with the HV Base. It is measured as the % deviation in either peak pulse current, or average current, depending on the mode of operation.

Please refer to the corresponding photomultiplier data sheet for further information.


11 output configurations

The pmt anode in the HV3020CN HV Base is internally grounded via a 10 M Ω safety resistor. Depending on the mode of operation, the output circuitry should be configured externally as shown in the example configurations below. For dc and scintillation applications R_L is typically 100 k Ω , but for fast pulse applications R_L would normally be 50 Ω . In the latter case an internal 50 Ω matching resistor can be fitted (to special order).


a) dc current output



b) dc voltage output



c) ac coupled output



C = external coupling capacitor
 R_L = external load resistor

12 ordering information

item	ordering code
without flange	HV3020CN
with flange	HV3020CNF

13 warning

High voltages generated by these products present an electrical shock hazard and appropriate precautions must be taken. Installation must be by qualified personnel. All units are despatched with the internal potentiometer set to zero.

Do not operate outside the quoted ratings of the HV3020CN or those of the photomultiplier. This may result in loss of performance, permanent damage, or both.